

#### **Product data sheet**

## Angle valve with soft-pump function Series 290, DN 50 (ID 2") Ordering No. 29034-KA11-0003

#### **Description**

Flange ISO-KF 50

Actuator Pneumatic, single acting with closing spring

- without solenoid valve

- without position indicator

Feedthrough - Main **Bellows** 

> - Soft-pump Shaft feedthrough

**Technical data** 

 $< 1 \cdot 10^{-9} \, \text{mbar Is}^{-1}$ Leak rate - Valve Body

 $< 1 \cdot 10^{-9} \text{ mbar ls}^{-1}$ Valve seat

1 · 10<sup>-8</sup> mbar to 1.2 bar (abs) Pressure range

Differential pressure on the plate In opening direction ≤ 1.2 bar

 In closing direction ≤ 1.2 bar

Differential pressure at opening ≤ 1 bar  $80 \, \text{ls}^{-1}$ Conductance (molecular flow) Cycles until first service 2 million

(Tmax 80 °C, under clean

conditions)

Temperature ≤ 150 °C Valve Body (Maximum values: depending Actuator ≤ 120 °C

on operating conditions and

sealing materials)

Material - Valve body Aluminum (EN AW-6082)

> - Actuator Aluminum

- Plate AISI 316L (1.4435 ESU)

- Bellows AISI 316L (1.4404, 1.4435), AISI 316 Ti (1.4571)

Seal - Bonnet O-ring FKM (Viton®) FKM (Viton®) - Plate O-ring

FKM (Viton®) - Feedthrough O-ring FKM (Viton®) Actuator O-ring

Mounting position any

0.047 I / 0.0017 ft<sup>3</sup> Volume of pneumatic actuator

4 - 8 bar / 58 - 116 psi Compressed air

min. - max. overpressure

Compressed air connection M5 female (10-32 UNF suitable)

Actuation time - Closing ≤ 0.65 sec.

Weight 1.90 kg / 4.19 lbs

Created by: WARO	Release date: 25.08.2014	1/2
Modified by:	Release date:	765372EA



### **Product data sheet**

# Angle valve with soft-pump function Series 290, DN 50 (ID 2") Ordering No. 29034-KA11-0003

Behavior in case of compressed air pressure drop

Valve closed valve remains closed and leaktight


Valve openedDuring actuationvalve closes leaktight

Behavior in case of power failure

Valve closed
Valve remains closed and leaktight
Valve opened
depending on customer installation

During actuation depending on customer installation

### conductance diagram

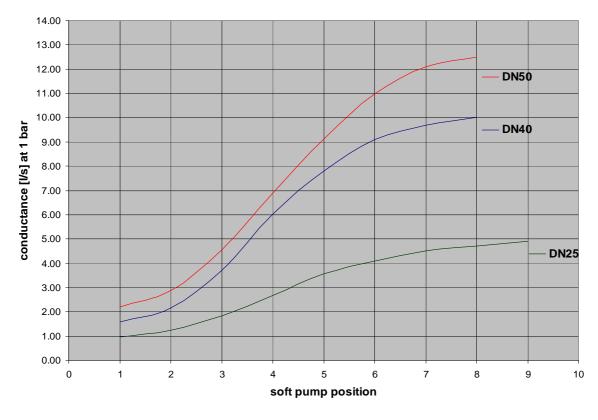

Created by: WARO	Release date: 25.08.2014	2/2
Modified by:	Release date:	765372EA