

Butterfly Pressure Control Valve with RS485 interface


Series 613 DN 25-320 mm (I.D. 1" - 12")

This manual is valid for the valve ordering number(s):

613GH -	(2 sensor inputs / analog outputs)
613AH -	(2 sensor inputs / analog outputs / $\pm 15V$ SPS)
613HH -	(2 sensor inputs / analog outputs / PFO)
613CH -	(2 sensor inputs / analog outputs / $\pm 15V$ SPS / PFO)

SPS = Sensor Power Supply PFO = Power Failure Option

configured with firmware: **F01.0C.28.xx**

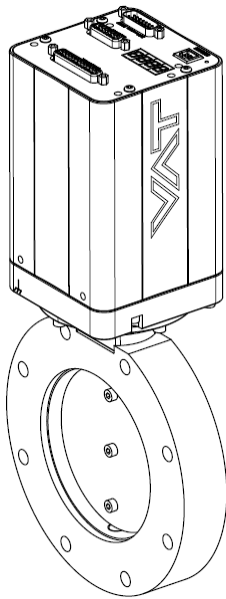

Sample picture

Imprint

Manufacturer VAT Vakuumventile AG, CH-9469 Haag, Switzerland

Website: www.vatvalve.com
Phone: +41 81 771 61 61
Fax: +41 81 771 48 30
Email: CH@vatvalve.com

Publisher VAT Vakuumventile AG, CH-9469 Haag, Switzerland

Editor VAT Vakuumventile AG, CH-9469 Haag, Switzerland

Print VAT Vakuumventile AG, CH-9469 Haag, Switzerland

Copyright © VAT Vakuumventile AG 2022

No part of these instructions may be reproduced in any way (photocopies, microfilms or any other reproduction processes) nor may it be manipulated with electronic systems, duplicated or distributed without written permission from VAT. Offenders are liable to pay damages.

The original VAT firmware and updated state of the art versions of the VAT firmware are intended for use with VAT products. The VAT firmware contains a limited, time unlimited user license. The VAT firmware may not be used for purposes other than those intended nor is it permitted to make copies of the VAT firmware. In particular, it is strictly forbidden to give copies of the VAT firmware to other people.

The use of trade names, brand names, trademarks, etc. in these Instructions does not entitle third parties to consider these names to be unprotected and to use them freely. This is in accordance with the meaning of the laws and acts covering brand names and trademarks.

Contents

1	Description of product.....	6
1.1	Identification of product	6
1.2	Firmware	6
1.3	Use of product	6
1.4	Used abbreviations.....	6
1.5	Related documents.....	6
1.6	Important information.....	6
1.7	Technical data	7
1.7.1	Control and actuating unit	7
1.7.2	Valve unit	7
2	Safety	8
2.1	Compulsory reading material.....	8
2.2	Danger levels	8
2.3	Personnel qualifications.....	9
2.4	Safety labels.....	9
3	Design and Function.....	10
3.1	Design	10
3.2	Function.....	10
3.2.1	Pressure control system overview and function	11
3.2.2	Principle of a pressure control system	12
4	Installation	13
4.1	Initial procedure	13
4.2	Unpacking	14
4.3	Installation into the system	15
4.3.1	Installation Hints.....	16
4.3.2	Installation space condition	16
4.3.3	Admissible forces.....	17
4.3.4	Admissible forces at controller	18
4.3.5	Tightening torque DNs 40 – 50mm	19
4.3.6	Tightening torque DNs 63 – 100mm	20
4.4	Connection overview	21
4.5	Power-, Ground- and Sensor Connection.....	22
4.5.1	Connection cable recommendations	22
4.5.2	Ground connection.....	23
4.5.3	Power and Sensor supply concepts.....	24
4.5.4	Drive Power Enabled Switch, Safety Mode.....	28
4.6	Power Up.....	29
4.7	Power Down, Power Failure Option	29
4.7.1	Power down behavior in case of power failure.....	29
4.7.2	Power Fail Option	29
4.8	Service Port, CPA software	30
4.8.1	How to start.....	30
4.8.2	Update	31
4.9	Display Information.....	32
4.9.1	Power up.....	32
4.9.2	Operation	33
4.9.3	Error.....	33
4.10	System Settings and States	34
4.10.1	Identification	34
4.10.2	Statistics.....	35
4.10.3	Warning/Error.....	36
4.10.4	Service.....	36
4.11	Valve Settings and States	37
4.11.1	States.....	37
4.11.2	Homing.....	37
4.11.3	Cycle Counter	38
4.11.4	Position Restriction	38


4.11.5	Position Adaption	39
4.12	Interface RS232/485.....	40
4.12.1	Operation Mode RS232/ RS485.....	40
4.12.2	RS232	40
4.12.3	RS485	41
4.12.4	Command Set	42
4.12.5	Position and Pressure Units.....	46
4.12.6	Compound Commands	47
4.12.7	Parameter Overview.....	50
4.12.8	Compatible Command Sets	60
4.12.9	Digital IO on the RS interface connector	76
4.13	Pressure Sensor.....	79
4.13.1	Mechanical connection requirements	79
4.13.2	Configuration.....	80
4.13.3	Crossover (2 sensor operation mode).....	82
4.13.4	Zero Adjust.....	83
4.13.5	Logarithmic Pressure	84
4.14	Power Connector Digital IO	85
4.14.1	Digital Input	85
4.14.2	Digital Output.....	86
5	Operation.....	87
5.1	Access Mode	88
5.1.1	Overview	88
5.1.2	Remote and Locked operation	88
5.1.3	Local operation.....	88
5.2	Control Mode	89
5.2.1	View	90
5.3	Pressure Control.....	91
5.3.1	Controller units	91
5.3.2	Control algorithm	92
5.3.3	Adaptive algorithm.....	94
5.3.4	PI algorithm	105
5.3.5	Pressure Ramp	111
5.3.6	Profile Ramp	114
5.3.7	Automated Controller Selector	117
5.3.8	Control Position Restriction	118
5.3.9	Store Control Parameter Volatile.....	118
5.4	Position Control	119
5.4.1	Parameter	119
5.4.2	Position Ramp.....	119
5.5	Operation under increased temperature	120
6	Trouble shooting	121
6.1	Warnings	121
6.2	Errors.....	123
6.2.1	Error Recovery	123
6.2.2	Error Bitmap	123
6.2.3	Error Number.....	124
6.2.4	Error Code.....	124
6.3	Troubleshooting List	126
7	Maintenance.....	127
7.1	Maintenance intervals.....	127
7.2	Maintenance procedures	128
7.2.1	Replacement of shaft feedthrough seals and valve cleaning	129
7.2.2	Replacement of Option board	132
8	Repairs	137
8.1	FPR Service.....	137
9	Dismounting and Storage	138
9.1	Dismounting.....	138

9.2	Storage.....	139
10	Packaging and Transport	140
10.1	Packaging.....	141
10.2	Transport.....	141
11	Disposal	142
12	Spare parts	143
12.1	ISO-KF for DN 25 – 50 mm	144
12.1.1	Drawing ISO-KF.....	144
12.1.2	ISO-KF valve unit - aluminum blank, without heating.....	145
12.1.3	ISO-KF valve unit – stainless steel, without heating	145
12.1.4	Seals and grease	145
12.2	ISO-F for DN 63 – 320 mm.....	146
12.2.1	Drawing ISO-F	146
12.2.2	ISO-F valve unit - aluminum blank, without heating	147
12.2.3	ISO-F valve unit – stainless steel, without heating.....	147
12.2.4	Seals and grease	148
12.3	Control unit and Accessories.....	148
12.3.1	Control and actuating unit	148
12.3.2	Accessories.....	148
12.3.3	Centering ring with VITON ® o-ring	149

1 Description of product

1.1 Identification of product

The fabrication number and order number are fixed on the product directly or by means of an identification plate.

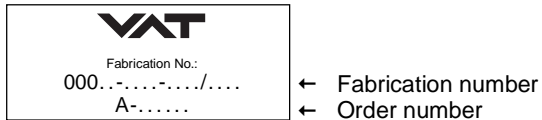

1.2 Firmware

Please look up the firmware version in the CPA or read it from the display at start up.
 Location: CPA/Parameters: System.Identification.Firmware

1.3 Use of product

This product is a Butterfly control valve for downstream pressure control in vacuum systems.
 Use product for clean and dry vacuum applications only. Other applications are only allowed with the written permission of VAT.

1.4 Used abbreviations

Abbreviation	Description
CPA	Control Performance Analyzer
PFO	Power Failure Option
SFS	Sensor Full Scale
SPS	Sensor Power Supply
ADC	Analog-to-digital converter

1.5 Related documents

- Product Data Sheet
- Dimensional Drawing
- IOMI Heating device (if valve with heater)

1.6 Important information



This symbol points to a very important statement that requires particular attention.

Example:



Refer to chapter: «Technical data» for detailed information.

1.7 Technical data

1.7.1 Control and actuating unit



See product data sheet.

1.7.2 Valve unit



See product data sheet.

2 Safety

2.1 Compulsory reading material

Read this chapter prior to performing any work with or on the product. It contains important information that is significant for your own personal safety. This chapter must have been read and understood by all persons who perform any kind of work with or on the product during any stage of its serviceable life.

	NOTICE
	<p>Lack of knowledge Failing to read this manual may result in property damage. Firstly, read manual.</p>



These Installation, Operating & Maintenance Instructions are an integral part of a comprehensive documentation belonging to a complete technical system. They must be stored together with the other documentation and accessible for anybody who is authorized to work with the system at any time.

2.2 Danger levels



	⚠ DANGER
	<p>High risk Indicates a hazardous situation which, if not avoided, will result in death or serious injury.</p>

	⚠ WARNING
	<p>Medium risk Indicates a hazardous situation which, if not avoided, could result in death or serious injury.</p>


	⚠ CAUTION
	<p>Low risk Indicates a hazardous situation which, if not avoided, may result in minor or moderate injury.</p>

	NOTICE
	<p>Command Indicates a hazardous situation which, if not avoided, may result in property damage.</p>

2.3 Personnel qualifications


	 WARNING
	Unqualified personnel Inappropriate handling may cause serious injury or property damage. Only qualified personnel are allowed to carry out the described work.

2.4 Safety labels

Label	Part No.	Location on valve
	T-9001-156	On protective foil covering of valve opening

3 Design and Function

3.1 Design

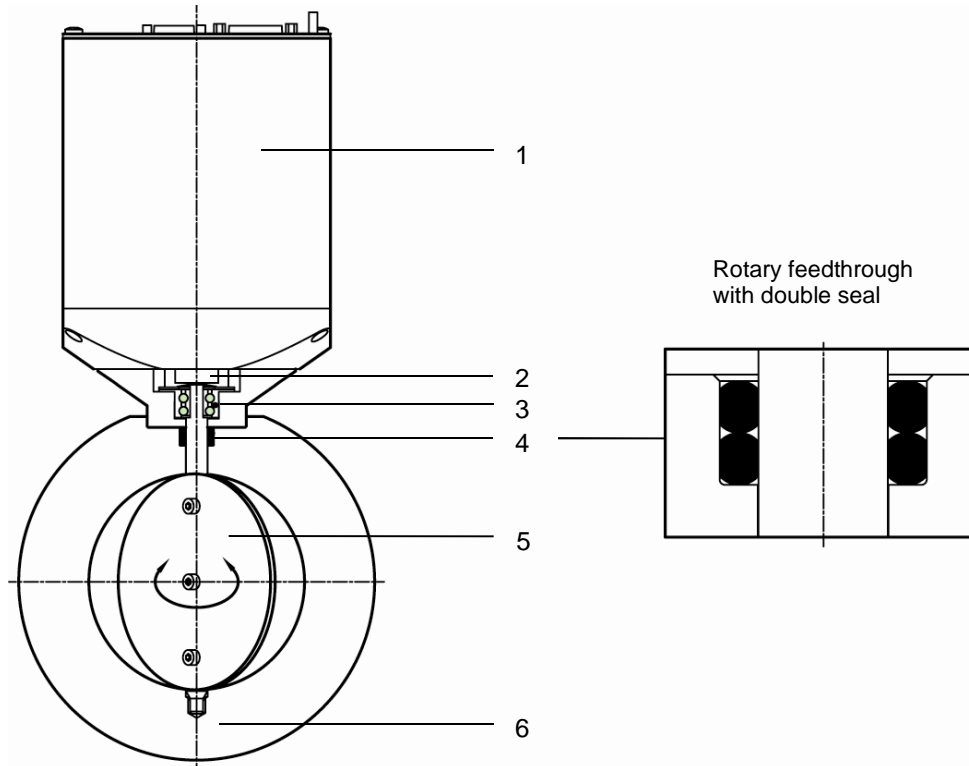


- | | | | |
|---|-----------------------|---|-------------|
| 1 | Integrated controller | 4 | Double seal |
| 2 | Coupling | 5 | Plate |
| 3 | Bearing | 6 | Valve body |

3.2 Function

The valve plate (5) acts as a throttling element and varies the conductance of the valve opening. The integrated controller (1) calculates the required plate position to achieve the setpoint pressure. See also principle drawing on chapter: «Connection Overview». Actuation is handled by a stepper motor with an encoder monitoring the position. This principle ensures very fast and accurate process pressure control even in demanding contaminating processes.

3.2.1 Pressure control system overview and function

Vacuum pressures are always absolute pressures unless explicitly specified as pressure differences.

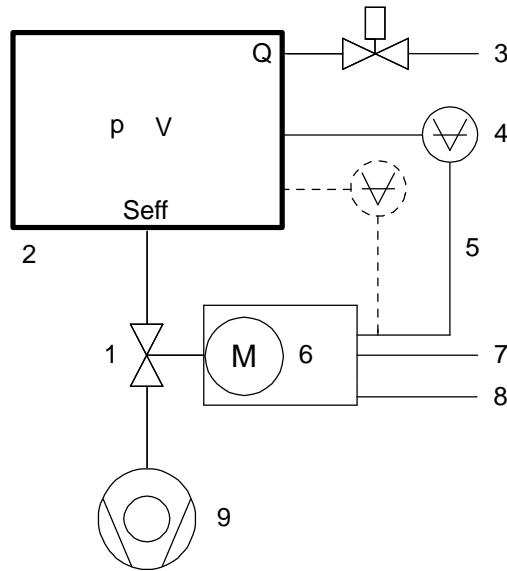

- 1 Valve
- 2 Process chamber
- 3 Gas inlet
- 4 Pressure sensor(s)
- 5 Sensor cable
- 6 Controller and actuator
- 7 Cable to remote control unit
- 8 Cable to power supply
- 9 HV Pump

$S_{eff} = Q / p$

S_{eff} effective pump speed ($l s^{-1}$)

Q Gas flow (mbar)

p Pressure (mbar)

or units used in USA

$S_{eff} = 12.7 \cdot Q / p$

S_{eff} effective pump speed ($l s^{-1}$)

Q Gas flow (sccm)

p Pressure (mTorr)

Example: Downstream control

3.2.1.1 Way of operation

The controller compares the actual pressure in the process chamber given by the pressure sensor with the preset pressure. The controller uses the difference between actual and set pressure to calculate the correct position of the control valve. The controller drives the control valve into the correct position and the actual pressure again equals the set pressure.

This control operation is performed continuously. Pressure changes in the process chamber due to leaks, desorption, and gas flow, reaction products, variations in pumping speed etc. are always corrected at once.

3.2.1.2 Pressure control


In a vacuum system which is pumped and into which gas is admitted at the same time, the pressure can be controlled in two ways:

1. Downstream control (standard):
The pressure is controlled by changing the conductance of a control valve between pump and process chamber. This changes the effective pumping speed at the process chamber. Pressure and gas flow can be independently controlled over a wide range.
2. Upstream control:
The pressure is controlled by changing the gas flow into the process chamber, while the pumping speed remains constant.

3.2.1.3 Adaptive controller (standard)

A controller adapting itself to changes in pressure, gas flow and pumping speed without any manual adjustments. This allows for a completely automatic operation of the system.


3.2.2 Principle of a pressure control system

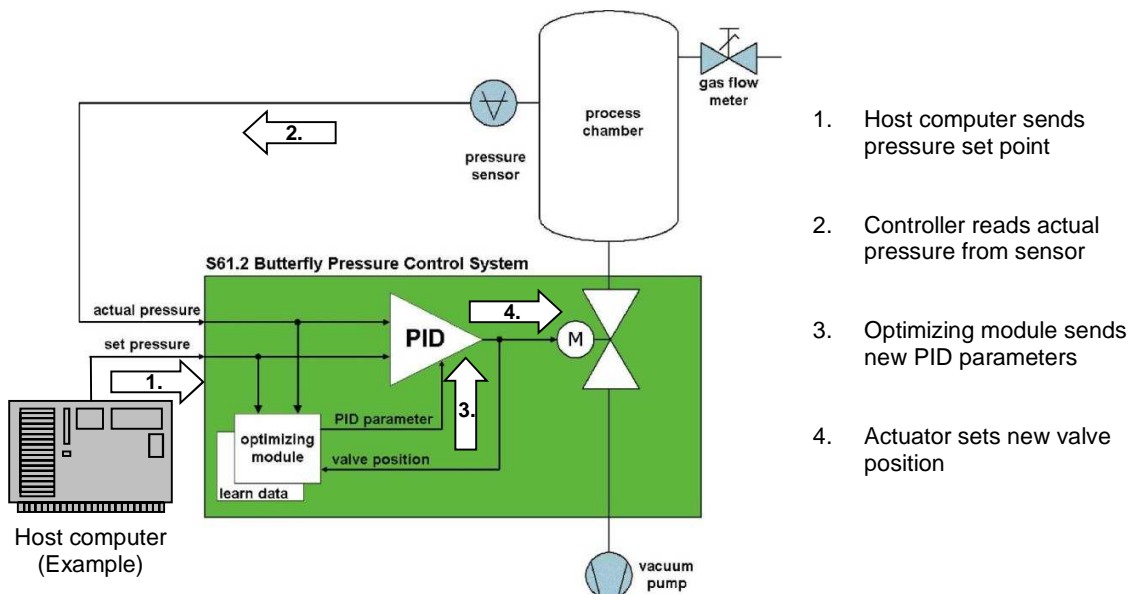


4 Installation


	⚠ WARNING
	<p>Unqualified personnel Inappropriate handling may cause serious injury or property damage. Only qualified personnel are allowed to carry out the described work.</p>

4.1 Initial procedure

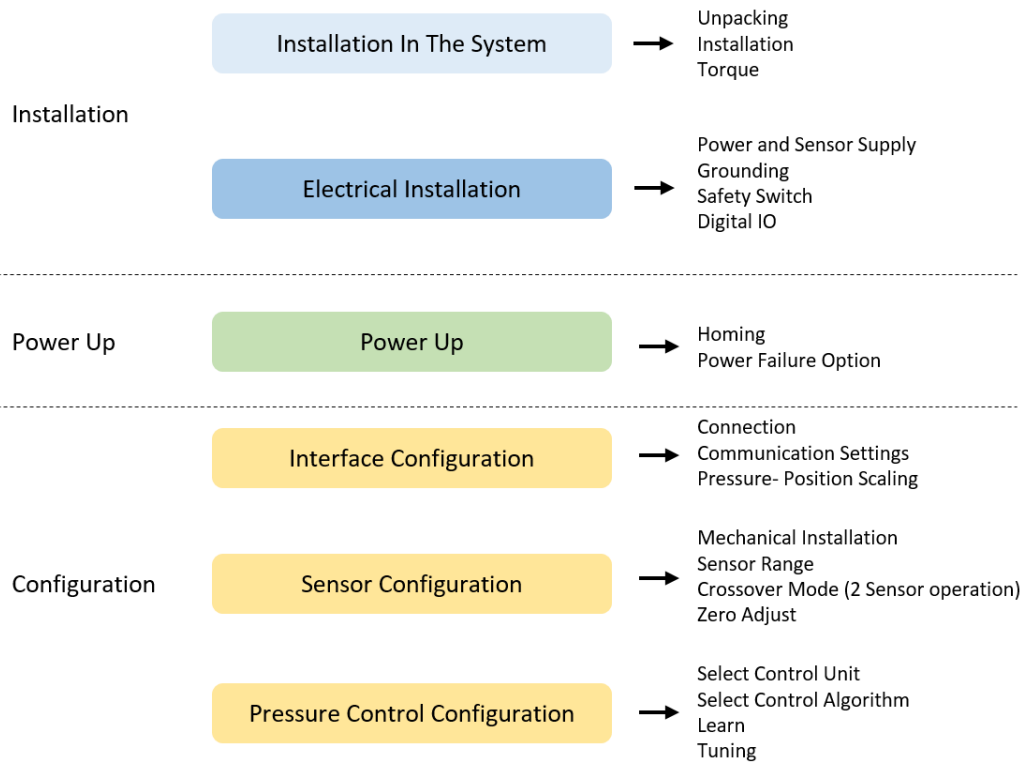

4.2 Unpacking

	NOTICE
	<p>Physical overstraining at controller Inappropriate handling with the valve may cause in damage of controller. Do not place the valve on the controller.</p>

	NOTICE
	<p>Physical overstraining at pedestal Inappropriate handling with the valve may cause in damage of pedestal. Lift valve at valve body out of transport case.</p>





- Make sure that the supplied products are in accordance with your order.
- Inspect the quality of the supplied products visually. If it does not meet your requirements, please contact VAT immediately.
- Store the original packaging material. It may be useful if products must be returned to VAT.


1. Open the transport case and remove inside packing material as far as necessary.
2. Lift the valve carefully and place it on a clean place.





Do not remove protective foils from valve opening


4.3 Installation into the system

	 WARNING
	<p>Valve opening Risk of serious injury. Human body parts must be kept out of the valve opening and away from moving parts. Do not connect the controller to power before the valve is installed complete into the system.</p>

	NOTICE
	<p>Sealing surfaces Sealing surfaces of valve and vacuum system could be damage in case of incorrect handling. Only qualified personal are allowed to install the valve into the vacuum system.</p>

	NOTICE
	<p>Wrong connection Wrong connection may result in damage of controller or power supply. Connect all cables exactly as shown in the following descriptions and schematics.</p>

	NOTICE
	<p>Burned connector pins (spark) Connector pins or electronic parts could damage, if plugged and unplugged under power. Do not plug or unplug connectors under power.</p>

	NOTICE
	<p>Contamination Gate and other parts of the valve must be protected from contamination. Always wear clean room gloves when handling the valve.</p>



Mount valve to a clean system only.

4.3.1 Installation Hints

Install valve into the vacuum system. Valve seat side shall face process chamber.




- Do not tighten the flange screws stronger than indicated under chapter «Tightening torque».
- Do not admit higher forces to the valve than indicated under chapter «Admissible forces».
- Make sure that enough space is kept free to do preventive maintenance work. The required space is indicated on the dimensional drawing.
- Control unit of valves with ISO-KF (61 . . . – K . . .) needs support when mounted on horizontal piping and control unit does not hang.

4.3.2 Installation space condition



Install the valve with integrated controller with space for dismantling and air circulation as shown in figure below.

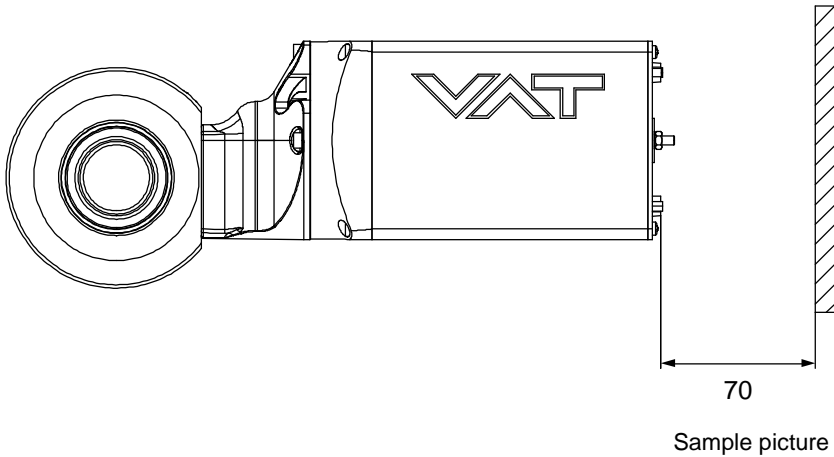

4.3.3 Admissible forces


NOTICE	
	<p>Force at valve body</p> <p>Forces from the weight of other components can lead to deformation of the valve body and to malfunction of the valve.</p> <p>Do not higher force the valve body as specified.</p>



The following forces are admissible.


Valve size		Axial tensile or compressive force «F _A »		Bending moment «M»		
mm	inch	N	lb.	Nm	lbf.	
40	1½	100	22	6	4.5	<p>Sample picture</p>
50	2	150	34	11	8	
63	2½	800	176	32	24	<p>sample picture</p>
80	3	850	187	35	26.5	
100	4	1000	220	40	30	

4.3.4 Admissible forces at controller

NOTICE	
	<p>Force at pedestal</p> <p>In case higher force is applied, the pedestal could be permanently damaged.</p> <ul style="list-style-type: none"> - Do not pushing, shocking load, or stressing the valve controller - Do not deposit anything at valve controller



The admissible force at valve controller in regards to the pedestal is shown in table below


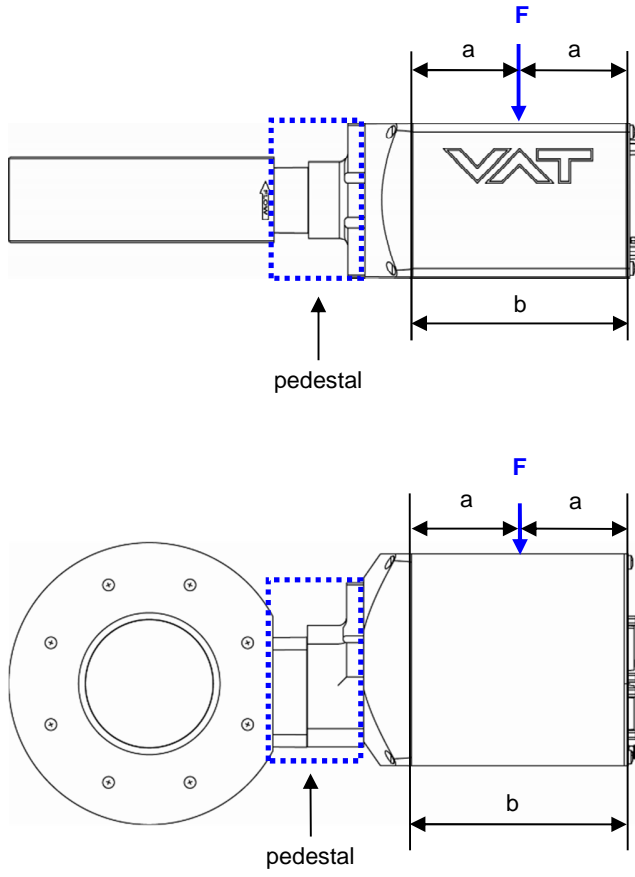
Admissible force «F»	Overview F = Force a = middle of aluminum part of controller (b / 2)
400 N	 <p style="text-align: center;">sample pictures</p>

4.3.5 Tightening torque DN 40 – 50mm



Tightening torques for ISO-KF flange connections depend on the type of seal which is used. Follow recommendations of seal manufacturer.

4.3.5.1 ISO-KF Clamping connections

Clamping chain (example)

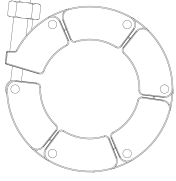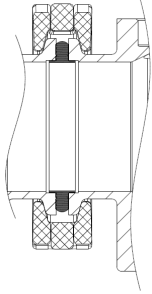Valve size	ISO-KF	ISO-KF	 e.g.: 31032-KASA-0001 31034-KASA-0001	
	recommended tightening torque (Nm)	recommended tightening torque (lbs . ft)		
DN40 / 1½ "	5	3.7		
DN50 / 2"	6	4.5		

Clamping device (example)

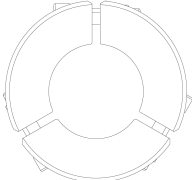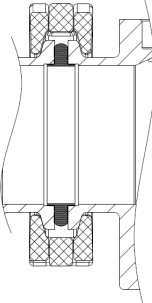Valve size	ISO-KF	ISO-KF	 e.g.: 31032-KASE-0001 31034-KASE-0001	
	recommended tightening torque (Nm)	recommended tightening torque (lbs . ft)		
DN40 / 1½ "	12	9		
DN50 / 2"	12	9		

4.3.6 Tightening torque DN63 – 100mm


Tighten mounting screws of the flanges uniformly in crosswise order. Observe the maximum torque levels in the following table. Higher tightening torques deforms the valve body and may lead to malfunction of the valve.

4.3.6.1 Mounting of CF-F flanges

Tightening torques for CF-F flange connections depend on the type of seal which is used. Follow recommendations of seal manufacturer.

4.3.6.2 Mounting with centering rings


Valve size	ISO-F	ISO-F
	max. tightening torque (Nm)	max. tightening torque (lbs . ft)
DN63 / 2½ "	8-10	6-8
DN80 / 3"	8-10	6-8
DN100 / 4"	8-10	6-8
	hole depth (mm)	hole depth (inch)
DN63 / 2½ "	12	0.47
DN80 / 3"	12	0.47
DN100 / 4"	12	0.47

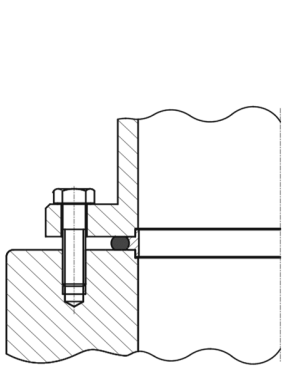


Refer to «Spare parts / Accessories» for centering rings ordering numbers.

4.3.6.3 Mounting with O-ring in grooves

Valve size	ISO-F	JIS	ASA-LP	ISO-F	JIS	ASA-LP
	max. tightening torque (Nm)			max. tightening torque (lbs . ft)		
DN63 / 2½ "	20-23	35-40	35-40	15-17	26-30	26-30
DN80 / 3"	20-23	35-40	35-40	15-17	26-30	26-30
DN100 / 4"	20-23	35-40	35-40	15-17	26-30	26-30
	hole depth (mm)			hole depth (inch)		
DN63 / 2½ "	12	n/a	n/a	0.47	n/a	n/a
DN80 / 3"	12	n/a	n/a	0.47	n/a	n/a
DN100 / 4"	12	n/a	n/a	0.47	n/a </td <td>n/a</td>	n/a


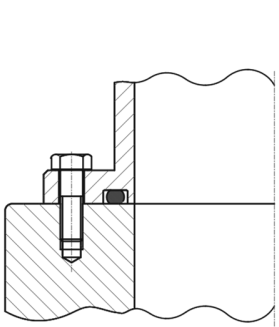



Make sure that screws in use are capable to withstand applied torques.


4.4 Connection overview

Controller IC2-H3:

RS232 + RS485 + Logic

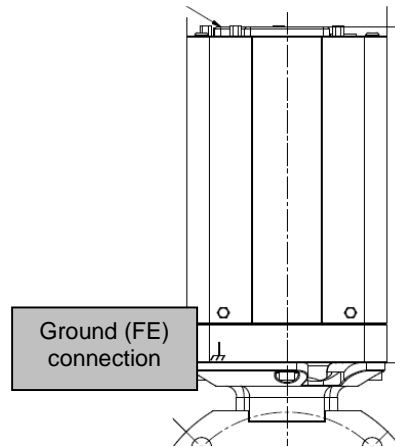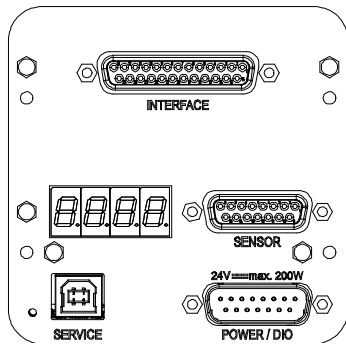

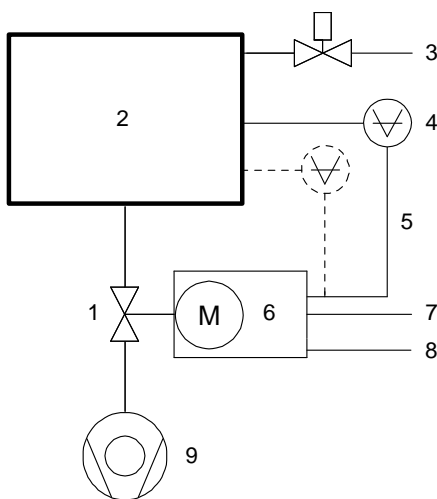

System:



- 1 Valve
- 2 Process chamber
- 3 Gas inlet
- 4 Pressure sensor(s)
- 5 Sensor cable(s)
- 6 Controller and actuator
- 7 Cable to remote control unit
- 8 Cable to power supply
- 9 Pump

4.5 Power-, Ground- and Sensor Connection

NOTICE	
	<p>Wrong connection</p> <p>Wrong connection may result in damage of controller or power supply. Connect all cables exactly as shown in the following descriptions and schematics.</p>

NOTICE	
	<p>Burned connector pins (spark)</p> <p>Connector pins or electronic parts could damage, if plugged and unplugged under power. Do not plug or unplug connectors under power.</p>

4.5.1 Connection cable recommendations

For Power Supply connection cables, VAT recommends:


Class (min.)	L (Length max.)	d (diameter)
AWG18 (shielded)	5 m	0.823 mm ²

For Sensor & Signal connection cables, VAT recommends:


Class (min.)	L (Length max.)	d (diameter)
AWG22 (shielded)	20 m	0.326 mm ²

4.5.2 Ground connection

Recommendation for ground connection between controller and system chassis with cable or with ground strap.

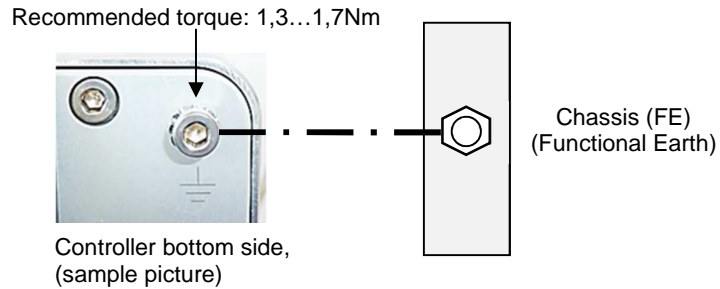

- Recommendation for ground connection cable: AWG 12 (4 mm²)
- The connection point at chassis (FE) must be blank metal (not coated).

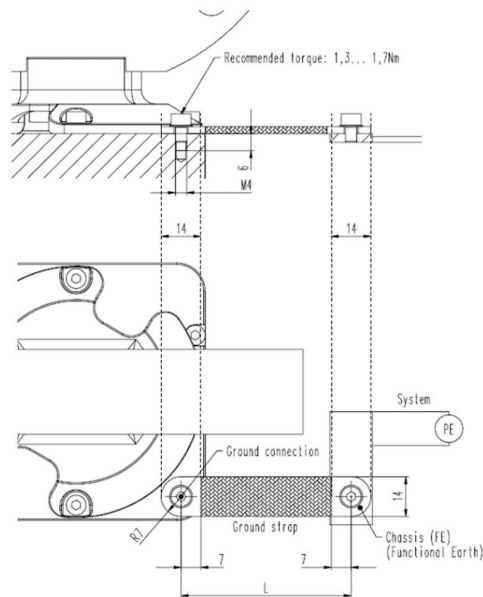

- Connection plates of ground strap must be total plane for a good electrical contact!
- The connection point at chassis (FE) must be blank metal (not coated). It is also possible to connect the ground strap at system chamber if it is well connected to PE.
- Avoid low chassis cross section to the system PE connection. (min. same cross section as ground strap)

4.5.3 Power and Sensor supply concepts

This valve offers 3 alternative concepts to supply the sensor(s) with power. This depends on the sensor type and valve version that is used.

Concepts:

24 VDC sensors:

- External +24 VDC supplied to POWER connector is feedthrough to SENSOR connector. Refer to chapter «Power and sensor connection (+24 VDC sensors) ».

±15 VDC sensors:

- External ±15 VDC supplied to POWER connector is feedthrough to SENSOR connector. Refer to chapter «Power and sensor connection (±15 VDC sensors) without optional SPS module».
- External +24 VDC supplied to POWER connector is converted into ±15 VDC by the valve internal SPS and supplied to SENSOR connector. Refer to chapter «Power and sensor connection (±15 VDC sensors) with optional SPS module».



This concept is only possible when Sensor Power Supply (SPS) option is installed.

For max load consumption, refer to chapter «Technical Data – Control and actuating unit».

Valve versions:


- 61...-... **G**...-... / 61...-... **T**...-... / 61...-... **H**...-... SPS module not included
- 61...-... **A**...-... / 61...-... **C**...-... SPS module included



The SPS module can be retrofitted.
Refer to chapter Retrofit / replacement procedure for instruction.

4.5.3.1 Power and 24V sensor connection

[61. G / 61. H versions recommended]

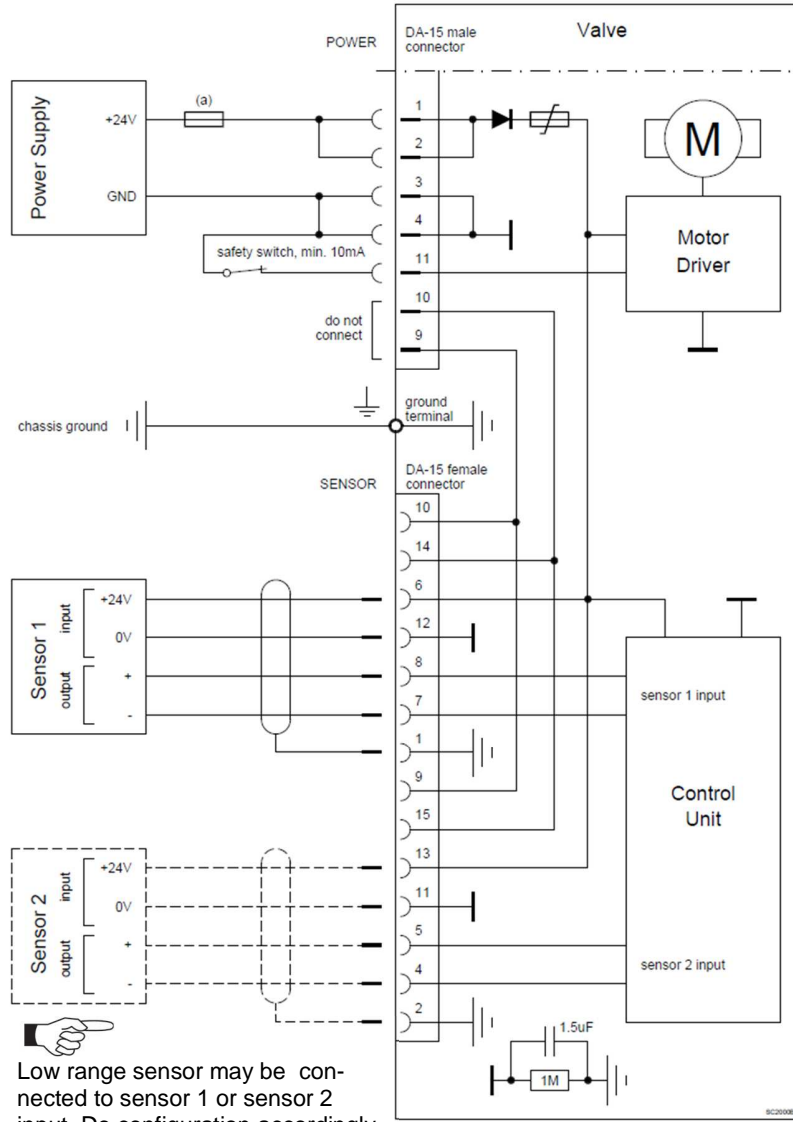


Pins 4 and 11 must be bridged for operation. An optional switch would allow for motor interlock to prevent valve from moving.

Low range sensor may be connected to sensor 1 or sensor 2 input. Do configuration accordingly

- VAT fuse recommendation: (a) 3 AF
- Use shielded sensor cable(s). Keep cable as short as possible, but locate it away from noise sources.
- Connector: Use only screws with 4–40 UNC thread for fastening the connectors!

4.5.3.2 Power and 15V sensor connection

[61.....G...../61.....H..... versions recommended]

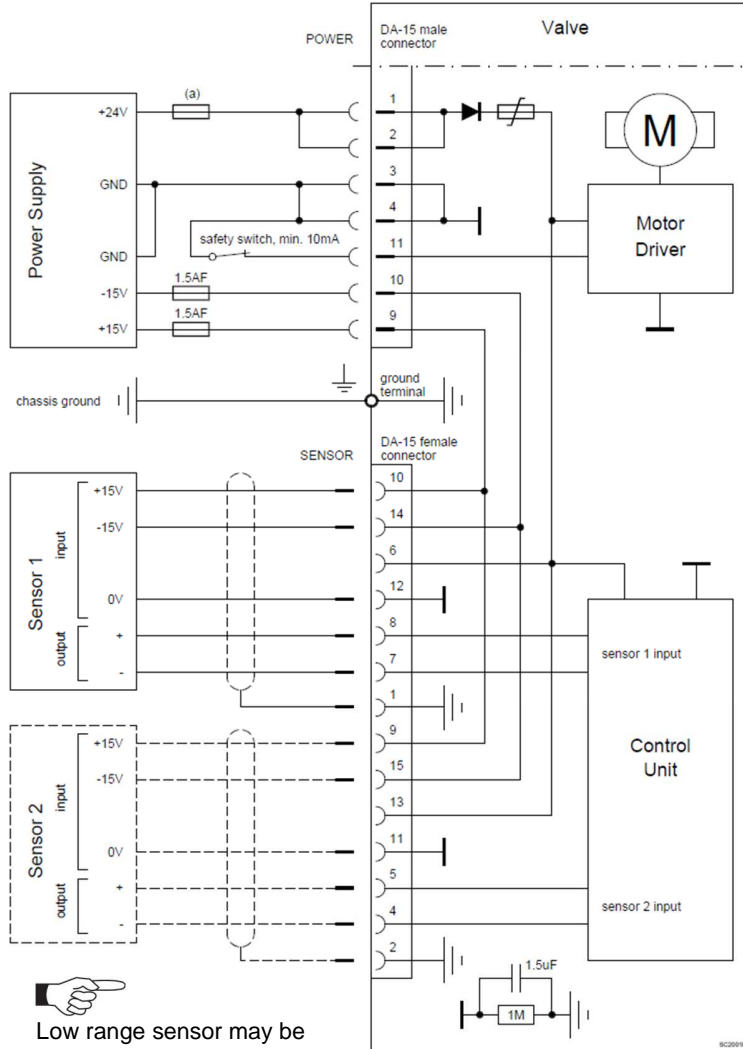


Pins 4 and 11 must be bridged for operation. An optional switch would allow for motor interlock to prevent valve from moving.

Low range sensor may be connected to sensor 1 or sensor 2 input. Do configuration accordingly.

- **VAT fuse recommendation: (a) 3 AF**
- Use shielded sensor cable(s). Keep cable as short as possible, but locate it away from noise sources.
- Connector: Use only screws with 4–40 UNC thread for fastening the connectors!

4.5.3.3 Power and 15V sensor connection with optional SPS module

[61..... A / 61..... C versions only]

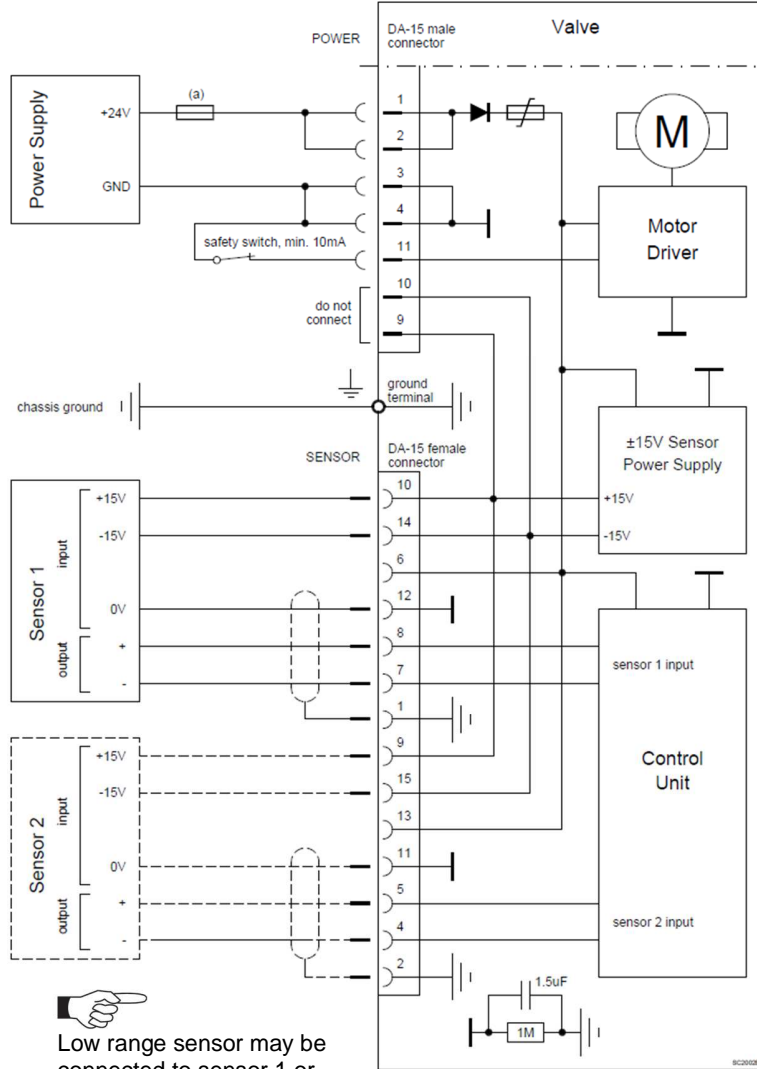


Pins 4 and 11 must be bridged for operation. An optional switch would allow for motor interlock to prevent valve from moving.

Low range sensor may be connected to sensor 1 or sensor 2 input. Do configuration accordingly.

- **VAT fuse recommendation: (a) 3 AF**
- Use shielded sensor cable(s). Keep cable as short as possible, but locate it away from noise sources.
- Connector: Use only screws with 4–40 UNC thread for fastening the connectors!

4.5.4 Drive Power Enabled Switch, Safety Mode

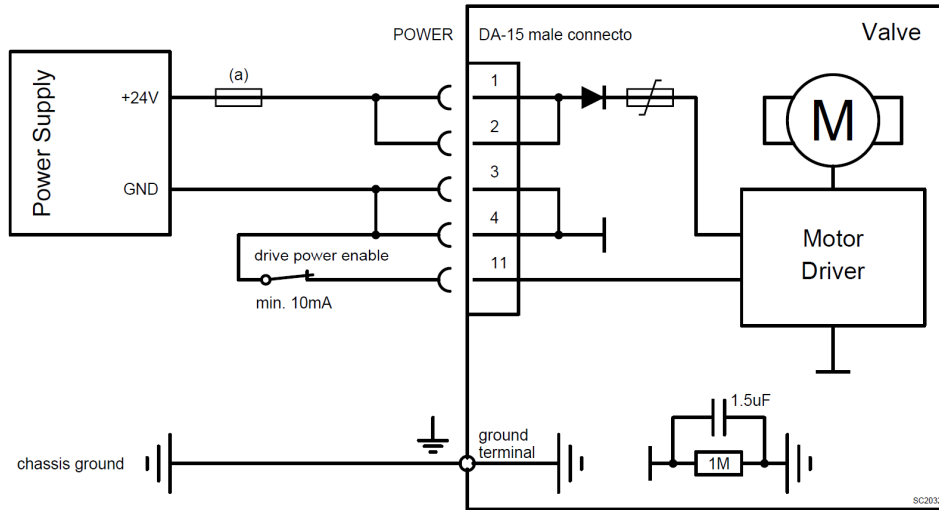

- By means of an external switch the motor power supply can be interrupted.
- In this case the valve enters the 'safety mode'.
- This motor interlock prevents the valve from moving (e.g. maintenance work).
- Data reading from the control unit remains possible.
- When motor interlock is active during power up, the valve directly enters the 'safety mode' and is not able to do homing.
- When 'safety mode' is entered from operation (i.e. pressure control mode), the unit will automatically switch to safety control mode and remain at current position. Once motor interlock is deactivated the valve go to control mode 'Init', so a homing is necessary and will be carried out depending on 'Homing' setting (Refer to 'Power Up, Homing')



For safety function without human risk it is recommended using interlock function of the digital inputs, because no new homing is necessary after release of the interlock. Refer to 'Power connector IO' >> 'Digital Input'

4.6 Power Up

After power up or possibly after a reset of the valve homing is necessary to determine the plate position. Refer to chapter «4.11.2 Homing»

4.7 Power Down, Power Failure Option

4.7.1 Power down behavior in case of power failure

Valve position before power failure:	Reaction of valve:
Closed (isolated)	Valve remains closed.
Valve open or in any intermediate position	The plate remains at the current position.



All parameters are stored in a power fail save memory.

4.7.2 Power Fail Option

Power Fail Option is circuit board that can store as much energy to close or open the valve in the event of a power failure.

Technical data

Charging Time	2 minutes max.
Durability	Up to 10 years @ 25°C ambient

These settings define what the valve is doing in case the power fails.



Valve must be equipped with the 'Power Failure Option'
[61...C... or 61...H...]

For PFO retrofit and other options refer to chapter: «Spare parts».


Location: CPA/Navigation/Parameters: Power Fail Option

Parameter	Description
Enable	'True' enables the power fail reaction. 'False' there is no reaction on a power fail
State	<i>Battery is Charging</i> <i>Ready to Use</i> <i>Active</i> <i>Failure</i>
Functionality	<i>Open</i> <i>Close</i>
Delay	In seconds After this delay, the power failure reaction starts after the power failed. Helps to bridge a short power interruption.
Battery Voltage	Shows state of charge
Power Fail Cycles	Counts Power Failure

4.8 Service Port, CPA software


The 'Service port is designed for 'Local operation' with the software CPA - Control Performance Analyzer.

Note: Detailed help on the CPA is available in the help of the CPA itself.

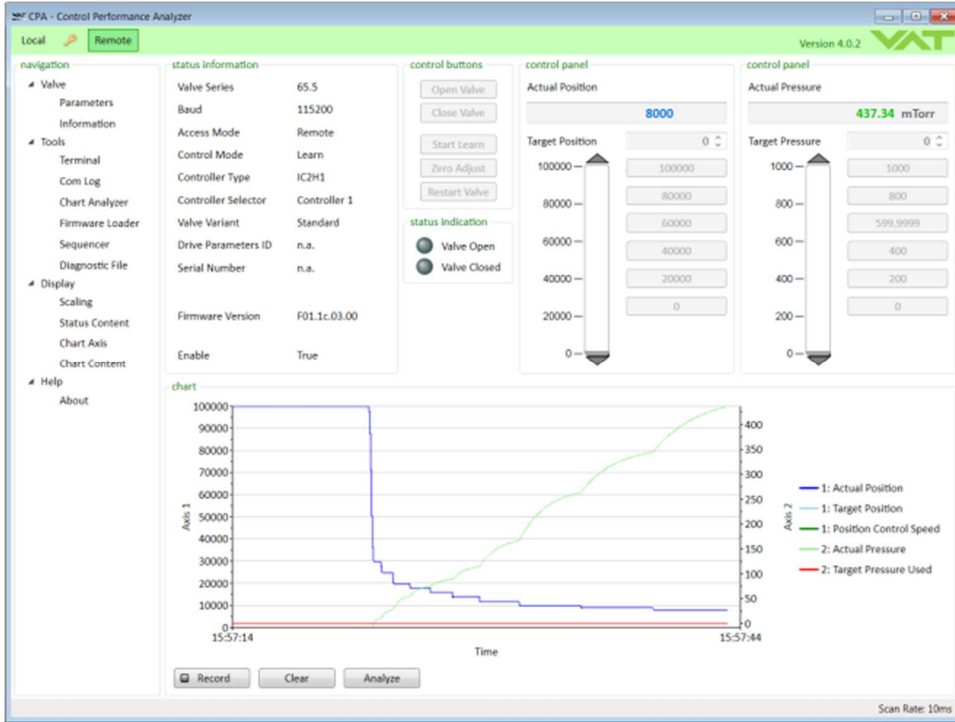


4.8.1 How to start

1. Connect service cable (USB A-B cable male-male) between PC and valve:

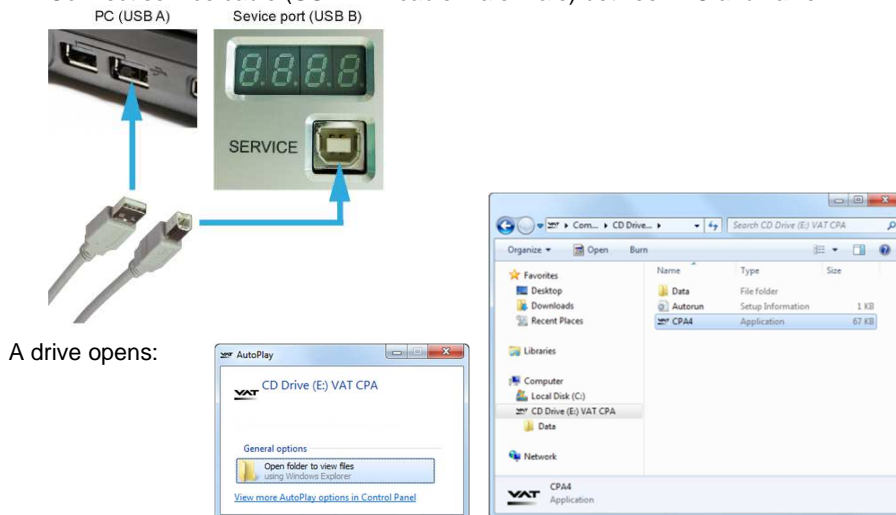

2. Double Click on 'CPA4.exe' to open the 'Control Performance Analyzer'

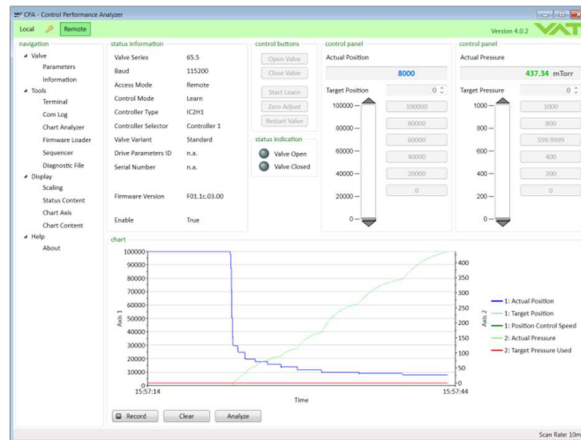


3. Click [Local] for Local operation to do configuration



When communication to service port is interrupted, the valve will change to remote operation. So when service cable will be disconnected or software will be shut down, the valve returns automatically to remote operation. This may result in an **immediate movement** of the valve depending on remote control.


4.8.2 Update

It is easy to update to the latest version of the CPA which can be found on the VAT homepage:
<https://www.vatvalve.com/downloads/software>

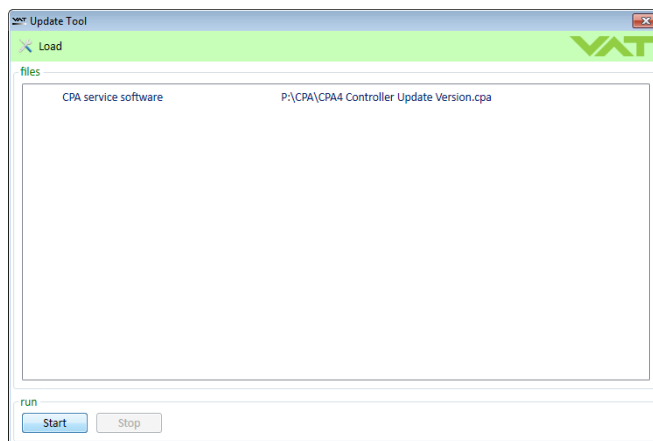

4.9 Display Information

There is a 4 digit display located on the controller. It displays configuration, status and position information. For details refer to following tables.

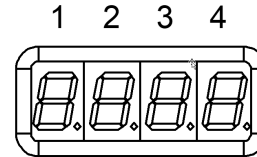

4.9.1 Power up

Description	Digit 1	Digit 2	Digit 3	Digit 4
<ul style="list-style-type: none"> 1st Power On: All dots are illuminated 	#	#	#	#
<ul style="list-style-type: none"> 2nd Valve series e.g. 67.0 		6	7	0
<ul style="list-style-type: none"> 3rd Firmware: generation.type e.g. 01.0C 	0	1	0	C
<ul style="list-style-type: none"> 4th Firmware: version.firmware e.g. 07.00 	0	7	0	0
<ul style="list-style-type: none"> 5th Controller configuration: e.g. 11.00 	Controller 1=H1 2=H2 3=H3 4=H4 5=H5 6=H6 7=H7	Interface 1=RS232/RS485 2=EtherCAT 3=DeviceNet 5=Logic 7=Profibus 8=CCLink 9=EtherNet	Options 00=none 01=SPS 02=PFO 03=Cluster 04=SPS + PFO 05=SPS + Cluster 06=PFO + Cluster 07=SPS + PFO & Cluster 08=PFO2 09=SPS + PFO2 0A=PFO2 + Cluster 0B=SPS + PFO2 + Cluster 0C=PFO3 0D=SPS + PFO3 0E=PFO3 + Cluster 0F=SPS + PFO3 + Cluster SPS Sensor Power Supply PFO Power Failure Option	
'Ho' homing is running	H	o		

4.9.2 Operation

Description / Mode	Digit 1	Digit 2	Digit 3	Digit 4
INIT (start up)	I	n.		
INIT (start up, leak tight)	I	n.		C
CLOSE	C.	C, 0...100 valve position C = closed, leak tight 0 = minimal conductance 100 = maximum opened		
OPEN	O.			
PRESSURE control	P.			
POSITION control	A.			
INTERLOCK Valve closed or open by digital input	I.			
HOLD (position frozen)	H.			
LEARN	L.			
SAFETY Refer to «Safety mode» for details.	S.			
POWER FAILURE	F.			

4.9.3 Error

Description	Digit 1	Digit 2	Digit 3	Digit 4
Error number (xyz)	E.	x	y	z
alternately (if error code exist)				
Error code		u	v	w



For Error number / code. Refer to «Trouble shooting» for details

4.10 System Settings and States

4.10.1 Identification

4.10.1.1 Serial Number

Location: CPA/Parameters: System.Identification.Serial Number

Parameter	Description
Serial Number	VAT specific number

4.10.1.2 Configuration

Location: CPA/Parameters: System.Identification.Configuration

Parameter	Description
Valve Series	3-digit value representing the VAT valve series
Valve Variant	For some vale there exists different variants
Nominal Diameter	DN in mm. E.g DN250
Drive Parameter ID	ID of the last drive file loaded on the valve. Sets the parameters responsible for the movement characteristics of the valve
Configuration Parameters ID	ID of the last configuration file loaded on the valve. Configuration of Interface, Pressure Control, Pressure Sensor, ...

4.10.1.3 Firmware

Location: CPA/Parameters: System.Identification.Firmware

Parameter	Description
Valve Firmware ID	VAT specific identification number
Valve Firmware Version	Faa.bb.cc.dd a = Platform, Controller Type b = Type C ustomer B asis P roduction T est c = Version d = Revision
CPA Version	VAT PC software version
Interface Firmware Version	Network controller firmware
Motion Controller Firmware Version	Motion controller firmware

4.10.1.4 Hardware

Location: CPA/Parameters: System.Identification.Hardware

Parameter	Description
Controller Type	Identification of the use controller IC2H1, IC2H2, IC2H3 ...
Interface Type	RS232/RS485 EtherCAT DeviceNet Logic Profibus CCLink EtherNet
Option Type	none SPS PFO Cluster SPS & PFO SPS & Cluster PFO & Cluster SPS & PFO & Cluster SPS...Sensor Power Supply PFO...Power Failure Option

4.10.2 Statistics

Location: CPA/Parameters: System.Statistics

Parameter	Description
Start Up Counter	Each start up is counted (power on and resets) Can be used to monitor whether the valve has restarted uninvited (power loss, watchdog, ...)
Total Time Powered Up	In seconds
Time Since Power On	In seconds

4.10.3 Warning/Error

Location: CPA/Parameters: System.Warning/Error

Parameter	Description			
Warning Bitmap	Bit	Hex	Description	
	0	1	No Learn Data	
	1	2	Isolation valve does not work	
	2	4	No Sensor Active	
	3	8	PFO Not Ready	
	4	16	Cluster Slave Offline	
	6	40	Fieldbus Data Not Valid	
	8	256	Compressed Air Not Falling when valve close	
	9	512	Compressed Air Too Low	
	10	1024	Compressed Air Too High	
	12	4096	Fan stall alarm	
	Error Bitmap	Bit	Hex	Description
		0	1	Homing Position Error
1		2	Homing Not Running	
2		4	Homing Error State	
3		8	Operation Position Error	
4		10	Operation Not Running	
5		20	Operation Error State	
12		1000	Other Component	
30		40000000	General	
31		80000000	Internal	
Error Number	Refer to Error Number in Troubleshooting			
Error Code	Refer to Error Code in Troubleshooting			

4.10.4 Service

4.10.4.1 Restart, Error Recovery

Location: CPA/Parameters: System.Services

Parameter	Description
Restart Controller	Emulates a power cycle of the valve
Error Recovery	Attempts to reset the Control Mode Error without restarting the valves

4.10.4.2 Settings Handling

Location: CPA/Parameters: System.Services.Store/Restore Settings

Parameter	Description
Store User Parameters	Emulates a power cycle of the valve
Restore User Parameters	Attempts to reset the Control Mode Error without restarting the valves
Restore Factory Parameters	Protective function against changing the settings. If TRUE, the settings can no longer be changed.

Location: CPA/Parameters: System.Services.Configuration Lock

Parameter	Description
Configuration Lock Mode	Protective function against changing the settings. If TRUE, the settings can no longer be changed.

4.11 Valve Settings and States

4.11.1 States

Location: CPA/Navigation/Parameters: Valve

Parameter	Description
Actual Position	Show position of the valve plate
Position State	Intermediate Closed Open
Isolation State	Not Isolated Isolated

4.11.2 Homing

After power up or possibly after a reset of the valve homing is necessary to determine the plate position.

Location: CPA/Navigation/Parameters: Valve.Homing

Parameter	Description
Start Condition	Homing start option defines when the valve performs the homing procedure. <i>Standard</i> Automatically if valve is not in sealed state, otherwise it is waiting for a move command. <i>Open Command</i> On an open command <i>Move Command</i> On any move command <i>At Startup</i> All the time <i>Homing Command</i> On homing command <i>Move Command Without Close</i> On any move command except close command if the valve is closed
End Control Mode	This control mode is set after a successful homing. <i>Position</i> <i>Close</i> <i>Open</i> <i>Pressure Control</i>
End Position	In case the End Control Mode is set to 2 (Position), this parameter defines which position is set after successful homing.

Followed description of the **standard setting**:

Valve position before power up:	Reaction of valve:
Closed (isolated)	Valve remains closed. Homing will be done when first movement command is received.
All other than closed (not isolated)	Valve do homing to initialize position. Display shows 'Ho' until homing is done Valve position after homing is closed

4.11.3 Cycle Counter

4.11.3.1 Control Cycle

A control cycle is a complete movement of the valve, from closing to opening and back to closing, or in percentage of movement it is 200%. Each movement is added up until 200% of the movement is reached, and then the cycle counter is incremented by 1.

Location: CPA/Parameters: Valve.Position Cycle Counter

Parameter	Description
Control Cycles	The value is writable to be able to reset it
Control Cycles Total	Non-resettable value

4.11.3.2 Isolation Cycle

Counts each compression of the O-ring during the closing process (Each transition of **Isolation State** from 'Not Isolated' to 'Isolated')

Location: CPA/Parameters: Valve.Position Cycle Counter

Parameter	Description
Isolation Cycles	The value is writable to be able to reset it
Isolation Cycles Total	Non-resettable value

4.11.4 Position Restriction

This allows the position of the valve to be limited in open direction. The limitation is effective in any control mode

If restriction is active:

- **Position State** remains in Intermediate
- Digital outputs Open becomes not active

Location: CPA/Parameters: Valve.Position Restriction

Parameter	Description
Enable	Enable the restriction
Maximum Position	High position limit
Restriction Active	Indicates that the position is currently restricted by the Position Restriction.

4.11.5 Position Adaption

4.11.5.1 Usage

Chamber Matching

Adjustment of the conductance curve of different valves to obtain the same position at the same process points in different systems.

Cluster Balance


Adjusting the Position of individual valves in a valve cluster can be used to compensate certain Side-effects, e.g. keeping suction rate of downstream pump on a defined level.

4.11.5.2 Parameters

Location: CPA/Parameters: Valve.Position Adaption

Parameter	Description
Enable	Enables the adaption
Mode	Mode of the adaption. Currently only <i>Offset</i> is available.
Actual Position Mode	Selection of the position which the valve indicates <i>Real</i> <i>Adapted</i>
Offset	Amount of displacement of the position
Target Position In	Value sent via Interface or CPA Is the same as Position Control.Target Position
Target Position Used	Internal used Target Position = Target Position In + Offset
Actual Position Real	Internal real position If setting Actual Position = <i>Real</i> the valve indicates this position
Actual Position Adapted	Actual Position Real – Offset If setting Actual Position = <i>Adapted</i> the valve indicates this position

Example: shows parameter window with the offset values and behind the main window with the position values

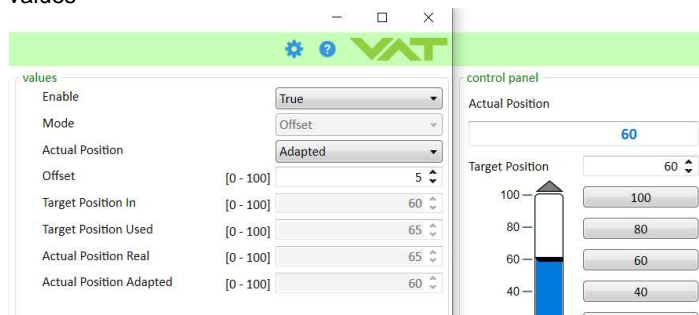

4.12 Interface RS232/485

This is an asynchronous serial communication method. The term serial means that the information is sent bit by bit. Asynchronous means that the information is not sent at previously agreed times. The sending of data can start at any arbitrary moment and it is part of the recipient's task to discover when a message starts and ends.


4.12.1 Operation Mode RS232/ RS485

Location: CPA\Parameters: Interface RS232/RS485.Settings

Parameter	Description
Operation Mode	RS232
	2-Wire Point-to-point Pin RXD and TXD
	RS485
	4-Wire (Full Duplex) or 2-Wire (Half Duplex) Point-to-point, multiple-devices Pin A,B,X,Y
	Service Interface Over RS232 CPA communication via RS232, Pin RXD and TXD

4.12.2 RS232

4.12.2.1 Connection

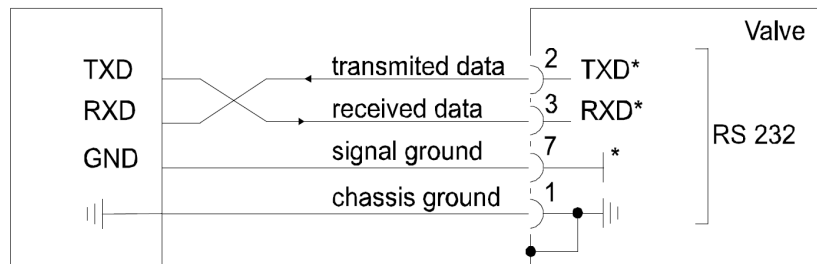

*Isolated from other circuits

4.12.2.2 Configuration


The port settings of the valve must be identical to the settings of the host control system.

Location: CPA\Parameters: Interface RS232/RS485.Settings

Parameter	Description
Baud Rate	1200,2400,4800,9600,19200,38400,57600, 115200
Data Bit Length	7, 8
Stop bit	1,2
Parity Bit	None , Even, Odd
Command Termination	CR+LF , LF, CR

4.12.3 RS485

4.12.3.1 Connection

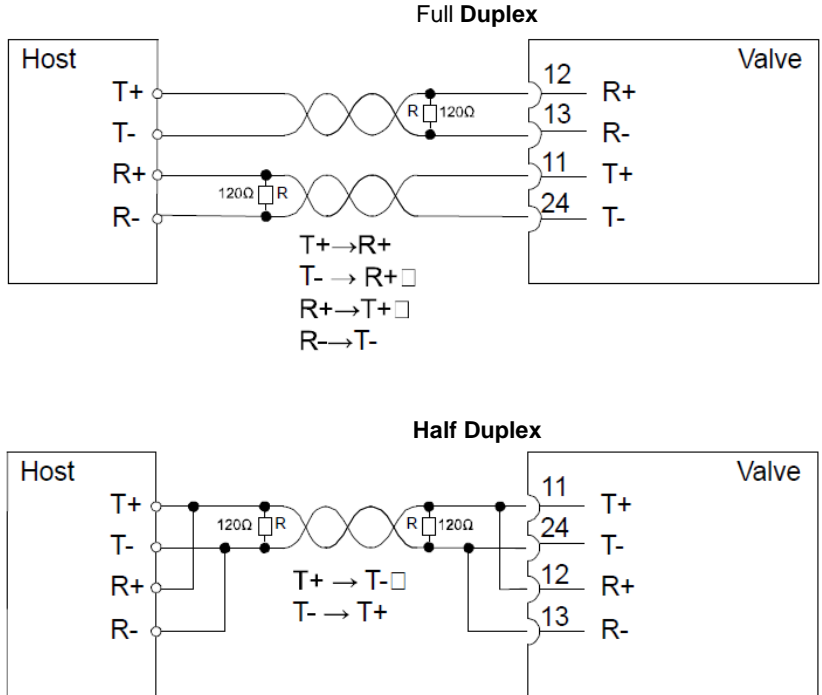

4.12.3.2 Configuration

The factory default configuration of the RS232 interface are marked in **bold** and might be changed to fit the application by using the CPA software.

Location: CPA\Parameters: Interface RS232/RS485.Settings

Parameter	Description
Baud Rate	1200,2400,4800,9600,19200,38400,57600, 115200
Data Bit Length	7, 8
Stop bit	1, 2
Parity Bit	None , Even, Odd
Topology	Full Duplex , Half Duplex
Network	Multiple Devices , Point to Point
Address	0...255
Command Termination	CR+LF , LF, CR

4.12.4 Command Set

4.12.4.1 General

- Commands and values are case sensitive.
- Acknowledgement within 10ms after reception of command.
- Wait for acknowledgement before sending a new command.
- Default command termination is CR and LF. This is adjustable.
CR = Carriage Return (0D hexadecimal), LF = Linefeed (0A hexadecimal)
- Same Syntax for Commands over Service (CPA) as over RS232 interface.


4.12.4.2 Syntax

Service	Command	Response
GET	p:[service][parameter][index]	p:[error][service][parameter][index][value]
SET	p:[service][parameter][index][value]	p:[error][service][parameter][index][value]

Part	Description	Format	Digits
service	Service code	Hex	2
parameter ID	Each parameter is identified by an uint32 value	Hex	8
error	Error code (see detail below)	Hex	2
index	Array index. If parameter is not an array use 00	Hex	2
value	Set or response value	Dec	variable



All command input can be done by local service via CPA Terminal

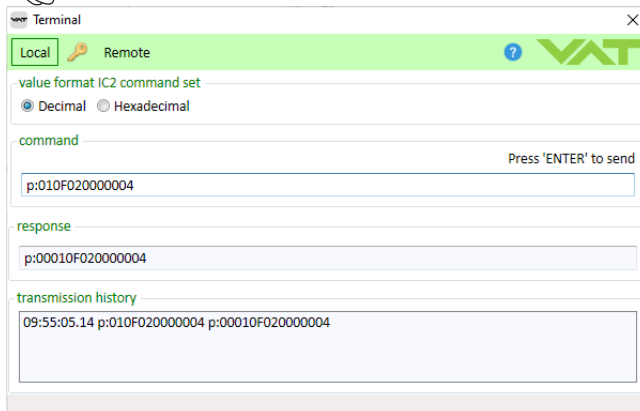


4.12.4.3 Services

Code	Description
01	SET a parameter to a value
0B	GET a value of a parameter


4.12.4.4 Parameter ID

Each parameter is identified by an 8-digit hexadecimal value.

Parameter ID via CPA: Left click on the displayed ID at the bottom of the parameter window:

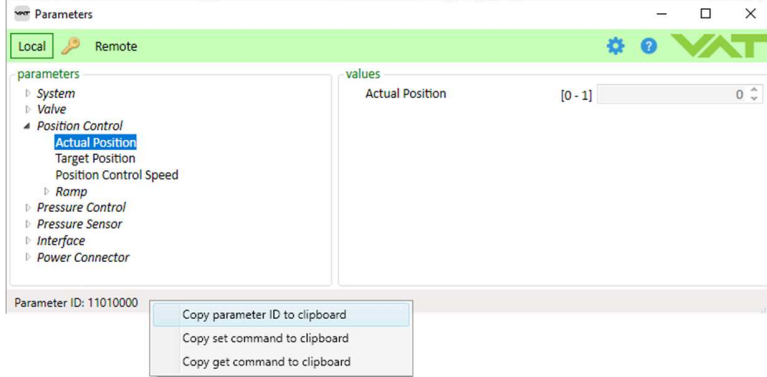

Export a parameter list to Excel:

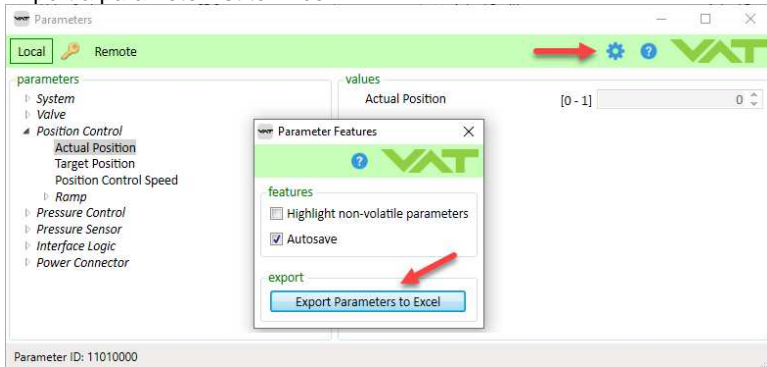

	A	B	C	D	E	F	G	H	
1	Full Name	Name	Id	DataType	Access	Volatile	Min	Max	EnumStrings
2	System.Access Mode	Access Mode	0F0B0000	SINT8	RW	V	0		2 0:Local,1:Remote,2:Ren
3	System.Control Mode	Control Mode	0F020000	SINT8	RW	V	0	14	0:Init,1:Homing,2:Positi
4	System.Identification.Serial Number	Serial Number	0F100100	STRING	RO	NV			
5	System.Identification.Configuration.Valve Series	Valve Series	0F100201	UINT16	RO	NV			0:Unknown,1:Simulatio
6	System.Identification.Configuration.Valve Variant	Valve Variant	0F100202	UINT16	RO	NV			0:Standard,1:Differenti
7	System.Identification.Configuration.Nominal Diameter	Nominal Diameter	0F100203	UINT16	RO	NV			0:Unknown,1:None,20:
8	System.Identification.Configuration.Drive Parameters ID	Drive Parameters ID	0F100300	STRING	RO	NV			

4.12.4.5 Error Codes

Code	Error text	Description
00	no error	no error
0C	wrong command length	wrong command length
1C	value too low	value out of range: lower then min limit
1D	value too high	value out of range: higher then max limit
20	resulting zero adjust offset value out of range	resulting zero adjust offset value out of range
21	not valid because no sensor enabled	not valid because no sensor enabled
50	wrong access mode	wrong access mode
51	time out	
6D	EEProm not ready	
6E	wrong parameter ID	wrong parameter ID
6F	set to default value not possible	set to default value not allowed
70	parameter not settable	set value not allowed
71	parameter not readable	get value not allowed
72	set to initial value not possible	initial value not allowed
73	wrong parameter index	wrong parameter ID index (array)
74	initial value out of range	wrong initial value
76	wrong value	wrong value within range
77	wrong value, only reset possible	only value reset possible
78	not allowed in this state	not allowed in this state
7A	wrong service	service (action) not valid
7B	parameter not active	parameter is inactive
7C	parameter system error	parameter system error
7D	communication error	communication error (e.g. buffer overrun)
7E	unknown service	
7F	unexpected character	
80	no access rights	
81	no adequately hardware	
82	wrong object state	
84	no slave command	
85	command to unknown slave	
87	command to master only	
88	only G command allowed	
89	not supported	
A0	function is disabled	
A1	already done	

4.12.4.6 Samples:

	command	response
Open: Control Mode to 4	p:010F0200000004 service 01 (set) parameter 0F020000 Index 00 value 04	p:00010F0200000004 error 00 (successfully) service 01 (set) parameter 0F020000 Index 00 value 04
Position Control: Control Mode to 2	p:010F0200000002 service 01 (set) parameter 0F020000 Index 00 value 02	p:00010F0200000002 error 00 (successfully) service 01 (set) parameter 0F020000 Index 00 value 02
Target Positon to 70.0	p:01110200000070 service 01 (set) parameter 11020000 Index 00 value 70	p:0001110200000070.0 error 00 (successfully) service 01 (set) parameter 11020000 Index 00 value 70
Get Actual Pressure	p:0B1210000000 service 0B (get) parameter 12100000 Index 00	p:000B121000000023.1 error 00 (successfully) service 0B (get) parameter 12100000 Index 00 value 23.1

4.12.4.1 Command to individual Slave



Only for a valve cluster system

Access directly individual slaves with following tunnel command
 G:[xx][Command] xx = Slave Number

Sample:

	command	response
Get Actual Position of Slave 1	G:01p:0B1101000000 slave number 01 service 0B (get) parameter 0F020000 Index 00 value 04	G:01p:000B110100000070.0 Slave number 01 error 00 (successfully) service 0B (get) parameter 0F020000 Index 00 value 04


4.12.5 Position and Pressure Units

4.12.5.1 Position

Defined range is used in all commands with position values.

Location: CPA/Navigation/Parameters: Interface.Scaling.Position

Parameter	Description
Position Unit	1, 10, 90, 100 , 1000, 10000, user specific
Value Closest Position	Range if the setting of Position Unit is <i>user specific</i>
Value Open Position	

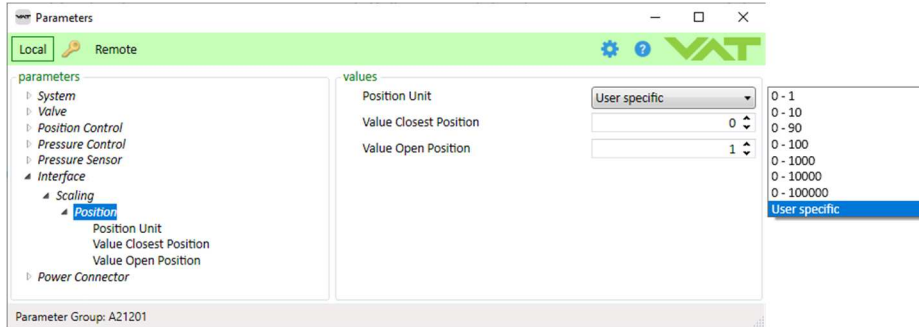


4.12.5.2 Pressure

Defined unit/range is used in all commands with pressure values.

Location: CPA/Navigation/Parameters: Interface.Scaling.Pressure

Parameter	Description
Pressure Unit	Pa, kPa, bar, mbar , Torr, mTorr, psi, user specific
Value Pressure 0	Range if the setting of Pressure Unit is <i>user specific</i>
Value Pressure Sensor Full Scale	

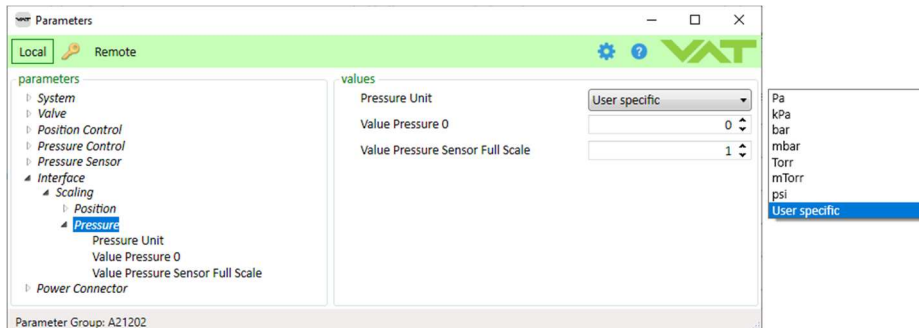

4.12.6 Compound Commands

This function allows to SET and/or GET several values with one command.

Compound is a table parameter that can hold up to 20 parameters.

With the compound services 28, 29, 30 it is possible to set and/or get all the parameters contained in the compound parameter.

There are the possibilities to define up to 4 compounds:

4.12.6.1 Compound Parameter

Location: CPA/Navigation/Parameters: Interface RS232/RS485.Compound Commands

Parameter	ID [hex]	Data Type	Access	NV	Description
Compound 1	A10A0100	UINT32[20]	RW	NV	Takes parameters IDs which are then set and/or get with service 28,29, or 30
Compound 2	A10A0200	UINT32[20]	RW	NV	
Compound 3	A10A0300	UINT32[20]	RW	NV	
Compound 4	A10A0400	UINT32[20]	RW	NV	


4.12.6.2 SET Compound

Build **Compound 1** A10A0100 (with 3 set values)

Index	Parameter	ID [hex]	Set compound members	Get compound members
00	Control Mode	0F020000	p:01A10A0100000F020000	p:0BA10A010000
01	Target Position	11020000	p:01A10A01000111020000	p:0BA10A010001
02	Target Pressure	07020000	p:01A10A01000207020000	p:0BA10A010002
03	<i>not used</i>	0	p:01A10A01000300000000	p:0BA10A010003
..

Note: All not used indexes must be set to 0

View in the CPA

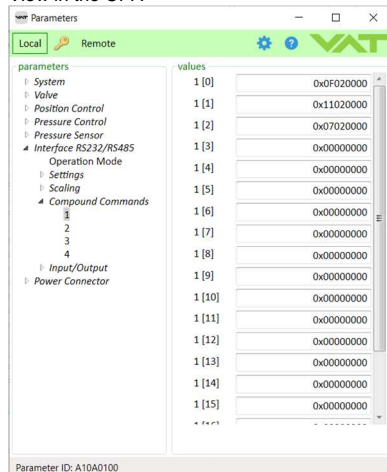

Execute Compound 1

Service 28 SET
<p>Syntax</p> <p>Send p: service compound parameter ID 00 value;value;value;value... Receive p: error service parameter 00 value;value;value;value...</p>
<p>Execution</p> <p>Send p:28A10A0100002;45.0;30.0 Receive p:0028A10A0100000;2;45.0;30.0</p>

4.12.6.3


4.12.6.4 GET Compound

Build **Compound 2** A10A0200 (with 7 get values)

Index	Parameter	ID [hex]	Set compound members	Get compound members
00	Access Mode	0F0B0000	p:01A10A0200000F0B0000	p:0BA10A020000
01	Control Mode	0F020000	p:01A10A0200010F020000	p:0BA10A020001
02	Actual Position	10010000	p:01A10A02000210010000	p:0BA10A020002
03	Position State	00100000	p:01A10A02000310100000	p:0BA10A020003
04	Actual Pressure	07010000	p:01A10A02000407010000	p:0BA10A020004
05	Target Pressure Used	07030000	p:01A10A02000507030000	p:0BA10A020005
06	Warning Bitmap	0F300100	p:01A10A0200060F300100	p:0BA10A020006
07	<i>not used</i>	0	p:01A10A0200070	p:0BA10A020007
..

Note: All not used indexes must be set to 0

View in the CPA

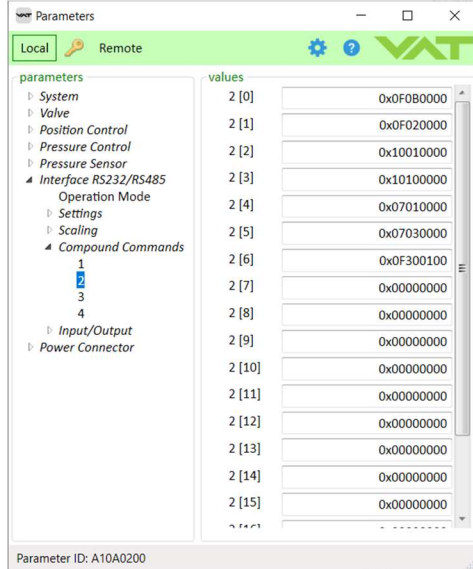

Execute **Compound 2**

Service 29 GET
<p>Syntax</p> <p>Send p: service compound parameter ID 00 Receive p: error service parameter 00 value;value;value;value...</p>
<p>Execute</p> <p>Send p:29A10A020000 Receive p:0029A10A020000;2;45.0;13.0;0:</p>


4.12.6.5 SET and GET Compound

Build **Compound 3** A10A0300 (with set and get values)

Index	Parameter	ID [hex]	Set compound members	Get
00	<i>Control Mode</i>	0F020000	p:01A10A0300000F020000	p:0BA10A030000
01	<i>Target Position</i>	11020000	p:01A10A03000111020000	p:0BA10A030001
02	<i>Target Pressure</i>	07020000	p:01A10A03000207020000	p:0BA10A030002
03	<i>Separation</i>	0	p:01A10A0300030	p:0BA10A030003
00	<i>Access Mode</i>	0F0B0000	p:01A10A0300040F0B0000	p:0BA10A030004
01	<i>Control Mode</i>	0F020000	p:01A10A0300050F020000	p:0BA10A030005
02	<i>Actual Position</i>	10010000	p:01A10A03000610010000	p:0BA10A030006
03	<i>Position State</i>	00100000	p:01A10A03000710100000	p:0BA10A030007
04	<i>Actual Pressure</i>	07010000	p:01A10A03000807010000	p:0BA10A030008
05	<i>Target Pressure Used</i>	07030000	p:01A10A03000907030000	p:0BA10A030009
06	<i>Warning Bitmap</i>	0F300100	p:01A10A03000A0F300100	p:0BA10A03000A
07	<i>not used</i>	0	p:01A10A03000B0	p:0BA10A03000B
..

Note: First Index with 0 is the separation between set and get, all other not used indexes must be set to 0

View in the CPA

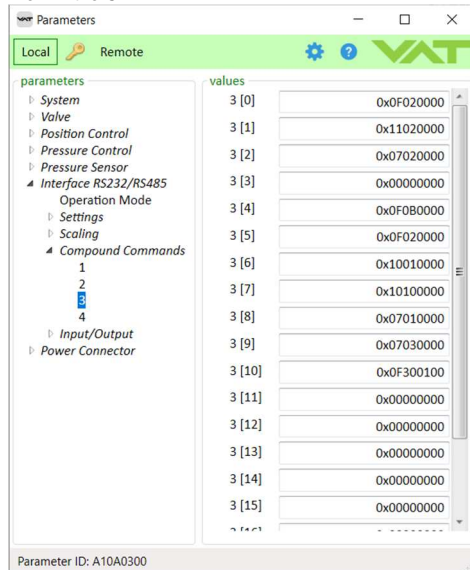


Execute **Compound 3**

30 SET and GET	
Syntax	
Send	p: service compound parameter ID 00 value;value;value;value...
Receive	p: error service parameter 00 value;value;value;value...
Execute	
Send	p:30A10A0300002;45.0;30.0
Receive	p:0030A10A0300000;2;45.0;0;24.91;0.0;0

4.12.7 Parameter Overview



A parameter list is available in the CPA if there is a connection with the CPA.
 navigation → Parameters → Settings  → Export Parameters to Excel



Abbreviations

RS	Read Write
RO	Read Only
NV	None Volatile
V	Volatile
Acc	Access

Data Type Info

STRING	Maximum length = 20 characters
BOOL	Boolean
SINT8	Signed Integer 8 bit (1 Byte)
UINT8	Unsigned Integer 8 bit (1 Byte)
SINT16	Signed Integer 16 bit (2 Byte)
UINT16	Unsigned Integer 16 bit (2 Byte)
SINT32	Signed Integer 32 bit (4 Byte)
UINT32	Unsigned Integer 32 bit (4 Byte)
FLOAT	Floating Point Number



4.12.7.1 System

Sub Group	Parameter	ID [hex]	Data Type	Acc	NV	Unit	Min	Max	Description	
	Access Mode	0F0B0000	SINT8	RW	V		0	2	0:Local 1:Remote 2:Remote Locked	
	Control Mode	0F020000	SINT8	RW	V		0	14	0:Init 1:Homing 2:Position 3:Close 4:Open 5:Pressure Control 6:Hold 7:Learn 8:Interlock Open 9:Interlock Close 12:Power Failure 13:Safety 14:Error	
Identification	Serial Number	0F100100	STRING	RO	NV				Identification of the product	
	Configuration	Valve Series	0F100201	UINT16	RO	NV		0	670	Example: 655 means series 65.5 valve
		Valve Variant	0F100202	UINT16	RO	NV		0	100	
		Nominal Diameter	0F100203	UINT16	RO	NV		0	62	20:DN10 39:DN88 52:DN400 24:DN16 40:DN100 54:DN500 28:DN25 44:DN160 56:DN630 32:DN40 46:DN200 58:DN800 34:DN50 48:DN250 60:DN1000 36:DN63 50:DN320 62:DN1250 38:DN80 51:DN350
										Drive Parameters ID
		Configuration Parameters ID	0F10020A	STRING	RO	NV				Manufactory settings ID for customer-accessible settings: Interface, Sensor, Pressure Control,...
	Firmware	Valve Firmware ID	0F100301	STRING	RO	V				
		Valve Firmware Version	0F100302	STRING	RO	V				
		CPA Version	0F100306	STRING	RO	V				
		Interface Firmware Version	0F100303	STRING	RO	V				
		Motion Controller 1 Firmware Version	0F100304	STRING	RO	V				Axis 1
		Motion Controller 2 Firmware version	0F100305	STRING	RO	V				Axis 2 → displayed if available
		Motion Controller 3 Firmware version	0F100307	STRING	RO	V				Axis 3 → displayed if available
Motion Controller 4 Firmware version	0F100308	STRING	RO	V				Axis 4 → displayed if available		
Hardware	Controller Type	0F100401	UINT16	RO	NV		1	5	1 ... 7: IC2H1 ... IC2H7	
	Interface Type	0F100402	UINT16	RO	NV		1	8	1:RS232/485 5:Logic 8:CC-Link 2:EtherCAT 7:Profibus 9:Ethernet 3:DeviceNet	
	Option Type	0F100403	UINT16	RO	V		0	15	0: Not Available 7: SPS+PFO+Cluster 1: SPS 8: PFO2 2: Cluster 9: SPS+PFO2 3: SPS+Cluster 10: PFO2+Cluster 4: PFO 11: SPS+PFO2+Cluster 5: SPS+PFO 12: PFO3 6: PFO+Cluster 13: SPS+PFO3 14: PFO3+Cluster 15: SPS+PFO3+Cluster	
Statistics	Start Up Counter	0F200100	UINT32	RO	NV					
	Total Time Powered	0F200200	UINT32	RO	NV	sec				
	Time Since Power On	0F200300	UINT32	RO	V	sec				
Warning/Error	Warning Bitmap	0F300100	UINT32	RO	V				Revere to Trouble shooting	
	Error Bitmap	0F300500	UINT32	RO	V				Revere to Trouble shooting	
	Error Number	0F300600	UINT16	RO	V				Revere to Trouble shooting	
	Error Code	0F300700	UINT16	RO	V				Revere to Trouble shooting	
Services	Restart Controller	0F500100	BOOL	RW	V				Emulates a power cycle	
	Error Recover	0F506600	BOOL	RW	V				Attempts to fix the error without restart	
	Store / Restore Settings	Store User Parameters	0F500202	BOOL	RW	V				Back-up for all setting
		Restore User Parameters	0F500203	BOOL	RW	V				Restore settings from the Back-up
		Restore Factory Parameters	0F500205	BOOL	RW	V				Restores the delivery state
		Configuration Lock Mode	0F500500	BOOL	RW	NV				Locking the valve settings. If true, no changes to the settings are possible. 0:not locked 1:locked

4.12.7.2 Valve

Sub Group	Parameter	ID [hex]	Data Type	Acc	NV	Unit	Min	Max	Description
-----------	-----------	----------	-----------	-----	----	------	-----	-----	-------------

	<i>Actual Position</i>	10010000	FLOAT	RO	V	[pos]*	0	100	
	<i>Position State</i>	10100000	UINT8	RO	V		0	2	0:Intermediate 1:Closed 2:Open
	<i>Isolation State</i>	10110000	BOOL	RO	NV		0	1	0:Not Isolated 1:Isolated
Homing	<i>Start Condition</i>	10200100	UINT8	RW	NV		0	5	0:Standard Do homing after restart if valve is not in sealed state, if it is sealed wait to a move command (except close command) 1:Open Command 2:Move Command 3:At Startup 4:Homing Command (Control Mode Homing) 5:Move Command/Standard Same as 4:Move Command, but except close command
	<i>End Control Mode</i>	10200300	SINT8	RW	NV		2	5	Control Mode after homing 2:Positon 3:Close 4:Open 5:Pressure Control
	<i>End Position</i>	10200400	FLOAT	RW	NV	[pos]*	0	100	Position to End Control Mode 2: Position
	<i>Status</i>	10201100	SINT16	RO	V		0	3	0:Not Started 1:In Progress 2:Completed Successfully 3:Error Occurred
Cycle Counter	<i>Control Cycles</i>	10300100	UINT32	RW	NV				The valve movement is summarized. The distance open > close > open is 1 Control Cycle. This value can be manipulated by the customer (set to 0 after service, for example)
	<i>Control Cycles Total</i>	10300200	UINT32	RO	NV				This value is the number of Control Cycles in valve lifespan.
	<i>Isolation Cycles</i>	10300300	UINT32	RW	NV				A Isolation Cycle is done if the valve has reached the sealed state. This value can be manipulated by the customer. (set to 0 after service, for example)
	<i>Isolation Cycles Total</i>	10300400	UINT32	RO	NV				This value is the number of Isolation Cycle in valve lifespan.
Position Restriction	<i>Enable</i>	10640100	BOOL	RW	NV		0	1	Limit the valve movement in Control Mode Pressure, Position, Open, Interlock Open
	<i>Maximum Position Restriction Active</i>	10640300	FLOAT	RW	NV	[pos]*	0	100	
		10640400	BOOL	RO	V		0	1	True if the position is currently limited (Target Position is within the limit)
Position Adaption	<i>Enable</i>	10660100	BOOL	RW	NV		0	1	
	<i>Mode</i>	10660200	UINT8	RO	V		1	1	0: Offset Currently, only the offset mode is available.
	<i>Actual Position</i>	10660300	BOOL8	RW	NV		0	1	0: Real, actual position shows valve position with added offset value 1: Adapted, actual position shows valve position without added offset value
	<i>Offset</i>	10660400	FLOAT	RW	NV	[pos]*	0	30	
	<i>Target Position In</i>	10660500	FLOAT	RO	V	[pos]*	0	100	Same Value as Target Position under Position Control
	<i>Target Position Used</i>	10660600	FLOAT	RO	V	[pos]*	0	100	Target Position In value added with offset value
	<i>Actual Position Real</i>	10660700	FLOAT	RO	V	[pos]*	0	100	Actual Position with offset value
	<i>Actual Position Adapted</i>	10660800	FLOAT	RO	V	[pos]*	0	100	Actual Position without offset value
Sub Group	Parameter	ID [hex]	Data Type	Acc	NV	Unit	Min	Max	Descripton
Oring Pull Out Prevention	<i>Enable</i>	10650100	FLOAT	RW	NV				Only for series 65.3
	<i>Delay Homing</i>	10650300	FLOAT	RW	NV	sec			Only for series 65.3
	<i>Delay Close</i>	10650400	FLOAT	RW	NV	sec			Only for series 65.3



<i>Compressed Air Pressure</i>	10A40000	FLOAT	RW	NV	mbar*	Only for series 65.3
<i>Compressed Air Error Enable</i>	10A90000	BOOL	RW	NV		Only for series 65.3
<i>Speed Mode</i>	10990000					0: Low Speed 1: Mid Speed 2: High Speed 3: Undefined 4: IC Slow Pos/Slow Prs 5: IC Fast Pos/Slow Prs 6: IC Fast Pos/Fast Prs Available speed Mode depends on valve series

4.12.7.3 Position Control

Sub Group	Parameter	ID [hex]	Data Type	Acc	NV	Unit	Min	Max	Description
	<i>Actual Position</i>	11010000	FLOAT	RO	V	[pos]*	0	100	
	<i>Target Positon</i>	11020000	FLOAT	RW	V	[pos]*	0	100	
	<i>Position Control Speed</i>	11030000	FLOAT	RW	NV		0.001	1	Speed valid in Control Mode = Position 1.0 equals to full speed
Ramp	<i>Enable</i>	11620100	BOOL	RW	NV		0	1	Activate/Deactivate position target ramp.
	<i>Time</i>	11620200	FLOAT	RW	NV	sec	0	10000000	
	<i>Slope</i>	11620300	FLOAT	RW	NV	mbar ² /sec	0	100000000	
	<i>Mode</i>	11620400	UINT8	RW	NV		0	1	0: Use Ramp Time 1: Use Ramp Slope
	<i>Type</i>	11620500	UINT8	RW	NV		0	2	0: Linear 1: Logarithmic 2: Exponential

4.12.7.4 Pressure Control

Sub Group	Parameter	ID [hex]	Data Type	Acc	NV	Unit	Min	Max	Description	
	<i>Target Pressure Used</i>	07030000	FLOAT	RO	V	mbar*	0	SFS	This value is set as pressure controller input. It differs to the Target Pressure if a pressure ramp is used.	
	<i>Pressure Control Speed</i>	07050000	FLOAT	RW	NV**		0.001	1	Speed valid in Control Mode = Pressure 1.0 equals to full speed	
	<i>Controller Selector</i>	07100000	UINT8	RW	NV**		1	4	Active Controller in Control Mode = Pressure 1:Controller 1 2:Controller 2 3:Controller 3 4:Controller 4	
Controller 1 xx = 11	Adaptive Setting	<i>Control Algorithm</i>	07xx0100	UINT8	RW	NV**		0	2	0:Adaptive 1:PI 2:Soft Pump
Controller 2 xx = 12		<i>Gain Factor</i>	07xx0203	FLOAT	RW	NV**		0.000	100	
Controller 3 xx = 13		<i>Sensor Delay</i>	07xx0204	FLOAT	RW	NV**	sec	0	1	
Controller 4 xx = 14		<i>Learn Data Selection</i>	07xx0205	FLOAT	RW	NV**				0: Learn Bank 1 1: Learn Bank 2 2: Learn Bank 3 3: Learn Bank 4
PI Soft Pump Settings		<i>P-Gain</i>	07xx0201	FLOAT	RW	NV**		0.001	100	Proportional Gain
		<i>I-Gain</i>	07xx0202	FLOAT	RW	NV**		0	100	Integral Gain
		<i>Control Direction</i>	07xx0206	BOOL	RW	NV**		0	1	0: Downstream 1: Upstream (not supported by Adaptive Control Algorithm)
		<i>Pressure Scaler</i>	07xx0223	UINT8	RW	NV**		0	1	Defines the used pressure scaling inside the pressure controller. 0: Linear 1: Logarithmic
Ramp		<i>Enable</i>	07xx0301	BOOL	RW	NV**		0	1	Activate/Deactivate pressure target ramp. The effective target pressure can be read in Target Pressure Used
		<i>Time</i>	07xx0302	FLOAT	RW	NV**	sec	0	1000000	Target reach time
	<i>Slope</i>	07xx0303	FLOAT	RW	NV**	mbar*/sec	0	1000000		
	<i>Mode</i>	07xx0304	UINT8	RW	NV**		0	1	0:Use Ramp Time 1:Use Ramp Slope	
	<i>Type</i>	07xx0306	UINT8	RW	NV**		0	1	0:Linear 1:Logarithmic 2:Exponential	
	<i>Start Value</i>	07xx0305	UINT8	RW	NV**		0	1	0:Previous Ramp Value 1:Actual Pressure Value	
General Settings	<i>Store Control Parameter Volatile</i>	07301100	BOOL	RW	NV		0	1	0: Store in NV Memory 1: Do Not Store in NV Memory	
	Control Position Restriction	<i>Enable</i>	07301201	BOOL	RW	NV				Limit the movement during pressure control
		<i>Minimum Control Position</i>	07301202	FLOAT	RW	NV	[pos]*	0	100	
		<i>Maximum Control Position</i>	07301203	FLOAT	RW	NV	[pos]*	0	100	
	Automated Controller Selector	<i>Enable</i>	07301701	BOOL	RW	NV		0	1	
		<i>Mode</i>	07301702	UINT8	RW	NV				0: Threshold 1: Pressure Direction
		<i>Controller Selector Bitmap</i>	07301703	UINT8	RW	NV				Selection of those controllers that are used
		<i>Threshold Condition</i>	07301710	UINT8	RW	NV				0: Lower Or Equal 1: Equal
		<i>Controller 1 Threshold</i>	07301704	FLOAT	RW	NV	mbar*			Used if Mode = <i>Threshold</i>
		<i>Controller 2 Threshold</i>	07301705	FLOAT	RW	NV	mbar*			Used if Mode = <i>Threshold</i>
		<i>Controller 3 Threshold</i>	07301706	FLOAT	RW	NV	mbar*			Used if Mode = <i>Threshold</i>
		<i>Controller 4 Threshold</i>	07301707	FLOAT	RW	NV	mbar*			Used if Mode = <i>Threshold</i>
		<i>Controller Pressure Rising</i>	07301720	UINT8	RW	NV		1	4	Used if Mode = <i>Pressure Direction</i>
		<i>Controller Pressure Falling</i>	07301721	UINT8	RW	NV		1	4	Used if Mode = <i>Pressure Direction</i>



Sub Group	Parameter	ID [hex]	Data Type	Acc	NV	Unit	Min	Max	Description	
General Settings	Profile Ramp	<i>Enable</i>	07301801	BOOL	RW	NV	0	1		
		<i>Threshold Mode</i>	07301802	UINT8	RW	NV			0: Actual Pressure 1: Target Pressure Used	
		<i>Ramp Type</i>	07301840	UINT8	RW	NV			0:Linear 1:Logarithmic 2:Exponential	
		<i>Actual Slope</i>	07301841	FLOAT	R	-	mbar*/ sec			
		<i>Controller Selector Bitmap</i>	07301811	UINT8	RW	NV	0	15	Selects controller which are used the Profile Ramp	
		<i>Segment Selector Bitmap</i>	07301810	UINT8	RW	NV	0	1023	Selects segments which are used in the profile	
		<i>Segment x Threshold</i>	07301820	FLOAT	RW	NV	mbar*		Defines the upper limit of a segment 10 Segments are available	
		<i>Segment x Slope</i>	07301830	FLOAT	RW	NV	mbar*/ sec		Define the slope in the segment	
	Adaptive Learn		<i>Start Learn</i>	07501000	BOOL	RW	V	0	1	Start learn procedure by setting to 1
			<i>Bank Selection</i>	07500200	SINT8	RW	NV	0	3	Select a learn bank to save the data for the following learn procedure 0:Bank 1 1:Bank 2 2:Bank 3 3:Bank 4
		<i>Pressure Limit [SFS]</i>	07500300	FLOAT	RW	NV	SFS 0.0001	1.2	Learn procedure will be executed to the Pressure Limit	
		<i>Pressure Limit</i>	07500800	FLOAT	RW	NV	mbar*		See Pressure Limit [SFS] above, same functionality but user pressure scaling is used	
		<i>Open Speed</i>	07500400	FLOAT	RW	NV	0.001	1	1.0 equals to full speed	
		<i>Status</i>	07500600	SINT8	RO	V	0	4	0:Not Started 1:In Progress 2:Completed Successfully 3:Aborted 4:Failed	
		<i>Warning Info</i>	07500700	UINT16	RO	V			Bit 1: Checksum error Bit 2: Terminated by user Bit 3: Unsuitable learn condition / pressure too high Bit 4: Unsuitable learn condition / pressure too low Bit 5: Pressure decreasing instead of rising Bit 6: Open pressure does not match	
Learn Bank 1 xx = 11		<i>Status</i>	0750xx01	SINT8	RO	NV	0	2	0:Not used 1:Available 2:Available with warnings	
Learn Bank 2 xx = 12		<i>Data</i>	0750xx02	UINT32	RW	NV			To copy learn data copy this content to another bank (or valve)	
Learn Bank 3 xx = 13		<i>Warning Info</i>	0750xx09	UINT16	RO	NV			Bit 1: Checksum error Bit 2: Terminated by user Bit 3: Unsuitable learn condition / pressure too high Bit 4: Unsuitable learn condition / pressure too low Bit 5: Pressure decreasing instead of rising Bit 6: Open pressure does not match	
Learn Bank 4 xx = 14		<i>Type</i>	0750xx0A	SINT8	RO	NV	0	2	0:Standard 1:Short 2:Calculated	
		<i>Delete Learn Bank Data</i>	0750xx0F	BOOL	RW	V	0	1	Set to 1 delete learn bank data.	

4.12.7.5 Pressure Sensor

Sub Group	Parameter	ID [hex]	Data Type	Acc	NV	Unit	Min	Max	Description	
Zero Adjust	<i>Actual Pressure</i>	12100000	FLOAT	RO	V	mbar*				
	<i>Sensor Selection</i>	12040100	SINT8	RW	V		0	2	0:Sensor 1 + 2 1:Sensor 1 2:Sensor 2 3: none	
	<i>Target Pressure</i>	12040300	FLOAT	RW	V	mbar*			Typically 0.0 when the chamber is fully pumped down.	
	<i>Execute</i>	12040400	SINT8	RW	V		1	2	1:Execute Zero Adjust 2:Clear Offset Value	
Sensor 1 xx = 01 Sensor 2 xx = 02	<i>Available</i>	12xx0100	BOOL	RW	NV		0	1	There is a sensor at this port	
	<i>Enable</i>	12xx0200	BOOL	RW	NV		0	1	Used to build Actual Pressure , used for pressure control	
	<i>Input Source</i>	12xx0600	SINT8	RW	NV		0	2	0:Analog 1:Digital 2:Simulation	
	Range	<i>Data Unit</i>	12xx0301	SINT8	RW	NV		0	7	0:Pa 3:mbar 1:kPa 4:Torr 6:psia 2:bar 5:mTorr 7:psig
		<i>Upper Limit Data Value</i>	12xx0302	FLOAT	RW	NV	see Data Unit			Define the range of the of the pressure sensor. E.g.: 100 mTorr sensor: Data Type: mTorr Upper Limit Data Value = 100. Lower Limit Data Value = 0
		<i>Lower Limit Data Value</i>	12xx0303	FLOAT	RW	NV	see Data Unit			
		<i>Upper Limit Voltage Value</i>	12xx0304	FLOAT	RW	NV	Volt			Defines the voltage range of the sensor
		<i>Lower Limit Voltage Value</i>	12xx0305	FLOAT	RW	NV	Volt			E.g.: 0..10V
		<i>Voltage Per Decade</i>	12010311	FLOAT	RW	NV	Volt			E.g.: Logarithmic Sensor with 1000Torr SFS at 9.0V and 1V/Decade: Upper Limit Data Value = 1000 Upper Limit Voltage Value = 9 Voltage Per Decade = 1
		<i>Scale</i>	12xx0310	SINT8	RW	NV		0	1	0:Linear 1:Logarithmic
	Zero Adjust	<i>Enable</i>	12xx0401	BOOL	RW	NV		0	1	
		<i>Offset Value [SFS]</i>	12xx0402	FLOAT	RW	NV	SFS			Value 1.0 means sensor full scale. For example for a 0-10 Volt gauge the value 0.1 means 1 Volt
	Filter	<i>Enable</i>	12xx0501	BOOL	RW	NV		0	1	
		<i>Time</i>	12xx0502	FLOAT	RW	NV	sec	0	1	
	Analog Sensor Input	<i>Value</i>	12xx1101	FLOAT	RO	V	mbar*			
Digital Sensor Input	<i>Value</i>	12xx100A	FLOAT	RW	V	mbar*				
	<i>Value</i>	12xx0A00	FLOAT	RO	V	mbar*			Pressure value of the sensor	
Crossover	<i>Crossover Mode</i>	12050100	SINT8	RW	NV		0	2	Transition method between the sensors 0:Soft Switch → In the transition area a summation of both pressure signals 1:Hard Switch → Crossover with hysteresis 2:Target Pressure → During pressure control sensor is selected depending on Target Pressure, in other modes Soft Switch is used	
	<i>Threshold High [SFS low sensor]</i>	12050300	FLOAT	RW	NV	SFS of low sensor	0	1		
	<i>Threshold Low [SFS low sensor]</i>	12050200	FLOAT	RW	NV	SFS of low sensor	0	1	Defines the transition area respectively the hysteresis limits.	
	<i>Delay</i>	12050400	FLOAT	RW	NV		0.0	10.0	Only relevant in Crossover Mode = Hard Switch Delay start after reaching the hysteresis limit	
General Setting	Logarithmic Pressure	<i>Actual Logarithmic Value</i>	12A10101	FLOAT	RO	V				
		<i>Upper Limit Value</i>	12A10103	FLOAT	RO	V			Corresponds to the SFS according to the sensor settings	
		<i>Percent Per Decade</i>	12A10104	FLOAT	RW	NV	%			Defines the logarithmic scaling
		<i>Lowest Pressure</i>	12A10107	FLOAT	RW	NV	mbar*			Limitation of the lowest pressure if a linear sensor is connected that become <= 0
		<i>Pressure on Interface</i>	12A10105	BOOL	RW	NV				0:Linear: Linear signal is used on Interface 1:Logarithmic: Logarithmic signal is used on Interface
		<i>Use Logarithmic from Sensor</i>	12A10106	BOOL	RW	NV				If a logarithmic sensor is connected, the sensor signal can be used directly.



4.12.7.6 Interface RS232/RS485

Sub Group	Parameter	ID [hex]	Data Type	Acc	NV	Unit	Min	Max	Description
	<i>Operation Mode</i>	A1010000	SINT8	RW	NV		0	2	0:RS232 1:RS485 2:Service Interface Over RS232
Settings	<i>Baud Rate</i>	A1110100	SINT8	RW	NV		0	7	0:1200 1:2400 2:4800 3:9600 4:19200 5:38400 6:57600 7:115200
	<i>Data Bit Length</i>	A1110200	SINT8	RW	NV		0	1	0:7 1:8
	<i>Stop Bit</i>	A1110300	SINT8	RW	NV		0	1	0:1 1:2
	<i>Parity Bit</i>	A1110400	SINT8	RW	NV		0	2	0:None 1:Even 2:Odd
	<i>Topology</i>	A1110800	SINT8	RW	NV		0	1	Only used if Operation Mode = RS485 0:Full Duplex 1:Half Duplex
	<i>Network</i>	A1110900	SINT8	RW	NV		0	1	Only used if Operation Mode = RS485 0:Multiple Devices 1:Point to Point
	<i>Address</i>	A1110A00	UINT8	RW	NV		0	255	Only used if Operation Mode = RS485
	<i>Command Set</i>	A1110500	SINT8	RW	NV		0	2	0:IC 1:PM 2:PM V2 3:Tylan 4:Tylan Type 1 5:Tylan Type 2
	<i>Command Termination</i>	A1110B00	SINT8	RW	NV		0	2	0: Carriage Return + Line Feed 1: Line Feed 2: Carriage Return
	<i>R A Answer</i>								Only for Command Set = IC,PM, PMV2 0: Standard 1: i:76
	<i>Second Answer</i>								Only for Command Set = PM, PMV2 0:Off 1:Pos/Prs 2:Pos
	<i>Learn Answer</i>								Only for Command Set = PM, PMV2 0:Immediately 1:Learn End
	<i>Command t Mode</i>								Only for Command Set = PM, PMV2 0:Without Ramp Time 1:With Ramp Time
	<i>Tylan M1</i>								Only for Command Set = Tylan, Tylan Type 2 0:None 1:Gain Factor/P-Gain
	<i>Tylan X1</i>								Only for Command Set = Tylan, Tylan Type 2 0:None 1:Ramp Time/I-Gain
	<i>Tylan J3</i>								Only for Command Set = Tylan, Tylan Type 2 0:None 1:Restart
<i>Tylan V</i>								Only for Command Set = Tylan Type 1, Type 2 0:None 1:Pressure Control Selector	
Compound Commands	<i>1[20]</i>	A10A0100	UINT32	RW	NV				Parameter compilation for set and/or get several
	<i>2[20]</i>	A10A0101	UINT32	RW	NV				Parameters with one command
	<i>3[20]</i>	A10A0102	UINT32	RW	NV				Array of 20 Parameters
	<i>4[20]</i>	A10A0103	UINT32	RW	NV				

Sub Group		Parameter	ID [hex]	Data Type	Acc	NV	Unit	Min	Max	Description	
Scaling	Position	<i>Position Unit</i>	A1120101	SINT16	RW	NV		0	7	0:0 - 1 1:0 - 10 2:0 - 90 3:0 - 100 4:0 - 1000 5:0 - 10000 6:0 - 100000 7:User specific (Range is defined by Value Closest Position and Value Open Position)	
		<i>Value Closest Position</i>	A1120102	FLOAT	RW	NV					Defines the <i>User Specific</i> range
		<i>Value Open Position</i>	A1120103	FLOAT	RW	NV					
	Pressure	<i>Pressure Unit</i>	A1120201	SINT16	RW	NV		0	7	0:Pa 1:kPA 2:bar 3:mbar 4:Torr 5:mTorr 6:psi 7:User specific (Range is defined by Value Pressure 0 and Value Pressure Sensor Full Scale)	
		<i>Value Pressure 0</i>	A1120202	FLOAT	RW	NV					
		<i>Value Pressure Sensor Full Scale</i>	A1120203	FLOAT	RW	NV					Defines the <i>User Specific</i> range
Compound Commands	<i>1[20]</i>	A10A0100	UINT32	RW	NV					Parameter compilation for set and/or get several Parameters with one command Array of max 20 Parameter IDs	
	<i>2[20]</i>	A10A0101	UINT32	RW	NV						
	<i>3[20]</i>	A10A0102	UINT32	RW	NV						
	<i>4[20]</i>	A10A0103	UINT32	RW	NV						
Input Output	Digital Input 1	<i>Enable</i>	A1200101	BOOL	RW	NV		0	1		
		<i>State</i>	A1200102	BOOL	RO	V		0	1		
		<i>Functionality</i>	A1200103	SINT8	RW	NV		0	2	0:Interlock Open 1:Interlock Close 2:Hold	
		<i>Inverted</i>	A1200104	BOOL	RW	NV		0	1		
	Digital Input 2	<i>Enable</i>	A1200201	BOOL	RW	NV		0	1		
		<i>State</i>	A1200202	BOOL	RO	V		0	1		
		<i>Functionality</i>	A1200203	SINT8	RW	NV		0	2	0:Interlock Open 1:Interlock Close 2:Hold	
	Digital Output 1	<i>Inverted</i>	A1200204	BOOL	RW	NV		0	1		
		<i>Enable</i>	A1200301	BOOL	RW	NV		0	1		
		<i>State</i>	A1200302	BOOL	RO	V		0	1		
		<i>Functionality</i>	A1200303	SINT8	RW	NV		0	2	0:Open 1:Close 2:Hold	
	Digital Output 2	<i>Inverted</i>	A1200304	BOOL	RW	NV		0	1		
		<i>Enable</i>	A1200401	BOOL	RW	NV		0	1		
		<i>State</i>	A1200402	BOOL	RO	V		0	1		
		<i>Functionality</i>	A1200403	SINT8	RW	NV		0	2	0:Open 1:Close 2:Hold	
	Analog Output Pressure	<i>Inverted</i>	A1200404	BOOL	RW	NV		0	1		
		<i>Value</i>	A1200501	FLOAT	RO	V	Volt	0.0	10.0		
		<i>User Factor</i>	A1200502	FLOAT	RW	NV		0.1	10.0		
Analog Output Position	<i>User Offset</i>	A1200503	FLOAT	RW	NV		-10.0	10.0			
	<i>Value</i>	A1200601	FLOAT	RO	V	Volt	0.0	10.0			
	<i>User Factor</i>	A1200602	FLOAT	RW	NV		0.1	10.0			
	<i>User Offset</i>	A1200603	FLOAT	RW	NV		-10.0	10.0			



4.12.7.7 Power Connector IO

Sub Group	Parameter	ID [hex]	Data Type	Acc	NV	Unit	Min	Max	Description
Digital Input 1	<i>Enable</i>	37010100	BOOL	RW	NV		0	1	Logic IO available on the valve power connector
	<i>State</i>	37010200	BOOL	RO	V		0	1	
	<i>Functionality</i>	37010300	SINT8	RW	NV		0	2	0:Interlock Open 1:Interlock Close 2:Hold
	<i>Inverted</i>	37010400	BOOL	RW	NV		0	1	
Digital Input 2	<i>Enable</i>	37020100	BOOL	RW	NV		0	1	Logic IO available on the valve power connector
	<i>State</i>	37020200	BOOL	RO	V		0	1	
	<i>Functionality</i>	37020300	SINT8	RW	NV		0	2	0:Interlock Open 1:Interlock Close 2:Hold
	<i>Inverted</i>	37020400	BOOL	RW	NV		0	1	
Digital Output 1	<i>Enable</i>	37030100	BOOL	RW	NV		0	1	Logic IO available on the valve power connector
	<i>State</i>	37030200	BOOL	RO	V		0	1	
	<i>Functionality</i>	37030300	SINT8	RW	NV		0	2	0:Open 1:Close 2:Hold
	<i>Inverted</i>	37030400	BOOL	RW	NV		0	1	
Digital Output 2	<i>Enable</i>	37040100	BOOL	RW	NV		0	1	Logic IO available on the valve power connector
	<i>State</i>	37040200	BOOL	RO	V		0	1	
	<i>Functionality</i>	37040300	SINT8	RW	NV		0	2	0:Open 1:Close 2:Hold
	<i>Inverted</i>	37040400	BOOL	RW	NV		0	1	
	<i>Drive Power Enable</i>	37500000	BOOL	RO	V		0	1	Drive/Motor power can be enabled/disabled by a power connector pin (safety feature). This parameter shows if the drive/motor power is enabled. Refer to manual for further information.

4.12.7.8 Power Fail Option

Only if a Power Fail Option is installed.

Sub Group	Parameter	ID [hex]	Data Type	Acc	NV	Unit	Min	Max	Description
	<i>Enable</i>	22010000	BOOL	RW	NV				Only valid if a Power Fail Option is available
	<i>State</i>	22020000	SINT8	RO	V		0	3	0:Battery is Charging 1:Ready To Use 2:Active 3:Failure
	<i>Functionality</i>	22030000	SINT8	RW	NV		0	1	0:Open 1:Close
	<i>Delay</i>	22040000	FLOAT	RW	NV		0.0	2.0	
	<i>Battery Voltage</i>	22050000	FLOAT	RO	V				
	<i>Power Fail Cycles</i>	22060000	UINT16	RW	NV				

4.12.8 Compatible Command Sets



IC2 command syntax (p: command described above) is working independent from the set compatible **Command Set**

Location: CPA\Parameters: Interface RS232/RS485.Command Set

Parameter	Description
Command Set	IC First VAT integrated controller with RS232 Service Port
	PM VAT PM controller
	PM V2 VAT PM controller with sensor crossover
	Tylan These instruction sets are often used in controllers from other manufacturers
	Tylan Type 1
	Tylan Type 2

4.12.8.1 Command Set IC

Note:

All position and pressure values are integer values and they are scalable:

Default range pressure 0 ... 1000000

position 0 ... 100000

Location: CPA\Parameters: Interface RS232/RS485.Scaling

Command Specific Setting

Location: CPA\Parameters: Interface RS232/RS485.Settings

Parameter	Description
R S Answer	Specifies response to R (set position) and S (set pressure) commands
<i>Standard</i>	Response is 'R:' or 'S:'
<i>i:76</i>	Response is same as the i:76 request command, see below

System

Set	Resp	Get	Resp	Data		Description
				Set, Get	Resp	
c:01	c:01			aa		Access Mode: 0=Local, 1=Remote, 2=Locked
		i:80	i:80	abcdefgh		Hardware Configuration
						a Power Failure Option: 0=no, 1=yes
						b Sensor Power Supply: 0=no, 1=yes
						c Interface Type:
						2=RS232, 3=RS323 with AO, 8=RS232/RS485, 9=RS232/485 with AO
						d Sensor Inputs: 0, 1 or 2
						e Cluster Option: 0=no, 1=yes
						f External Isolation Valve: 0=no, 1=yes
						g Reserved
						h Small Size Controller: 0=no, 1=yes
		i:82	i:82	string		Firmware
		i:83	i:83	string		Serial Number

System

Set	Resp	Get	Resp	Data Set, Get Resp	Description
		i:30	i:30	abcdeef	Device Status a Access Mode: 0=Local, 1=Remote, 2=Locked b Control Mode: 0=Init,1=Homing,2=Position,3=Close,4=Open,5=Pressure Control,6=Hold,7=Learn,8=Interlock Open,9=Interlock Close,12=Power Failure,13=Safety,14=Error c PFO Disabled: 0=no, 1=yes d Warning Present: (in i:51 or i:52) 0=no, 1=yes e Reserved f Sensor Simulation Active: 0=no, 1=yes
		i:76	i:76	aaaaaa bbbbbbbcde	Compound a Pressure b Position c Access Mode: 0=Local, 1=Remote, 2=Locked d Control Mode: 0=Init,1=Homing,2=Position,3=Close,4=Open,5=Pressure Control,6=Hold,7=Learn,8=Interlock Open,9=Interlock Close,12=Power Failure,13=Safety,14=Error e Warning Present: (in i:51 or i:52) 0=no, 1=yes
s:04	s:04	i:04	i:04	abcdefg	Valve Configuration a Homing End Position: 0=Close, 1=Open b Power Failure Position: 0=Close, 1=Open c External Isolation Valve Enable: 0=no, 1=yes d Control Stroke Limitation Enable: 0=no, 1=yes e Network Failure Position f Cluster Valve Offline g Homing Start: 0=Not Isolated or Move Command, 1=c:4303 Command, 2=Open Command, 3=Move Command, 1=At Power Up h Reserved
		i:50	i:50	aaa	Fatal Error Number: 20=Limit Stop Not Detected, 21=Blocked, 22=Blocked, 40=Motor Driver
c:53	c:53	i:51	i:51	abcdefg	Warnings 1 a Service Request b Learn Data Warning c PFO not ready d Compressed Air Failure e Sensor Ratio f External Isolation Valve Warning g Cluster Slave Offline h Network Failure i:53 = nonvolatile, c :5300 = reset
c:54	c:54	i:52	i:52	abcdefg	Warnings 2 a Rom Memory b Interface c Sensor ADC d Interface ADC e Reserved f Sensor value not valid g Cluster Slave Offline h Network Failure i:54 = nonvolatile, c :5400 = reset
c:20	c:20	i:70	i:70	aaaaaaaaa	Counter Control Cycles c:2000 = reset
c:21	c:21	i:71	i:71	aaaaaaaaa	Counter Isolation Cycles c:2100 = reset
c:22	c:22	i:72	i:72	aaaaaaaaa	Counter Power Up c:2200 = reset
c:10	c:10			aa	Power Failure Option Off: 0=Off (volatile), 1=On

System

Set		Get		Data	Description
Set	Resp	Set	Resp	Set, Get Resp	
c:82	c:82			aa	Reset: 1=Reset

Positon

Set	Resp	Get	Resp	Data	Description
				Set, Get Resp	
		A:	A:	aaaaaa	Actual Position
C:	C:				Close
O:	O:				Open
R:	R:	i:38	i:38	aaaaaaaa	Position Control, a Target Position
H:	H:				Hold
N:	N:				Position Mode (Release Hold)
V:	V:	i:68	i:68	aaaaaa	Speed: 0 - 1000

Pressure Reading

Set	Resp	Get	Resp	Data	Description
				Set, Get Resp	
		P:	P:	aaaaaaaa	Actual Pressure
s:01	s:01	i:01	i:01	abccccc	Setup
					a Sensor Mode
					0=No Sensor 1=Sensor1 Only 3=Sensor2 Only 2=Sensor1 High, Sensor2 Low, Crossover Soft Switch 4=Sensor2 High, Sensor1 Low, Crossover Soft Switch 5=Sensor1 High, Sensor2 Low, Crossover High Disabled 6=Sensor2 High, Sensor1 Low, Crossover High Disabled 7=Sensor1 High, Sensor2 Low, Crossover Target Pressure 8=Sensor2 High, Sensor1 Low, Crossover Target Pressure 9=Sensor1 High, Sensor2 Low, Crossover Hard Switch 10=Sensor2 High, Sensor1 Low, Crossover Hard Switch
					b Zero Adjust Enable 0=disable, 1=enable
					c Sensor Factor Ratio between the sensors * 100 Example: Sensor 1=1Torr, Sensor 2=100mTorr → c = 010000
Z:	Z:				Zero
		i:60	i:60	aaaaaaaa	Offset Sensor 1
		i:61	i:61	aaaaaaaa	Offset Sensor 2
		i:62	i:62	aaaabbbb	Offsets: a Sensor 1, b Sensor 2, range -140 ... +150 of 1000
		i:64	i:64	aaaaaaaa	Pressure Sensor 1
		i:65	i:65	aaaaaaaa	Pressure Sensor 2
c:6002	c:60			aaaaaaaa	Pressure Alignment, a = Alignment pressure
c:6102	c:61			aaaaaaaa	Pressure Alignment, a = Alignment pressure
c:90	c:90			aa	Pressure Simulation, 0=Off, 1=On

Pressure Control

Set	Resp	Get	Resp	Data		Description
				Set, Get	Resp	
S:	S:	i:38	i:38	aaaaaaa		Pressure Control, a Target Pressure
H:	H:					Hold
K:	K:					Pressure Control Mode (Release Hold)
s:02	s:02	i:02	i:02	abcdeeff		Pressure Control Setup
s:02a		i:02a				<ul style="list-style-type: none"> a Controller: 0=Adaptive,1=PI Downstream,2=PI Upstream,3=Softpump b Gain Factor (Adaptive) 0=0.1,1=0.13,2=0.18,3=0.23,4=0.32,5=0.42,6=0.56,7=0.75,8=1.0,9=1.33,A=1.78,B=2.37,C=3.16,D=4.22,E=5.62,F=7.5,G=0.0001,H=0.0003,I=0.001,J=0.003,K=0.01,L=0.02,M=0.05 c Sensor Delay (Adaptive) 0=0,1=0.02,2=0.04,3=0.06,4=0.08,5=0.1,6=0.15,7=0.2,8=0.25,9=0.3,A=0.35,B=0.4,C=0.5,D=0.6,E=0.8,F=1.0 sec d Ramp Time 0=0,1=0.5,2=1.0,3=1.5,4=2.0,5=2.5,6=3.0,7=3.5,8=4.0,9=4.5,A=5.0 sec e P-Gain (PI and Softpump) 0=0.001,1=0.0013,2=0.0018,3=0.0024,4=0.0032,5=0.0042,6=0.0056,7=0.0075,8=0.01,9=0.013,10=0.018,11=0.024,12=0.032,13=0.042,14=0.056,15=0.075,16=0.1,17=0.13,18=0.18,19=0.24,20=0.32,21=0.42,22=0.56,23=0.75,24=1.0,25=1.3,26=1.8,27=2.4,28=3.2,29=4.2,30=5.6,31=7.5,32=10,33=13,34=18,35=24,36=32,37=42,38=56,39=75,40=100 f I-Gain (PI and Softpump): Same values as P-Gain
s:02a00	s:02	i:02a00	i:02	value		Sensor Delay: 0.0 – 1.0sec, a = Controller: A,B,C,D
s:02a01	s:02	i:02a01	i:02	value		Ramp Time: 0.0 – 1000000.0sec, a = Controller: A,B,C,D
s:02a02	s:02	i:02a02	i:02	value		Ramp Mode: 0=constant time, 1=constant slope, a = Controller: A,B,C,D
s:02a03	s:02	i:02a03	i:02	value		Control Direction: 0=downstream, 1=upstream, a = Controller: A,B,C,D
s:02a04	s:02	i:02a04	i:02	value		Gain Factor: 0.0001 – 7.5 (Control Algorithm = Adaptive) P-Gain: 0.001 – 100.0 (Control Algorithm = PI or Softpump) a = Controller: A,B,C,D
s:02a05	s:02	i:02a05	i:02	value		I-Gain: 0.001 – 100.0, a = Controller: A,B,C,D
s:02a06	s:02	i:02a06	i:02	value		Ramp Type: 0=linear, 1=logarithmic, 2=exponential, a = Controller: A,B,C,D
s:02a10	s:02	i:02a10	i:02	value		Control Algorithm: 0=Adaptive, 1=PI, 2=Softpump, a = Controller: A,B,C,D
s:02a15	s:02	i:02a15	i:02	value		Learn Bank, a = Controller: A,B,C,D 0=Learn Bank 1, 1=Learn Bank 2, 1=Learn Bank 3, 1=Learn Bank 4
s:02Z00	s:02	i:02Z00	i:02	value		Control Unit Selector: 0 .. 3
s:02Z10	s:02	i:02Z10	i:02	value		Save Volatile: 0=nonvolatile, 1=volatile
L:	L:	i:34	i:34	aaaaaaa		Learn , a Pressure Limit
i:32	i:32			abcdefgh		Learn Status <ul style="list-style-type: none"> a Running b Data Not Valid c Canceled: 1=By User, 2=By Learn Routine d Pressure At Open high or negative e Pressure At Close low f Pressure Decrease g Pressure Instable h Reserved
s:08	s:08	i:08	i:08	aaaaaa		Learn Open Speed: 0 - 1000
		i:36	i:36	abbbbbbb		Pressure Control Status: <ul style="list-style-type: none"> a Adaptive control state: 0=roughly, 1=fine b Reserved

Interface

Set	Resp	Get	Resp	Data		Description
				Set, Get	Resp	
s:20	s:20	i:20	i:20	abc	defgh	Setup1 a Baud Rate: 0=600,1=1200,2=2400,3=4800,4=9600,5=19200,6=38400,7=57600,8=115200,9=230400 b Parity Bit: 0=Even, 1=Odd, 2=Mark, 3=Space c Data Length: 0=7bit, 1=8bit d Stop Bit: 0=1bit, 1=2bit e Command Set: 0=IC, 1=PM f Digital Input 1: 0=Interlock Open, 1=Interlock Open Inverted, 2=Disabled g Digital Input 2: 0=Interlock Close, 1=Interlock Close Inverted, 2=Disabled h Second Answer (PM Command Set): 0=disabled, 1=enabled
s:21	s:21	i:21	i:21	abbbb	b	Setup2 a Position Range: 0=1000, 1=10000, 2=100000 b Pressure Range: 1000 .. 100000
s:22	s:22	i:22	i:22	abbb	cdee	Setup3 a Operation Mode: 0=RS232, 1=RS485, 2=RS485 Peer to Peer b Device Address: 0 ... 999 c Duplex Mode: 0=Full, 1=Half d Termination: 0=LF (CR/LF), 1=CR e Reserved

Errors

Description	Error message
Protocol	
Parity error	E:000001
Input buffer overflow (to many characters)	E:000002
Framing error (data length, number of stop bits)	E:000003
Overrun (Service interface: Input buffer register overflow)	E:000004
Commands	
CR or LF missing	E:000010
: missing	E:000011
Invalid number of characters (between : and)	E:000012
Invalid value	E:000023
Value out of range	E:000030
Hardware	
Pressure mode, Zero or Learn without Sensor	E:000040
Command not applicable for hardware configuration	E:000041
Setup	
ZERO disabled	E:000060
Device Status	
Command not accepted due to local operation	E:000080
Command not accepted, Service Interface locked	E:000081
Command not accepted due to synchronization, CLOSED or OPEN by digital input, safety mode or fatal error	E:000082
Not accepted calibration and test mode	E:000089

4.12.8.2 Command Set PM

Note:

All position and pressure values are integer values.

Default Range pressure 0 ... 1000, position 0 ... 1000 (see Position and Pressure Units)

Command Specific Settings

Location: CPA\Parameters: Interface RS232/RS485.Settings

Parameter	Description
R S Answer	Specifies response to R (set position) and S (set pressure) commands <i>Standard</i> Response is 'R:' or 'S:' <i>i:76</i> Response is same as the i:76 request command, see below
Second Answer	First answer after receiving the command (Standard) Second answer after reaching the setpoint <i>Off</i> Only first answer <i>Pos/Prs</i> Second answer to commands O,C,R,S <i>Pos</i> Second answer to commands O,C,R
Learn Answer	Immediately After receiving the L: command (Standard) Learn End Response after end of learning, no communication until the learn end.
Command t Mode	Setup t command without Ramp Time Setup t command with Ramp Time

System

Set	Resp	Get	Resp	Data		Description
				Set, Get	Resp	
U:01	U:01					Access Mode Local
U:02	U:02					Access Mode Remote
U:03	U:03					Access Mode Locked
U:04	U:04					Release Access Mode Locked (Remote)
		l:	l:	String		Access Mode: _LOCAL, REMOTE, LOCKED
		i:01	i:01	String		Software Version
c:	c:	n:	n:	aaaaaaaa		Cycle Counter, n: = reset
		M:	M:	String		Control Mode: __POS, _PRESS
		T:	T:	String		Self-Test: ___OK, PAR-ER, ROM-ER
U:14	U:14					Disable PFO
U:15	U:15					Enable PFO
U:16	U:16					Disable Logic Input
U:17	U:17					Enable Logic Input
		v:	v:	String		Software Revision Level

Position Control

Set	Resp	Get	Resp	Data		Description
				Set, Get	Resp	
		A:	A:	aaaaaa		Actual Position
C:	C:					Close
O:	O:					Open
R:	R:			aaaaaa		Position Control, a Target Position
H:	H:					Hold
N:	N:					Position Mode (Release Hold)
V:	V:			aaaaaa		Speed: 0 - 1000
		p:	p:	String		Position Status: ___OK, POS-ER, AIR-ER
		i:04	i:04	V1:aV2:b		Valve Status: a Valve 1, 0=inactive, 1=active b Valve 2, 0=inactive, 1=active → not used
		i:05	i:05	V1:aV2:b		Valve Position a Valve 1, 0=closed,1=opem,2=intermediate b Valve 2, 0=closed,1=opem,2=intermediate → not used

Pressure Control

Set	Resp	Get	Resp	Data		Description
				Set, Get	Resp	
S:	S:	W:	W:	aaaaaa		Pressure Control, a Target Pressure
H:	H:					Hold
K:	K:					Pressure Control Mode (Release Hold)
L:	L:			aaaaaa		Learn , a Pressure Limit
		i:07	i:07	String		Learn Status: _BUSY, _DONE, _NEED

Pressure Reading

Set	Resp	Get	Resp	Data		Description
				Set, Get	Resp	
		P:	P:	aaaaaa		Actual Pressure
		X:	X:	aaaaaa		Compound
				bbbbbb		a Pressure
				ccccc		b Sensor 1 Pressure
						c Sensor 2 Pressure
Z:	Z:					Zero
		z:	z:	aaaaa		Sensor Offset: range +140 of 1000
U:12	U:12					Select Sensor 1
U:13	U:13					Select Sensor 2

Setup

Set	Resp	Get	Resp	Data		Description
				Set, Get	Resp	



s:1	s:1	i:02	i:02	abcdef	Setup Sensor 1 and Sensor 2
s:2	s:2	i:03	i:03		a Voltage Range not used
					b Display Range not used
					c Display Unit not used
					d Gain Factor
					0=0.1,1=0.13,2=0.18,3=0.23,4=0.32,5=0.42,6=0.56,7=0.75,8=1.0,9=1.33,A=1.78, B=2.37,C=3.16,D=4.22,E=5.62,F=7.5,G=0.0001,H=0.0003,I=0.001,J=0.003,K=0.01, L=0.02,M=0.05
					e Sensor Type not used
					f Zero Adjust: 0=disabled, 1=enabled
t:1	t:1	i:12	i:12	abcccc_	Setup Sensor 1 and Sensor 2
t:2	t:2	i:13	i:13		a Ramp Time
					0=0.0,1=0.5,2=1.0,3=1.5,4=2.0,5=2.5,6=3.0,7=3.5,8=4.0,9=4.5,A=5.0 sec
					b Sensor Delay
					0=0,1=0.02,2=0.04,3=0.06,4=0.08,5=0.1,6=0.15,7=0.2, 8=0.25,9=0.3,A=0.35,B=0.4,C=0.5,D=0.6,E=0.8,F=1.0 sec
					c Reserved

Errors

Description	Error message
Parity error	E:000001
CR or LF missing	E:000002
: missing	E:000003
Wrong Letter Code	E:000004
Numeric value not given in 6 digits	E:000005
Numeric value out of range	E:000006
Pressure Mode, Zero or Learn have been selected with no sensor connected	E:000007
Instruction given in Access Mode Local	E:000008
Logic Input active	E:000009
Error with Learn	E:000101
Error With Zero, Zero Disabled	E:000102

4.12.8.3 Command Set PM V2

Note:

This command set is quite the same as Command Set PM.

Differences: Same commands as Command Set PM except Setup (s: instead of s:1 and s:2)
 Communication range for Pressure is settable (see s: command below)
 Additional commands: U:18, U:19; U:20, i:08, i:09

Set	Resp	Get	Resp	Data		Description
				Set, Get	Resp	
s:	s:	i:02	i:02	abcdefg		Setup Sensor 1 and Sensor 2 a Sensor Type 0=mBar, 1=Torr b Sensor 1 Full scale c Sensor 2 Full scale 0=0.01,1=0.02,2=0.025,3=0.05,4=0.1,5=0.2,6=0.25,7=0.58=1.0,9=2.0,A=2.5,B=5.0C=10, D=20,E=25,F=50G=100,H=200,I=25,J=500,K=1000,L=not connected d Display Unit not used 0 = mbar, 1 = μ bar, 2 = Torr, 3 = mTorr, 4 = Pa, 5 = kPa, 6 = position mode only e Communication Range Pressure 0 = 0 - 1000, 1 = 0 - 2000, 2 = 0 - 2500, 3 = 0 - 5000, 4 = 0 - 10000, 5 = 0 - 20000 6 = 0 - 25000, 7 = 0 - 50000, 8 = 0 - 100000 f Gain Factor 0=0.1,1=0.13,2=0.18,3=0.23,4=0.32,5=0.42,6=0.56,7=0.75,8=1.0,9=1.33,A=1.78,B=2.37, C=3.16,D=4.22,E=5.62,F=7.5,G=0.0001,H=0.0003,I=0.001,J=0.003,K=0.01,L=0.02,M=0.05 g Zero Adjust: 0=disabled, 1=enabled
U:18	U:18					Use Sensor 1
U:19	U:19					Use Sensor 2
U:20	U:20					Use Both Sensors
		i:08	i:08	aaaaaa		Offset Sensor 1
		i:09	i:09	aaaaaa		Offset Sensor 2

Errors

Note: This are additional errors to the errors in the PM command set

Description	Error message
Error with ZERO - PM controller is switched in control mode PRESSURE MODE - ZERO function disabled with setup	E:000200
Sensor with the higher full scale: zero offset higher than +/- 0.14V	E:000201
Sensor with the lower full scale: zero offset higher than +/- 0.14V	E:000202
Sensor setup error, The full scale ration sensor1/sensor2 is either >100 or <= 1.0	E:000203
RS232 commands U:18, U:19 or U:20 sent with 1 or no sensor connected	E:000204

4.12.8.4 Command Set Tylan

Command Specific Settings

Location: CPA\Parameters: Interface RS232/RS485.Settings

Parameter	Description
Tylan M1	Use of M command (Control Gain) None Gain Factor/P-Gain
Tylan X1	Use of X command (Control Lead) None Ramp Time/I-Gain
Tylan J1	Use of J command (Valve Type) None Restart

Commands

Note: Set commands have no response

Set	Get	Response	Description	Config
O			Open	
C			Close	
H			Hold	
Vx.x			Position Control with Target Position	
Dn			Setpoint Select n Setpoint Nr 1..5	
Snx.x	Rm	Snx.x	Setpoint Memory n Setpoint Nr 1..5 m Setpoint Request Nr 1..4,10	
Tnx	Rm	Tnx	Setpoint Type n Setpoint Nr 1..5 m Request Nr 26..30 0=Position, 1=Pressure	
Mnx.x	Rm	Mnx.x	Control Gain n Setpoint Nr 1..5 m Request Nr 46..50	Tylan M1
Xnx.x	Rm	Xnx.x	Control Lead n Setpoint Nr 1..5 m Request Nr 41..45	Tylan X1
Ax.x			Pressure Alignment with Target Value	
Z			Zero	
Jx	R23	Jx	Valve Type	Tylan J3
	R5	Px.x	Actual Pressure	
	R6	Vx.x	Actual Position	
	R0	S0x.x	Analog Setpoint Value	1
	R24	Ax	Analog Setpoint Range 0=5Volt, 1=10Volt	1
T0x	R25	T0x	Analog Setpoint Type	
	R7	Mxyz	Alternate System Status x Value of Command X y 0=Controlling, 2=Open, 4=Close z 0=Pressure <= 10%SFS, 1=Pressure > 10%SFS	
	R8	C	Slipped (no effect)	
	R9	oclxs	OOCCLXXS	
	R11	P10	Low Threshold process limit #1	1
	R12	P20	High Threshold process limit #1	1

Set	Get	Response	Description	Config
	R13	P30	Low Threshold process limit #2	1
	R14	P40	High Threshold process limit #2	1
	Rm	In	Soft start Rate Setpoint n Setpoint Nr 1..5 m Request Nr 15 .. 19	1
	R20	I6	Soft start Rate Setpoint Analog	1
	R21	I7	Soft start Rate Open	1
	R22	I8	Soft start Rate Close	1
	R31		Position Indicator Range Output	1
	R32		Direct Reverse Control	1
	R33		Sensor Range	1
	R34		Pressure Units	1
	R35		Sensor Voltage Range	1
	R36		Sensor Type	1
	R37		System Status	1
	R38		Software Version	1
	R39		Hardware	1
	R40		Valve Response To Power Failure	1
	R51		Type Of Control	1
	R52		Checksum Error	1
	GSN		Serial Number	
	GSR		Streaming (Ethernet)	
	SSRxy		Streaming (Ethernet)	

4.12.8.5 Command Set Tylan Type 2

This command set is the same as **Tylan**, except for the following settings and commands.

Command Specific Settings

Location: CPA\Parameters: Interface RS232/RS485.Settings

Parameter	Description
Tylan V	Use of V command (Controller Selector) <i>None</i> <i>Pressure Control Selector</i>

Commands

Note: Set commands have no response

Set	Get	Response	Description	No Effect
L			Learn	
Vx			Control Mode (Controller Selector) 0=Adaptive, 1=PID	
	R6	Vxxxx.xx	Position	

4.12.8.6 Command Set Tylan Type 1

Command Specific Settings

Location: CPA\Parameters: Interface RS232/RS485.Settings

Parameter	Description
Tylan V	Use of V command (Controller Selector) <i>None</i> <i>Pressure Control Selector</i>

Commands

Note: Set commands have no response

Set	Get	Response	Description	No Effect
O			Open	
C			Close	
H			Hold	
Sx.x	R1		Pressure Control with Target Pressure	
Px.x			Position Control with Target Position	
Z1			Zero Analog set point	
Z2			Zero Pressure	
A			Go to analog set point level and control	
B			Reset the controller	
D			Same as A	
Vx			Control Mode (Controller Selector) 0=Adaptive, 1=PID	
F1			Learn analog set point full scale	
F2			Learn analog pressure full scale	
Jx	R23	Jx	Valve Type	Tylan J3
Gx.x	R2	Gx.x	Control Gain	1
Lx.x	R3	Lx.x	Control Lead	1
	R4		Analog set point	
	R5	Px.x	Actual Pressure	
	R6	Vx.x	Actual Position	
	R8	Cx	Slipped 0=OK, 1=Slipped	
	R10	ZAx.x	Pressure Alignment with Target Pressure	
	R11	ZB	Pressure Zero	
	R12	FA	Set point full scale	
	R13	FB	Pressure full scale	

4.12.9 Digital IO on the RS interface connector

There are 2 digital inputs, 2 digital outputs and 2 analog outputs. Digital inputs may be operated either by switches or by voltage sources.



Digital inputs on the **POWER and INTERFACE connector** have the **same priority**.




Active **digital inputs** have **higher priority than RS232/RS485** commands.




Do not connect other pins than indicated in the schematics above!
Use only screws with 4-40UNC thread for fastening the DA-15 / DB-25 connector!

4.12.9.1 Schematic, Switches for digital inputs

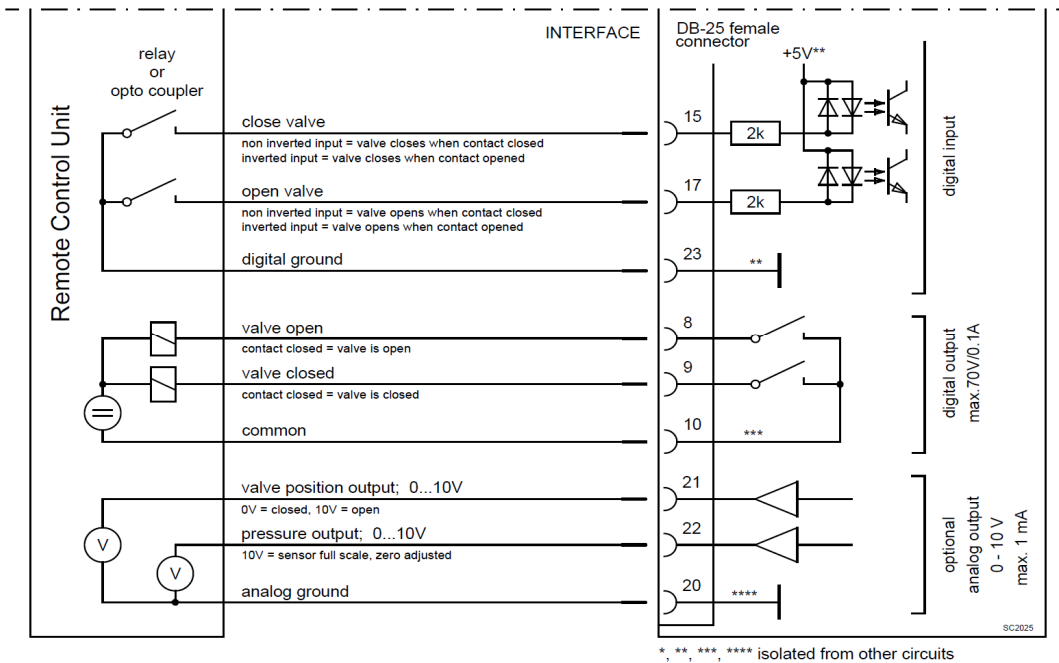

4.12.9.2 Schematic, Voltage source for digital inputs

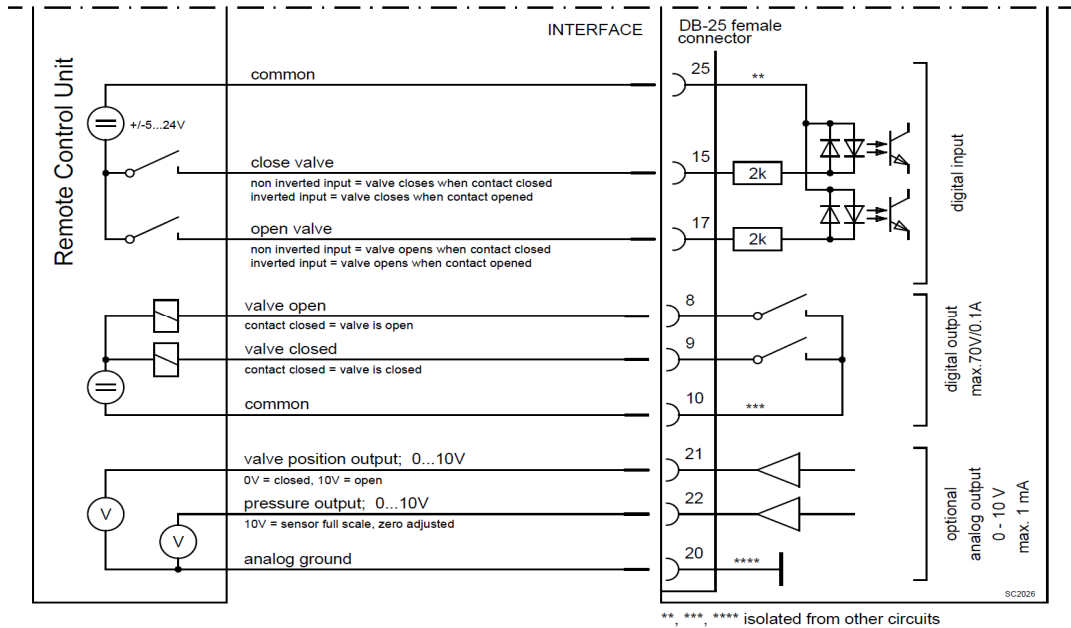

4.12.9.3 Digital Input

Pinout

Pin	Default Function
15	INPUT 1 Interlock Close
17	INPUT 2 Interlock Open
23	COMMON Switches
25	COMMON Voltage Source

Configuration

Parameter	Description													
Enable	1 Enables the input													
State	0 Not active 1 Active													
Functionality	0 Interlock Open 1 Interlock Close 2 Hold													
Inverted	<table border="1"> <thead> <tr> <th>Input</th> <th>State</th> <th>Function</th> </tr> </thead> <tbody> <tr> <td rowspan="2">0 Not Inverted</td> <td>Off</td> <td>0 Off</td> </tr> <tr> <td>On</td> <td>1 On</td> </tr> <tr> <td rowspan="2">1 Inverted</td> <td>Off</td> <td>1 On</td> </tr> <tr> <td>On</td> <td>0 Off</td> </tr> </tbody> </table>	Input	State	Function	0 Not Inverted	Off	0 Off	On	1 On	1 Inverted	Off	1 On	On	0 Off
Input	State	Function												
0 Not Inverted	Off	0 Off												
	On	1 On												
1 Inverted	Off	1 On												
	On	0 Off												



The INTERLOCK function has priority over the remote interface (HOLD does not)
INTERLOCK CLOSE has priority over INTERLOCK OPEN

4.12.9.4 Digital Output

Pinout

Pin	Default Function
8	OUTPUT 1 Open
9	OUTPUT 2 Closed
10	COMMON

Configuration

Parameter	Description													
Enable	1 enables the output													
State	0 Not active 1 Active													
Functionality	0 OPEN valve is fully open 1 CLOSE valve is fully closed (isolated if valve has an isolation function) 2 HOLD valve is in hold state													
Inverted	<table border="1"> <thead> <tr> <th>Function</th> <th>State</th> <th>Output</th> </tr> </thead> <tbody> <tr> <td rowspan="2">0 Not Inverted</td> <td>inactive</td> <td>0 Off</td> </tr> <tr> <td>active</td> <td>1 On</td> </tr> <tr> <td rowspan="2">1 Inverted</td> <td>inactive</td> <td>1 On</td> </tr> <tr> <td>active</td> <td>0 Off</td> </tr> </tbody> </table>	Function	State	Output	0 Not Inverted	inactive	0 Off	active	1 On	1 Inverted	inactive	1 On	active	0 Off
Function	State	Output												
0 Not Inverted	inactive	0 Off												
	active	1 On												
1 Inverted	inactive	1 On												
	active	0 Off												

4.12.9.5 Analog Output

Pinout

Pin	Function	Range
21	OUTPUT 1	Position 0V (Close) .. 10V (Open)
22	OUTPUT 2	Pressure 0 .. 10V SFS
20	COMMON	

Configuration

Parameter	Description
Value	Indicate the output voltage
User Factor	Scaling of the Analog Output
User Offset	Example: The desired output should be 1-9V $User\ Factor = 10V / (MaxVolt - MinVolt) = 10 / 8 = 1.25$ $User\ Offset = 1.0$


4.13 Pressure Sensor

4.13.1 Mechanical connection requirements

Fast and accurate pressure control requires a fast sensor response. Sensor response time: $< 50\text{ms}$. The sensor is usually connected to the chamber by a pipe. The line must be short enough and the conductance must not be reduced by a too small line diameter or a low conductance shut-off valve. To maintain that the response time is not degraded by this connection it needs to meet the following requirements:

- Inner diameter of connection pipe: $\geq 10\text{ mm}$
- Total length $L1 + L2$: $\leq 300\text{ mm}$

The total conductance value must include all valves and limiting orifices that may also be present. Make also sure that there is no obstruction in front of sensor connection port inside the chamber. The sensor should also be mounted free of mechanical shock and vibration. Dynamic stray magnetic fields may introduce noise to sensor output and should be avoided or shielded.

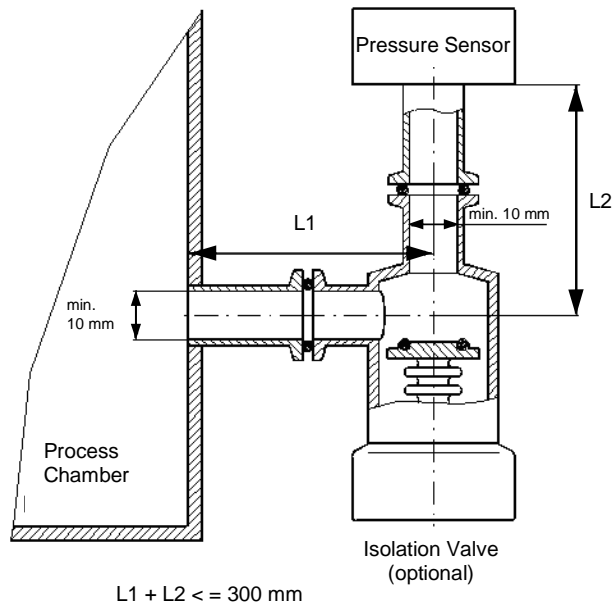

4.13.2 Configuration

The CPA window shows a good overview of the sensor settings:

- The valve supports 2 sensors.
- Zero Adjust is for offset compensation of linear sensors
- Crossover is automatic switch over between 2 linear sensors

The screenshot shows the VAT Pressure Sensor configuration interface. It features two columns for 'sensor 1' and 'sensor 2'. Each sensor column includes checkboxes for 'Available' and 'Enable', dropdown menus for 'Input Source' and 'Scale', and a 'range' section with a 'Data Unit' dropdown and numerical input fields for 'Upper Limit Data Value [mTorr]' and 'Lower Limit Data Value [mTorr]'. Below these are 'zero adjust' and 'filter' sections, each with an 'Enable' checkbox, a 'Time [s]' input field, and a 'Value [mTorr]' input field. At the bottom, a 'zero adjust' section includes a 'Sensor Selection' dropdown (set to 'Sensor 1 + Sensor 2'), a 'Target Pressure [mTorr]' input field (set to 0), and an 'Execute Zero Adjust' button. A 'crossover' section includes a 'Crossover Mode' dropdown (set to 'Soft Switch') and two threshold input fields: 'Threshold High [SFS low sensor]' (set to 1) and 'Threshold Low [SFS low sensor]' (set to 0.95). A note on the right side of the bottom section reads: 'Note: Prior to executing a zero adjust: - Open Valve - Ensure no gas-flow in system'.

Location: CPA/Navigation/Parameters: Pressure Sensor.Sensor 1, Pressure Sensor.Sensor 2

Parameter	Description
Available	Set to 'True' if a sensor is connected
Enable	Set to 'True' if the sensor signal is used for pressure control
Input Source	<p>'Analog' Sensor has an analog voltage interface and is direct connected to the valve.</p> <p>'Digital' Sensor has an EtherCAT interface and is connected to the EtherCAT bus</p> <p>'Simulation' Testing the valve and pressure control without being connected to the system</p>
Range.Scale	<p>Select type of the sensor signal</p> <p>'Linear'</p> <p>'Logarithmic'</p> <p>Most gauges are linear type gauges.</p>
Range.Data Unit	<p>Set the pressure data unit of the gauge:</p> <p>Pa, kPa, bar, mbar, Torr, mTorr, psia, psig</p>
Range.Upper Limit Data Value Range.Lower Limit Data Value	<p>Set the upper limit and lower limit of the gauge in the unit of "Range.Data Unit"</p> <p>Example for a 250mTorr linear sensor: Upper Limit = 250.0 Lower Limit = 0.0</p>
Range.Upper Limit Voltage Value Range.Lower Limit Voltage Value	<p>These parameters are only used for gauges with analog voltage interface.</p> <p>The values corresponds to Range.Upper Limit Data Value and Range Lower Limit Data Value</p> <p>Example: Upper Limit: 10.0V → 250mTorr Range Upper Limit Data Value Lower Limit: 0.0V → 0.0mTorr Range Lower Limit Data Value</p>
Filter.Enable	'True' enables the filter
Filter.Type	<p>Set the filter type, which should be applied to the related Sensor Input:</p> <p>Low-pass, Low-pass Simple, Median, Moving Average, Line Frequency Suppression, FIR custom</p>
Filter.Time	<p>Set filter time in the range of 0.0 to 1.0 second.</p> <p>Note: Filter delays the sensor signals which is detrimental for pressure control</p>
Value	The actual Pressure value of the regarding Sensor

4.13.3 Crossover (2 sensor operation mode)

If two sensors are connected to the controller uses both for pressure control and pressure feedback. The controller selects each sensor or blends both sensor signals to the “**Actual Pressure**” used for control and feedback. Three different modes are selectable.

Location: CPA/Navigation/Parameters: Pressure Sensor.Crossover

Parameter	Description
Crossover Mode	Crossover between 2 sensors (see below)
Threshold High [SFS low sensor]	Defines the crossover area (see below)
Threshold Low [SFS low sensor]	The value is related to sensor full scale of low sensor (0.1 means 10% of sensor full scale of low sensor)
Delay	Switch over delay in Crossover Mode 'Hard Switch'

Crossover Mode Soft Switch

Between the *Threshold Low* and *Threshold High* the controller blends both pressure signals to the actual pressure.

When to use
This is the standard mode. Both pressure signals need to match in the crossover range otherwise crossover effect result (nonlinearity). Sensor full scale ratio low range to high range sensor must not exceed 1:100

Crossover Mode Hard Switch

Switching between sensors according to the hysteresis threshold levels and an optional delay.

When to use
Preferred setting if the sensor signals do not fit together in the crossover area (for example if sensor ratio is high).

Crossover Mode Target Pressure

If Target Pressure is below low range sensor full scale low sensor is used; otherwise high range sensor.

When to use
As there is no switchover during pressure control while using this setting, undesired effects like nonlinearity or continuous switching between sensors don't occur.

Note
While in position control mode, 'Soft Switch' mode is used

4.13.4 Zero Adjust

Zero Adjust allows for the compensation of the sensor offset voltage.

Note: A maximum offset voltage of +/- 1.4 V can be compensated.

Location: CPA/Navigation/Parameters: Pressure Sensor.Zero Adjust

Parameter	Description
Zero Adjust.Sensor Selection	Select the sensor for the zero adjust: <ul style="list-style-type: none"> • Sensor 1 + 2 • Sensor 1 • Sensor 2
Zero Adjust.Target Pressure	Normally this parameter is set to 0 in case the process chamber is fully evacuated (pressure <=1‰ of sensor full scale). If not you can align the sensor value to a known pressure (displayed on another readout in the system). In this case set Target Pressure to the known pressure. Note: Target Pressure is in the unit of pressure, see chapter «Scaling of Pressure and Position Values»
Zero Adjust.Execute	1: Start the zero adjust 2: Clear offset value After executing value return to 0
Sensor 1.Enable Sensor 2.Enable	0: It is not possible to execute a zero adjust. A present offset value is ignored 1: It is possible to execute a zero adjust. A present offset value is respected.
Sensor 1.Offset Value [SFS] Sensor 2.Offset Value [SFS]	Value which is deducted from the measured sensor value. The value is related to sensor full scale (0.1 means 10% of sensor full scale)

Performing a zero adjust:

1. Turn the gas flow off
2. Fully open the valve
3. Wait until the sensor signal is not shifting anymore. Refer to manual of sensor manufacturer for warm up time.
4. Wait until process chamber is evacuated.



Do not perform Zero Adjust, if the base pressure of your vacuum system is higher than 1‰ of sensor full scale. We recommend disabling Zero Adjust function or using of Zero Adjust.Target Pressure other than 0.0 in this case. Otherwise incorrect pressure reading is the result.

5. Perform zero with setting of Zero Adjust.Execute to 1
6. Check parameter Actual Pressure if the pressure is shifted as expected

4.13.5 Logarithmic Pressure

To control wide pressure ranges, it is advantageous to control with a logarithmic signal. Note: Only the PI and the Softpump controller can control with a logarithmic signal. Adaptive controller needs a linear signal.

Location: CPA/Parameters: Pressure Sensor.General Settings.Logarithmic Pressure

Parameter	Description
Upper Limit Value	Highest Value of the logarithmic value. Corresponds to the sensor full scale defined in the sensor setup.
Percent Per Decade	Defines the logarithmic scale
Lowest Pressure	Defines the lowest pressure that is converted to a logarithmic value. Corresponds to the smallest valid signal.
Pressure On Interface	Defines which signal scale is used on the interface. Linear Logarithmic
Use Logarithmic Sensor	Set to True to use direct the signal of a logarithmic sensor. Percent Per Decade is then not used. This parameter becomes active only if Pressure Sensor.Sensor X.Range.Scale is set to Logarithmic
Actual Logarithmic Values	Shows the logarithmic value. Full Scale is Upper Limit Value

EXAMPLE:

Sensor 1 linear 1000Torr, Sensor 2 linear 10Torr

With these sensors the measuring range is: 0.001Torr ... 1000Torr, so we cover 6 decades

Percent Per Decade	15 With 15% we cover 6.6 decades (100/15 = 6.6)														
Lowest Pressure	0.001Torr (~1mV of Low Sensor)														
Upper Limit Value	Shows 1000 (because SFS is 1000)														
Actual Logarithmic Value	Torr														
Example Values	<table border="0"> <tr><td>1000</td><td>1000</td></tr> <tr><td>850</td><td>100</td></tr> <tr><td>700</td><td>10</td></tr> <tr><td>550</td><td>1</td></tr> <tr><td>400</td><td>0.1</td></tr> <tr><td>250</td><td>0.01</td></tr> <tr><td>100</td><td>0.001</td></tr> </table>	1000	1000	850	100	700	10	550	1	400	0.1	250	0.01	100	0.001
1000	1000														
850	100														
700	10														
550	1														
400	0.1														
250	0.01														
100	0.001														
Pressure On Interface	Linear We want the logarithmic signal only on the pressure controller but not on the interface.														
Use Logarithmic Sensor	False Since the sensor signal is linear, there is no possibility to use a logarithmic signal from the sensor.														

Application: Soft Pump

Use of **Actual Logarithmic Value** in the pressure controller: Set **Pressure Control.Controller X.Control Settings.Pressure Scaler** to **Logarithmic**.

Note: Ramp value use logarithmic signal too, so **Ramp.Slope** is related to logarithmic scale.

For above example: **Slope [Torr]** = 15 means 15 of 1000 per Second what is 1.5% what corresponds to 0.15 Decade per Second.


4.14 Power Connector Digital IO



Do not connect other pins than indicated in the schematics!
Use only screws with 4-40UNC thread for fastening the DA-15 connector!

4.14.1 Digital Input

4.14.1.1 Connection

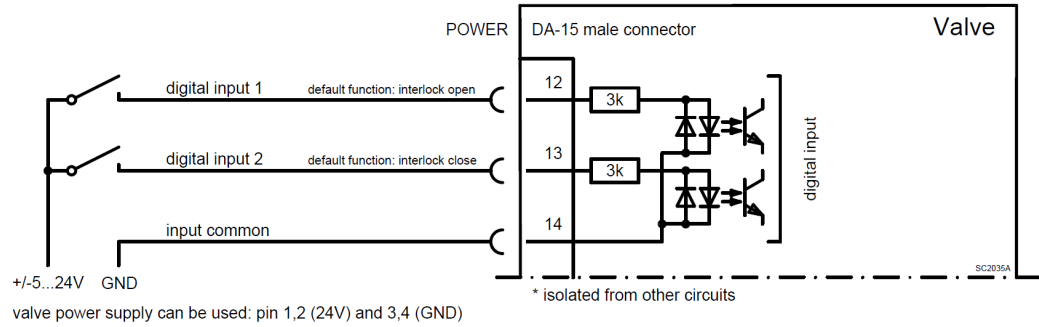

Pin	Default Function
12	INPUT 1 Interlock Open
13	INPUT 2 Interlock Close
14	COMMON

4.14.1.2 Configuration

Location: CPA/Navigation/Parameters: Power Connector IO.Digital Input


Parameter	Description													
Enable	1 enables the input													
State	0 Not active 1 Active													
Functionality	0 Interlock Open 1 Interlock Close 2 Hold													
Inverted	<table border="1"> <thead> <tr> <th>Input</th> <th>State</th> <th>Function</th> </tr> </thead> <tbody> <tr> <td rowspan="2">0 Not Inverted</td> <td>Off</td> <td>0 Off</td> </tr> <tr> <td>On</td> <td>1 On</td> </tr> <tr> <td rowspan="2">1 Inverted</td> <td>Off</td> <td>1 Off</td> </tr> <tr> <td>On</td> <td>0 On</td> </tr> </tbody> </table>	Input	State	Function	0 Not Inverted	Off	0 Off	On	1 On	1 Inverted	Off	1 Off	On	0 On
Input	State	Function												
0 Not Inverted	Off	0 Off												
	On	1 On												
1 Inverted	Off	1 Off												
	On	0 On												



The INTERLOCK function has **priority** over the remote interface (HOLD does not)
INTERLOCK CLOSE has **priority** over INTERLOCK OPEN

4.14.2 Digital Output

4.14.2.1 Connection

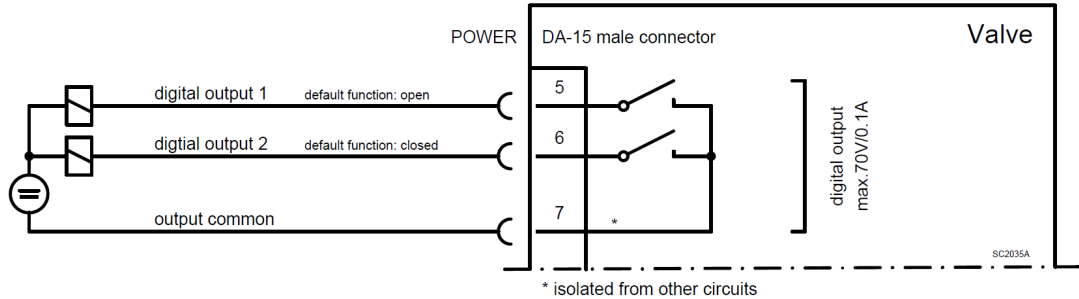

Pin	Default Function
5	OUTPUT 1 Open
6	OUTPUT 2 Closed
7	COMMON

4.14.2.2 Parameter, Configuration

Location: CPA/Navigation/Parameters: Power Connector IO.Digital Output

Parameter	Description																		
Enable	1 enables the output																		
State	0 Not active 1 Active																		
Functionality	0 OPEN valve is fully open 1 CLOSE valve is fully closed (isolated if valve has an isolation function) 2 HOLD valve is in hold state																		
Inverted	<table border="1"> <thead> <tr> <th></th> <th>Function</th> <th>State</th> <th>Output</th> </tr> </thead> <tbody> <tr> <td rowspan="2">0 Not Inverted</td> <td>inactive</td> <td>0</td> <td>Off</td> </tr> <tr> <td>active</td> <td>1</td> <td>On</td> </tr> <tr> <td rowspan="2">1 Inverted</td> <td>inactive</td> <td>1</td> <td>On</td> </tr> <tr> <td>active</td> <td>0</td> <td>Off</td> </tr> </tbody> </table>		Function	State	Output	0 Not Inverted	inactive	0	Off	active	1	On	1 Inverted	inactive	1	On	active	0	Off
	Function	State	Output																
0 Not Inverted	inactive	0	Off																
	active	1	On																
1 Inverted	inactive	1	On																
	active	0	Off																

5 Operation



WARNING

Unqualified personnel

Inappropriate handling may cause serious injury or property damage.
Only qualified personnel are allowed to carry out the described work.



WARNING

Valve opening

Risk of serious injury.
Human body parts must be kept out of the valve opening and away from moving parts.
Do not connect the controller to power before the valve is installed complete into the system.

5.1 Access Mode

5.1.1 Overview

Defines whether the interface or the CPA via the service port has the rights to control the valve
Location: CPA/Parameters System

Access Mode	Control Permission	Comment
Local	CPA	
Remote	INTERFACE Master	CPA can switch to Local
Locked	INTERFACE Master	CPA can't switch to Local



Power On state is 'Remote'

5.1.2 Remote and Locked operation

This product is equipped with an interface to allow for remote operation.
 See section «Interface» for details.


'Control Performance Analyzer' software may be used for monitoring during remote control.



In case 'Control Performance Analyzer' is used, make sure 'Remote' button is pushed to enable for remote operation.

5.1.3 Local operation


Local operation means that the valve is operated via the service port using a computer.
 You can use our software 'Control Performance Analyzer' for Local operation, which is integrated in the controller. The software is beneficial especially for setup, testing and maintenance.

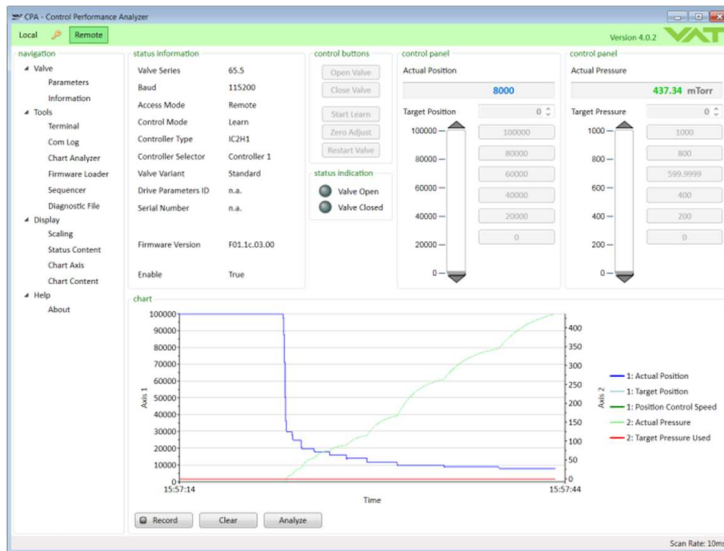


When communication to service port is interrupted the valve will change to remote operation. So when service cable will be disconnected or software will be shut down, the valve returns automatically to remote operation. This may result in an **immediate movement** of the valve depending on remote control.

5.2 Control Mode

The **Control Mode** represents the state machine of the valve. Writing to **Control Mode** requests a change in the state while reading **Control Mode** returns the actual state of the state machine.

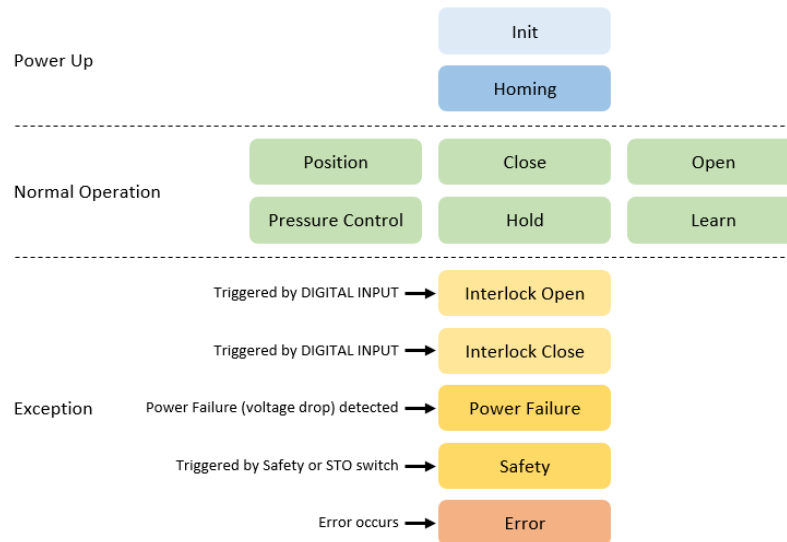


Init	State after power up. Remains if Homing is not started or no Exception occurs
Homing	The valve performs the homing procedure to initialize the position. Refer to chapter Homing
Position	The valve moves to the desired Target Position .
Close	The valve closes.
Open	The valve opens.
Pressure Control	The valve controls to the desired Target Pressure . Refer to chapter Pressure Control
Hold	The valve remains in the actual position. Usage during Pressure Control: Reduce valve reaction during plasma ignition. Stopping the valve movement to evaluate the stability of the sensor, flow meter, ... Note: Change from Control Mode Close to Hold is not possible
Learn	The valve performs the system learn. Necessary for Adaptive Pressure Control. Refer to chapter Pressure Control/Adaptive Algorithm/Learn
Interlock Open	The valve opens and locks due to the actuation of a digital input. Release behavior: Control Mode changes to <i>Open</i> or to <i>Init</i> if no Homing was performed yet. Refer to Chapter Power IO
Interlock Close	The valve closes and locks due to the actuation of a digital input. Release behavior: Control Mode changes to <i>Close</i> or to <i>Init</i> if no Homing was performed yet. Refer to Chapter Power IO
Power Failure	Power loss occurred. The valve opens or closes (Only with optional Power Failure Option) Closing or opening behavior depends on set Power Failure.Functionality Refer to chapter Power Failure
Safety	The motor of the valve is powerless due to a digital input. Release behavior: Control Mode changes to <i>Init</i> Refer to chapter xxx
Error	The valve is in an error state, no movement possible. Recovery via Services.Error Recovery or Services.Restart Controller . Refer to chapter Trouble Shooting.

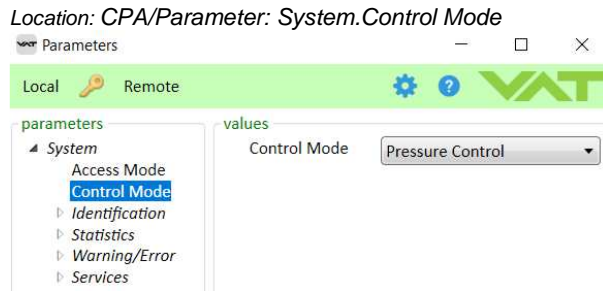

5.2.1 View

CPA

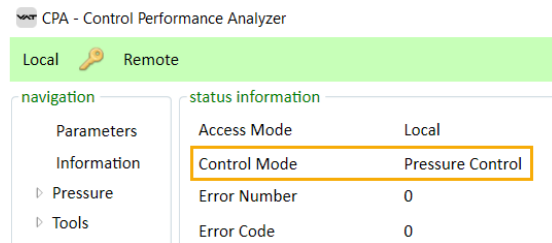

First digit on display




- I Init
- H Homing
- C Close
- O Open
- P Pressure Control
- A Position
- I Interlock Open or Close
- H Hold
- L Learn
- S Safety Mode
- F Power Failure
- E Error

5.3 Pressure Control


5.3.1 Controller units

The valve has four identical pressure controller units. **Controller Selector** defines which unit is used for the pressure control.

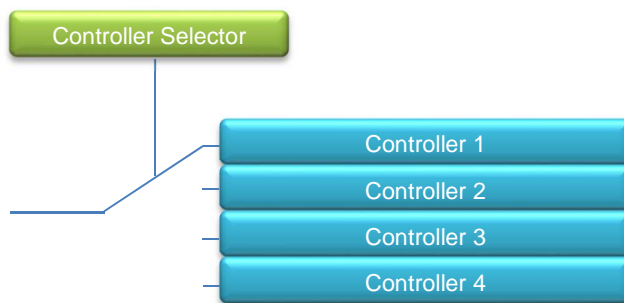

Most applications do not need more than one controller unit. But if the result of the pressure control does not meet the expectations, different controller units can be an option for optimization: With the four controller units it is possible to use a certain controller unit for a specific pressure set point. This controller unit can be parametrized optimally for this specific set point. With the **Automated Controller Selector** (see below) it is possible to change Controller depending on pressure ranges or on up- and down control.

The CPA window 'Pressure Control' shows an good overview of the control units and their features:

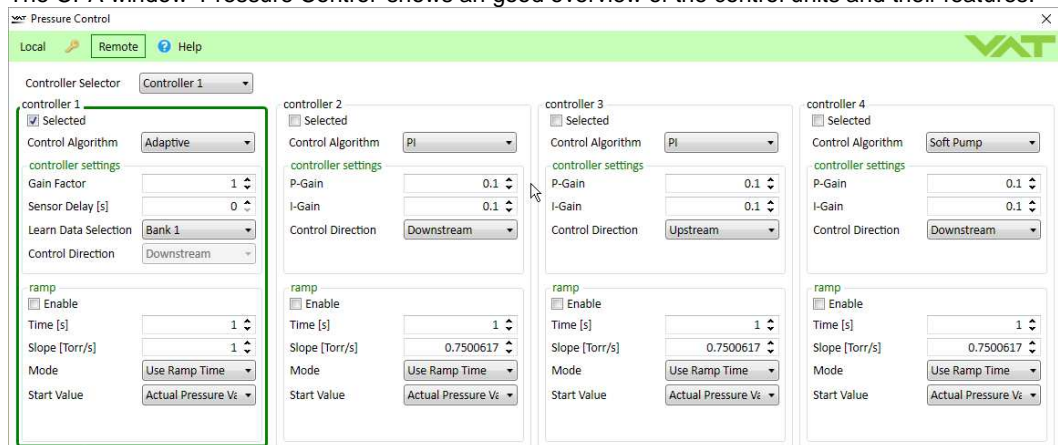

5.3.2 Control algorithm

5.3.2.1 Overview

Adaptive This is the most dynamic control algorithm. Before using adaptive control algorithm, a special procedure called “learn” must be executed first (see chapter below). The valve will observe the behavior of the vacuum system by moving the valve to different positions. During the learn procedure the valve performs an internal parameter estimation correspondent to the vacuum system.

Note: Adaptive control algorithm requires a **linear** sensor signal. If a logarithmic sensor is used the signal has to be linearized or PI algorithm has to be used.

PI This is a solid algorithm for pressure control. The performance will be behind the adaptive control algorithm. But if the condition varies a lot, it's possible that the adaptive control algorithm does not work properly so the PI algorithm provides the best result.

Soft Pump/Vent Is a modified PI control algorithm to pump down from atmospheric pressure or vent to atmospheric pressure. This control algorithm has been optimized to starts very carefully when opening the valve.

5.3.2.2 Choose correct control algorithm

System Configuration	Constant gas flow available		Constant gas flow not available
	Tv* <= 500 sec	Tv* > 500 sec	
<p>Downstream</p>	Adaptive		PI
<p>Upstream</p>			PI
Soft Pump	Soft Pump		

* Use the formula below to define the applicable pressure control algorithm.

$$T_v = \frac{p_{SFS} \cdot CV}{q_L}$$

- q_L** gasflow for learn [mbarl/s]
- p_{SFS}** sensor full scale pressure [mbar]
- Tv*** Vacuum time constant [sec]
- CV** Chamber Volume [l]

5.3.3 Adaptive algorithm

This control algorithm may be used for downstream pressure control.

Before using adaptive control algorithm, a special procedure called “learn” must be executed first (see chapter below).

5.3.3.1 Control Parameter

Location: CPA/Navigation/Parameters: Pressure Control.Controller x.Control Settings

Parameter	Description
Gain Factor	Main parameter to adapt the performance of the pressure control algorithm. A higher gain results in a faster response, higher over- / undershoots of pressure. A lower gain results in slower response, lower over- / undershoot of pressure.
Sensor Delay	For compensation of delays during the pressure detection. Pipes and orifices for sensor attachment can cause delays in response time and could impact badly the pressure control stability. By adapting this parameter to the approximate delay time stability problems can be reduced. But control response time will be slowed down by this measure.
Learn Data Selection	There are up to 4 different learn data sets available. Select which Learn data set the adaptive controller shall use for pressure control.
Ramp	A set poin ramp can be use to avoid over shoots... See chapter «Pressure Ramp»


5.3.3.2 Learn

LEARN adapts the PID controller of the valve to the vacuum system and its operating conditions. LEARN must be executed only once during system setup. The LEARN routine determines the characteristic of the vacuum system. Based on this, the PID controller is able to run fast and accurate pressure control cycles.

This characteristic depends on various parameters such as chamber volume, conductance and flow regime. Therefore it must be performed with a specific gas flow according to instruction below. The result of LEARN is a pressure versus valve position data table. This table is used to adapt the PID parameters. The data table is stored in the device memory which is power fail save. The data table can be up-/downloaded via 'Control Performance Analyzer' software or remote interface. Due to encoding the data may not be interpreted directly.

By an OPEN VALVE, CLOSE VALVE, POSITION CONTROL or PRESSURE CONTROL command the routine will be interrupted.

Recorded Standard Learn

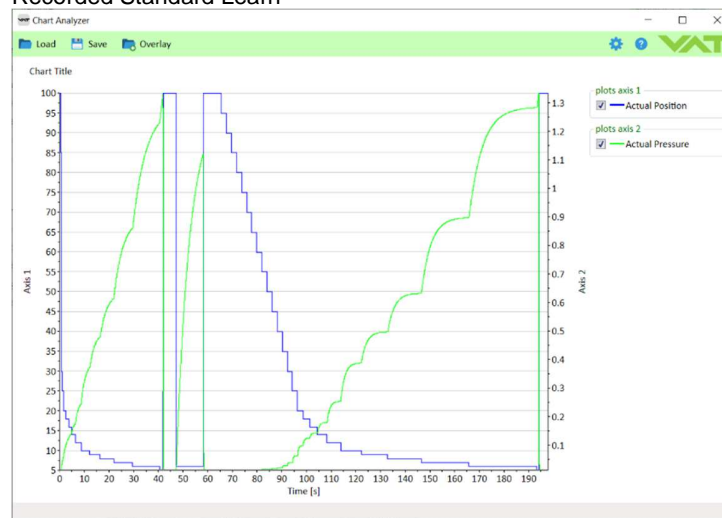

Resulting Learn Data



Parameters Executing

Location: CPA/Navigation/Parameters: Pressure Control.Adaptive Learn

Parameter	Description
Start Learn	Starts the learn
Type	<p>Standard A positioning sequence is executed and various measured values are recorded in the process.</p> <p>Short Opens the valve and measures the pumping speed. Information about flow and volume is required.</p> <p>Calculated Calculated the learn data with the pumping speed information.</p> <p>Short or Calculated can be used when there is no way to set a constant gas flow.</p>
Bank Selection	Select one of four learn bank to place the result of the learn procedure. Note: Be sure pressure controller select this learn bank!
Pressure Limit [SFS]	Limit pressure to which pressure the learn shall be executed. The value is related to the sensor full scale of high sensor. 1.0 means the whole pressure range of the sensors
Pressure Limit	Same value as above but in Pressure Unit
Open Speed	Define the speed for opening the valve during the learn procedure. May be necessary to prevent a pump from crashing. 1.0 means full speed
Status	State of the current learn 0: Not Started 1: In Progress 2: Completed Successfully 3: Aborted 4: Failed
Warning Info	Warning of current learn procedure: Bit 0: Learn is running Bit 1: Checksum error (learn data corrupt) Bit 2: Learn procedure terminated by user Bit 3: Pressure at position open > 50% of pressure limit Bit 4: Pressure at minimal conductance position < 10 % of pressure limit Bit 5: Pressure falls while move valve in direction of close Bit 6: Pressure at open position does not match pressure of previous open Bit 7: Learn procedure terminated by program Bit 8: Pressure <= 0 at open position (no gas flow set?)

Sort Learn Parameter

Parameter	Description
Chamber Volume	Volume above the valve plate in Liter
Gas Flow	Gas flow during the short learn, must be constant during the short learn
Gas Flow Unit	Gas flow unit for above Gas Flow
Pumping Speed	Resulting pumping speed

Calculated Learn Parameter

Parameter	Description
Pumping Speed	Set pumping speed to calculate the learn data

Parameters Learn Bank

Location: CPA/Navigation/Parameters: Pressure Control.Adaptive Learn.Learn Bank x

Parameter	Description
Status	<p>Not Used Available</p> <p>Empty learn bank Data available. Evaluation possible with the pressure position curve in the CPA/Navigation/Adaptive Learn Data</p> <p>Available with warnings</p> <p>The data may still be suitable for pressure control. Evaluation possible with the pressure position curve in the CPA/Navigation/Adaptive Learn Datas</p>
Data	Captured data in a non-readable format
Warning Info	Displays warnings that occurred while learning for this learning bank. Show Warning Info above
Type	<p>Standard Short Calculated ..See description above</p>
Delete Learn Bank Data	Deletes the data of the learn bank

Execute a learn procedure

1. Set specific gas flow according to calculation below or the calculation in the CPA → **'Adaptive Learn'** window:

Learn does not need to be performed with the process gas. Instead N₂ or Ar may be used.
2. Set parameter **Bank Selection**, if only one learn is used take Bank 1. Be sure that the pressure controller also selects this learn bank!
3. Reduce **Open Speed** if it is critical for the chamber if the pressure drops rapidly when the valve is opened.
4. Set a **Pressure Limit [SFS]** limit if sensor full scale cannot or should not be reached.
5. Set parameter **Controller Mode** to **LEARN**.
6. Wait until the **Controller Mode** leaves the **LEARN** state → Learn is finished
7. Check if the learn was successful by checking if **Status** shows value 2 (=Completed Successfully). In best case **Warning Info** shows no warning.



- ➔ Sensor signal must not shift during LEARN. Wait until sensor signal is stable before LEARN is performed. Learn may take several minutes.
- ➔ Do not interrupt the routine as a single full run is required to ensure fast and accurate pressure control.
- ➔ The PID controller covers 5% to 5000% of the gas flow which was used for learn.

CPA window **'Adaptive Learn'**

Local Remote Help

valve type

Valve Series:

Valve Variant:

Nominal Diameter:

Min Conductance [l/s]: edit

learn limits

Pressure Limit [mTorr]:

Open Speed:

Bank Selection:

working point table

Gas Flow Unit:

Pressure [mTorr]	Gas Flow [sccm]	Conductance [l/s]
100	250	31.67
80	80	12.67

learn process sequence

Recommended Gas Flow [sccm]:

Not Started

learn data

Adaptive Learn Data

Gasflow calculation for Learn



Do not apply a different gasflow for learn than determined below. Otherwise pressure control performance may be insufficient. Required pressure / flow regime must be known to calculate the most suitable learn gas flow for a specific application.

Note: The subsequent calculation can be conveniently performed in the CPA/Navigation/Adaptive Learn > Gas Flow Calculation > Calculate

- At first it is necessary to find out about the required control range respectively its conductance values. Each working point (pressure / flow) must be calculated with one following formulas. Choose the applicable formula depending on units you are familiar with.

$$C_{WP} = \frac{1000 \cdot q_{WP}}{p_{WP}}$$

C_{WP} required conductance of working point [l/s]
 q_{WP} **gasflow** of working point [Pa m³/s]
 p_{WP} **pressure** of working point [Pa]

$$C_{WP} = \frac{q_{WP}}{p_{WP}}$$

C_{WP} required conductance of working point [l/s]
 q_{WP} **gasflow** of working point [mbar l/s]
 p_{WP} **pressure** of working point [mbar]

$$C_{WP} = \frac{q_{WP}}{78.7 \cdot p_{WP}}$$

C_{WP} required conductance of working point [l/s]
 q_{WP} **gasflow** of working point [sccm]
 p_{WP} **pressure** of working point [Torr]

- Out of these calculated conductance values choose the lowest.

$$C_R = \min(C_{WP1}, C_{WP2}, \dots, C_{WPn})$$

C_R required lower conductance [l/s]
 C_{WPx} required conductance of working points [l/s]



To make sure that the valve is capable to control the most extreme working point verify that $C_R \geq C_{min}$ of the valve (refer to «Technical data»).

- Calculate gasflow for learn. Choose the applicable formula depending on units you are familiar with.

$$q_L = \frac{p_{SFS} \cdot C_{min}}{1100}$$

q_L gasflow for learn [Pa m³/s]
 p_{SFS} sensor full scale pressure [Pa]
 C_{min} min. controllable conductance of valve [l/s], (refer to «Technical data»)

$$q_L = \frac{p_{SFS} \cdot C_{min}}{1.1}$$

q_L gasflow for learn [mbar l/s]
 p_{SFS} sensor full scale pressure [mbar]
 C_{min} min. controllable conductance of valve [l/s], (refer to «Technical data»)


$$q_L = 71 \cdot p_{SFS} \cdot C_{min}$$

q_L gasflow for learn [sccm]
 p_{SFS} sensor full scale pressure [Torr]
 C_{min} min. controllable conductance of valve [l/s], (refer to «Technical data»)

Evaluation and exchange of learn data


Location: CPA/Navigation/Adaptive Learn Data

The window shows the pressure position curve of the stored data in the learning banks
 With the menu buttons it is possible to exchange data between learn banks and between valves.

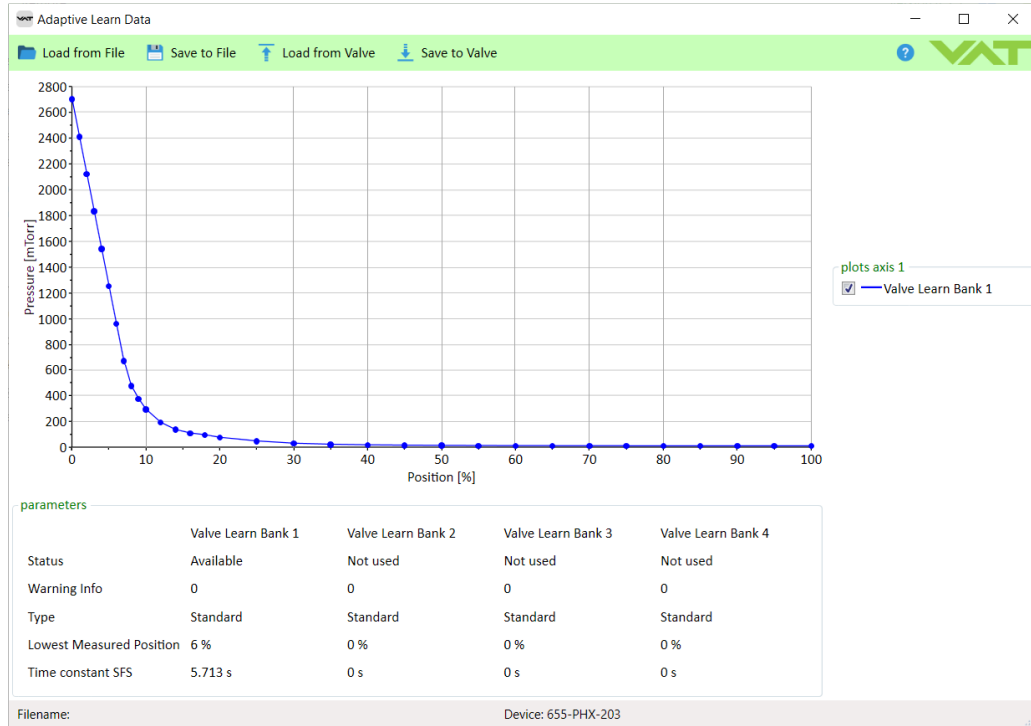

5.3.3.3 Tuning

Normally the default settings will result in good pressure control performance. For some applications tuning may be required to improve performance. The tuning procedures for each parameter (grey boxes) and its default values are described separately below. Strictly keep the procedure order.

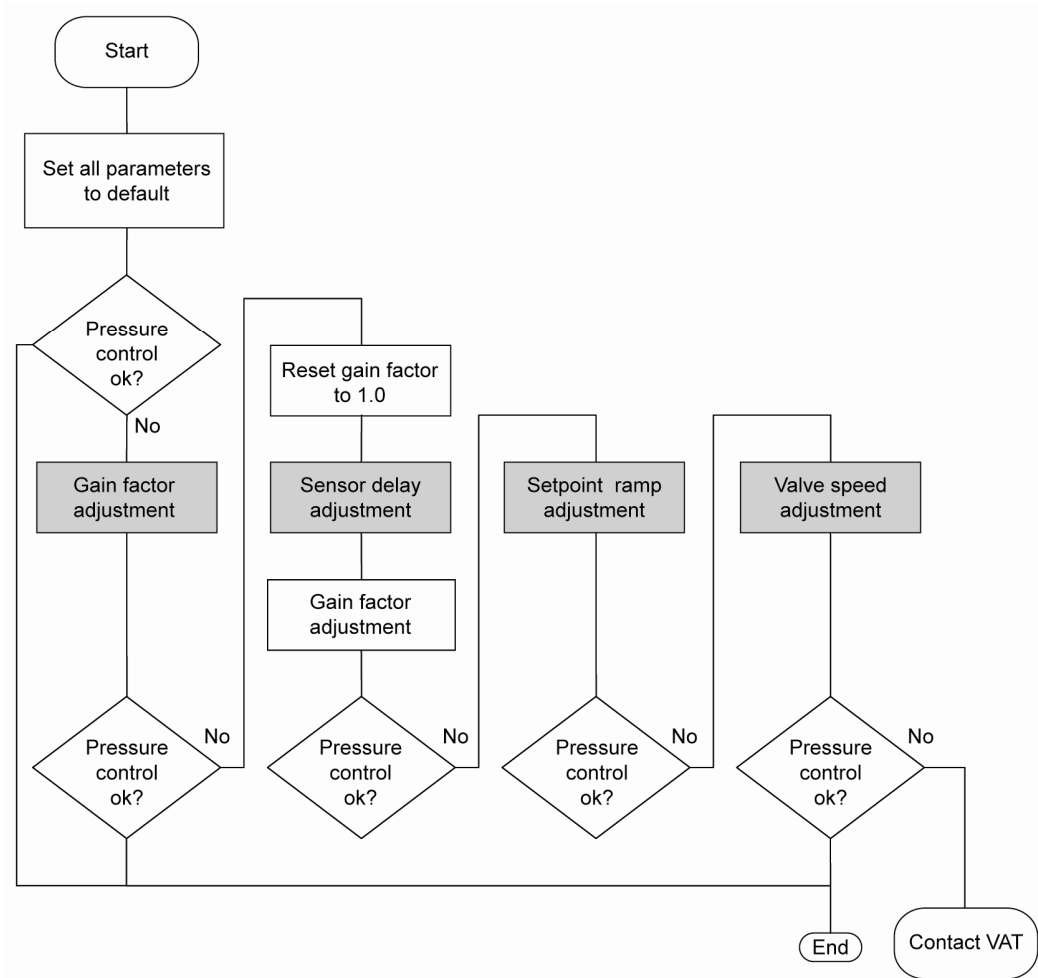

Gain Factor adjustment

The Gain Factor effects: **Stability, Response time**

Adjustment range is from 0.0001 to 100.0

- Higher gain results in: faster response, higher over- undershoot of pressure
- Lower gain results in: slower response, lower over- undershoot of pressure

Adjustment procedure:

1. Start with Gain Factor 1.0
2. Open valve.
3. Control a typical pressure / flow situation.
4. Repeat from step 2 with lower (higher) Gain Factors until optimal pressure response is achieved and stability is ok.



Normally adjustments down to Gain Factors of 0.1 should lead to good results. Otherwise you may need to improve sensor connection. Refer to «Requirements to sensor connection».

Sensor Delay adjustment

Sensor Delay adjustment effects: **Stability**

Adjustment range is from 0.0 to 1.0sec

Pipes and orifices for sensor attachment delay response time and so badly impact pressure control stability.

By adapting this parameter to the approximate delay time stability problems can be reduced. But control response time will be slowed down by this measure.



Whenever possible sensors should be attached to the chamber according to «Requirements to sensor connection». This is the most effective measure against stability issues. If your gauge attachment fulfills these criteria do not use this parameter.

Adjustment procedure:

1. Start with Gain Factor 1.0 and sensor delay 0s.
2. Open valve.
3. Control a typical pressure / flow situation.
4. Repeat from step 2 with higher sensor delays until best possible stability is achieved.
5. Adjustment Gain Factor again. Refer to «Gain factor adjustment».


Setpoint Ramp adjustment

Setpoint Ramp effects: **Undershoot of pressure, Response time**

Note: The ramp is described in detail in capital Pressure Ramp.

This parameter defines the time that is used to decrease / raise pressure between 2 setpoints. Especially in pressure decrease situations at low flows pressure response can be improved much by adapting setpoint ramp time.

Pressure chart

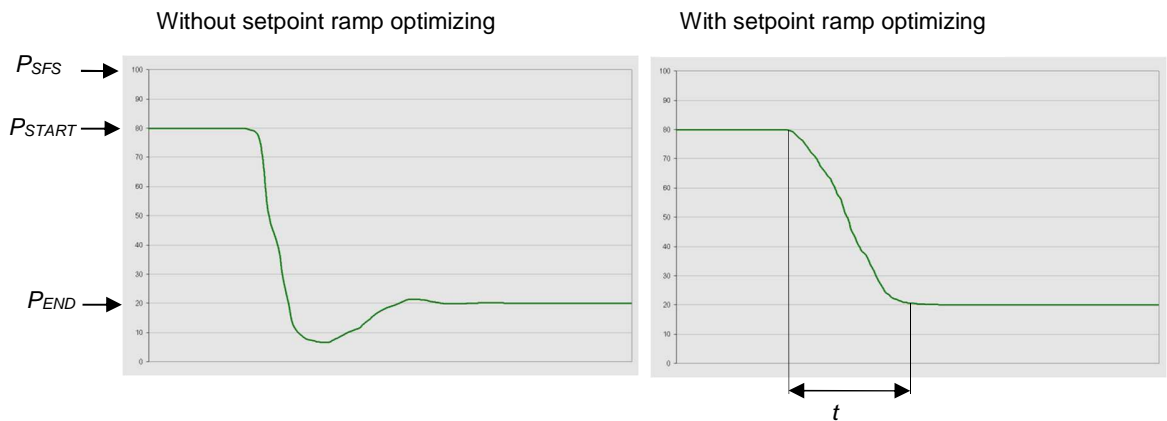

Choose the applicable formula depending on units you are familiar with.

t	-	Setpoint Ramp
P_{SFS}	-	Pressure at Sensor full scale
P_{START}	-	Pressure at start of controlling a pressure step
P_{END}	-	Certain pressure, which should be regulated

Adjustment procedure:

1. Start with optimal Gain Factor and sensor delay time according to preceding tuning steps.
2. Control a typical pressure / flow situation.
3. Control a lower pressure.
4. Repeat from step 2 with longer setpoint ramps until best response is achieved.
5. Verify pressure control response for a setpoint raise situation.



In case a long ramp time is required to get optimal performance for pressure decrease situations it may be of advantage to apply different settings for decrease / raise control situations.

Pressure Control Speed adjustment

Valve speed effects: **Response time**

Adjustment range is from 0.001 to 1.0
Default value is 1.0

Location: CPA/Navigation/Parameters: Pressure Control.Pressure Control Speed

This parameter effects valve plate actuating speed.
Speed adjustment is effective for PRESSURE CONTROL and POSITION CONTROL.



Normally best pressure control response is achieved with maximum Pressure Control Speed. In particular applications it may be of advantage to have a slower valve response.
OPEN and CLOSE are always done with maximum speed.

Adjustment procedure:

1. Use optimal Gain Factor, sensor delay time and setpoint ramp according to preceding tuning steps.
2. Open valve.
3. Control a typical pressure / flow situation.
4. Repeat from step 2 with slower Pressure Control Speed until required response is achieved.

Required information for support:

- Go to 'Tools / Create Diagnostic File' in 'Control Performance Analyzer' and save file
- Pressure / flow / gas conditions to be controlled
- Chamber volume
- Pumping speed (l/s) and pump type (e.g. turbo pump)
- System description
- Problem description

Send diagnostic file with and all required information to tuning-support@vat.ch

5.3.4 PI algorithm

This control algorithm may be used for downstream or upstream pressure control depending on configuration.

5.3.4.1 Control Parameter

Location: CPA/Navigation/Parameters: Pressure Control.Controller x,Control Settings

Parameter	Description
P-Gain	The P-Gain is the proportional factor of the fixed control algorithm. A higher P-Gain results in faster response, higher over- / undershoot of pressure.
I-Gain	The I-Gain is the integral factor. The I-Gain helps to reach the target pressure exactly.
Pressure Scale	Linear Logarithmic Recommended if the pressure control extends over several decades. In most cases, the sensor used is a logarithmic sensor anyway.
Direction	The Control Direction defines the type of application, if the valve is mounted in downstream or upstream. Downstream means the valve is after the chamber and before the pump. Upstream, valve is mounted before chamber and pump.

5.3.4.2 Tuning

The PI parameters of the pressure controller require correct adjustment. These parameters must be set once during system setup and are stored in the device memory which is power fail save. Based on the PI controller configuration, the valve is able to run fast and accurate pressure control cycles. The PI parameters can be evaluated using below instruction.



- In downstream control mode valve will move towards open when current pressure is higher than set point.
- In upstream control mode valve will move towards close when current pressure is higher than set point.

Introduction

PI controller mode is used if for any reason (e.g. too long system time constant) the adaptive control mode does not provide satisfying control performance.

In PI controller mode the parameters P-Gain and I-Gain have to be set according to the systems characteristics. The best set of parameters can be found by using the empiric method below.

Pressure and gas flow for optimization

A PI controller delivers the best results for a certain working point (pressure/gas flow). If there is only one working point, this pressure and gas flow has to be used for optimizing P and I-Gain. If there are several working points that have to be covered, the pressure for optimizing is the medium pressure between highest and lowest pressure to be controlled, the gas flow for optimizing is the highest flow out of all working points.

Two different pressure set points are necessary for optimization.

Set point 1 (SP1) is the pressure for optimizing as determined above.

Set point 2 (SP2) is about 10 - 20% lower than SP1.

Example: pressure range: 4 – 10 Torr

Flow range: 2 – 4 slm

Pressure set points and gas flow for optimization:

SP1 = 7 Torr

SP2 = 6 Torr

Gas flow = 4 slm

Optimizing P-Gain


While optimizing P-Gain, the gas flow determined above has to be constant all the time.

Start optimization with P-Gain set to 1.0 and I-Gain set to 0.0.

Set chamber pressure to SP2, wait until the pressure is stable. Set pressure to SP1. If the transition from SP2 to SP1 results in a significant pressure over shoot or even does not stabilize at all, the P-Gain is too high. If there is no over shoot and the pressure reaches SP1 asymptotically and very slow, P-Gain is too low.

The optimal P-Gain value is found if the transition from SP2 to SP1 results in a slight pressure over shoot. It does not matter if there is still a deviation between SP1 and actual pressure.

Example:

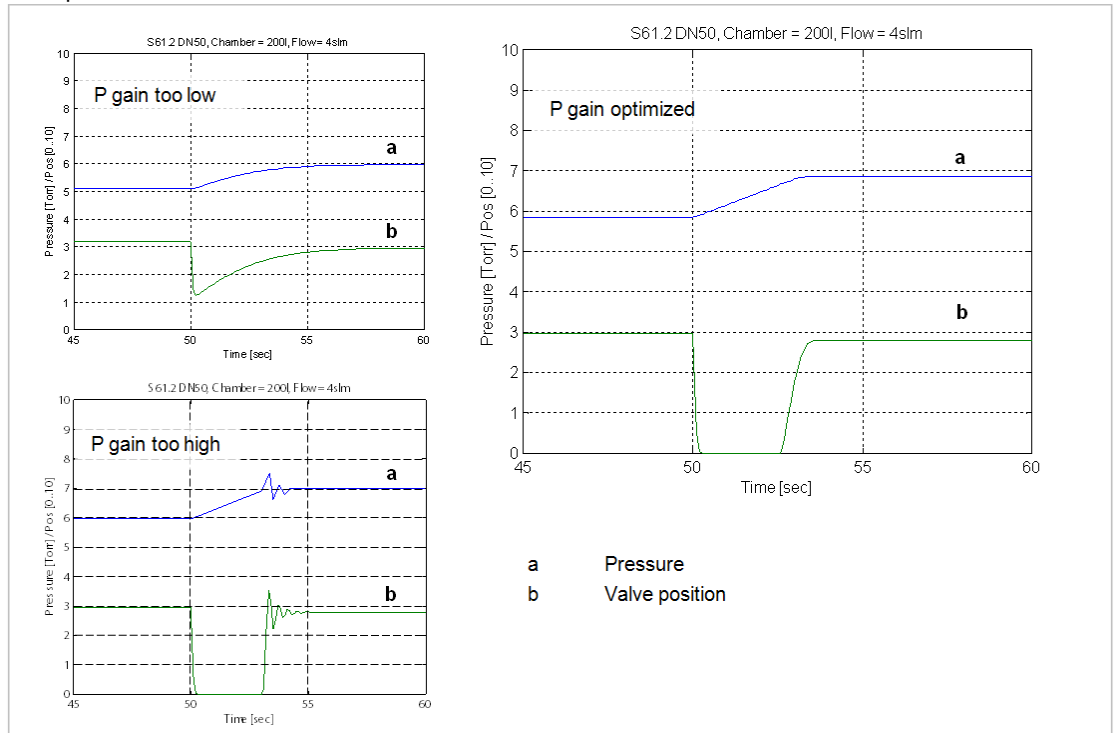

Optimizing I-Gain


While optimizing I-Gain, the gas flow determined above has to be constant all the time.

Start with P-Gain set to half of the value found when optimizing P-Gain and set I-Gain to 1.0. Keep the P-Gain constant.

Set chamber pressure to SP2, wait until the pressure is stable. Set pressure to SP1. If the transition from SP2 to SP1 results in a significant pressure overshoot or if the valve position does not stabilize, I-Gain is too high. If the transition results in a slow asymptotical pressure rise and there is still a constant deviation to SP2, the I-Gain is too low.

The optimal value for I-Gain is found if the transition from SP2 to SP1 result in just a slight pressure overshoot, a stable valve position and the actual pressure matches SP2 exactly.

Example:

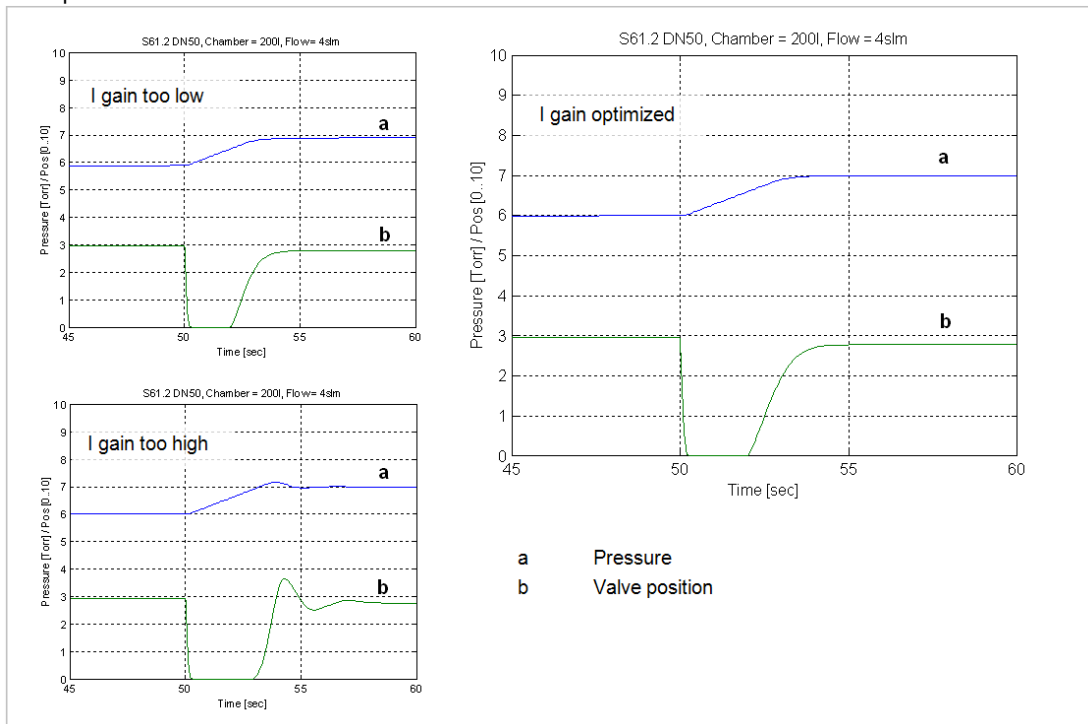

Check control performance over the whole control range with parameters above.

Required information for support:

- Go to 'Tools / Create Diagnostic File' in 'Control Performance Analyzer' and save file
- Pressure / flow / gas conditions to be controlled
- Chamber volume
- Pumping speed (l/s) and pump type (e.g. turbo pump)
- System description
- Problem description

Send diagnostic file with and all required information to tuning-support@vat.ch

5.3.4.3 Soft Pump/Vent algorithm

This control algorithm may be used to control pressure ramps during pump down or venting the chamber. This is a modified PI controller that has been optimized to start up very gently when the valve is opened.

5.3.4.4 Control Parameter

Location: CPA/Navigation/Parameters: Pressure Control.Controller x,Control Settings

Parameter	Description
P-Gain	The P-Gain is the proportional factor of the fixed control algorithm. A higher P-Gain results in faster response, higher over- / undershoot of pressure.
I-Gain	The I-Gain is the integral factor. The I-Gain helps to reach the target pressure exactly.
Pressure Scale	Linear Logarithmic Recommended if the pressure control extends over several decades. In most cases, the sensor used is a logarithmic sensor anyway.
Direction	The Control Direction defines the type of application, if the valve is mounted in downstream or upstream. Downstream means the valve is after the chamber and before the pump. Upstream, valve is mounted before chamber and pump.
Ramp	Only the ramp makes the soft pump or soft vent... See chapter «Pressure Ramp»

5.3.4.5 Tuning

Optimizing P-Gain

Start optimization with P-Gain set to 0.1 and I-Gain set to 0.0.

The control routine has to be controlled as follows:

- Move control valve into close position
- Start pump down by opening the pump isolation valve or starting the pump
- Send the pressure set point to the valve controller.

While pumping/venting the chamber pressure and valve position should be data logged to compare the actual curve with the ideal straight pump/venting line.

If the pressure follows the ideal pump/venting line with significant delay, the P-Gain is too low.

If the pressure oscillates around the ideal pump/venting line or if the valve position oscillates, P-Gain is too high.

P-Gain is optimized if the pressure follows the ideal pump down line closely and the valve position is not oscillating at all.


Optimizing I-Gain

Start with P-Gain set to half of the value found when optimizing P-Gain and set I-Gain to 1.0. Keep the P-Gain constant.

If the pressure follows the ideal pump/venting line with significant delay, the I-Gain is too low. If the pressure oscillates around the ideal pump/venting line or if the valve position oscillates, I-Gain is too high.

I-Gain is optimized if the pressure follows the ideal pump down line closely and the valve position is not oscillating at all.

Example:

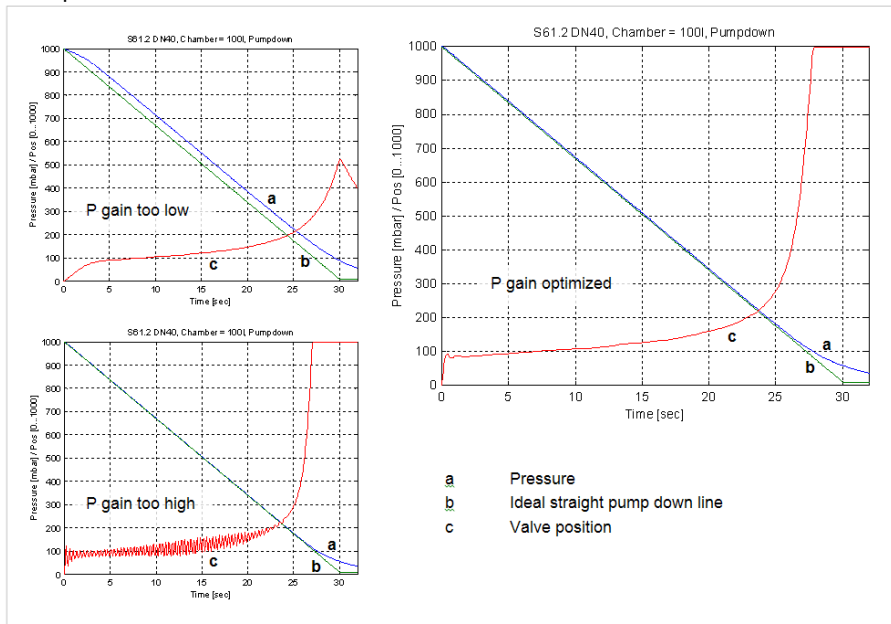

Optimizing I-Gain

I-Gain is responsible to reach the setpoint. If reaching setpoint is not important (e.g. setpoint is 0) leave the I-Gain at 0. Otherwise start with P-Gain set to half of the value found when optimizing P-Gain and set I-Gain to 0.1. Keep the P-Gain constant. Start again the pump down. Check how the pressure reaches the setpoint:

If the setpoint is reached too slowly increase I-Gain
 If there is an undershoot increase I-Gain


Required information for support:

- Go to 'Tools / Create Diagnostic File' in 'Control Performance Analyzer' and save file
- Pressure / flow / gas conditions to be controlled
- Chamber volume
- Pumping speed (l/s) and pump type (e.g. turbo pump)
- System description
- Problem description

Send diagnostic file with and all required information to tuning-support@vat.ch

5.3.5 Pressure Ramp

Basically, the pressure ramp is used to limit the rate of pressure change.

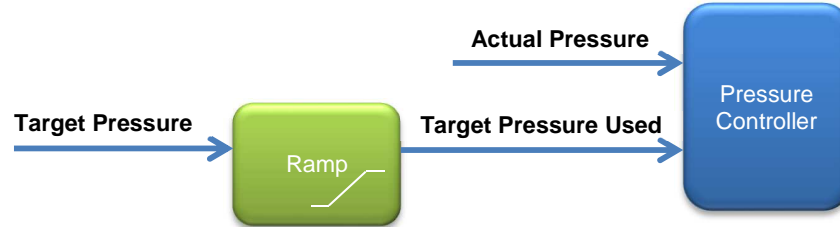

5.3.5.1 Configuration

Location: CPA/Navigation/Parameters: Pressure Control.Controller x.Ramp

Parameter	Description
Enable	Activate / Deactivate pressure target ramp
Mode	0:Use Ramp Time 1:Use Ramp Slope See description below
Time	Target reach time in seconds (Used if Mode = 0)
Slope	Limit the rate of pressure change in pressure per seconds (Used if Mode = 1)
Type	0:Linear 1:Logarithmic 2:Exponential
Start Value	0:Previous Ramp Value 1:Actual Pressure Value


5.3.5.2 Mode

Time

Unit: seconds

Time is constant, slope varies

Example: 2 sec

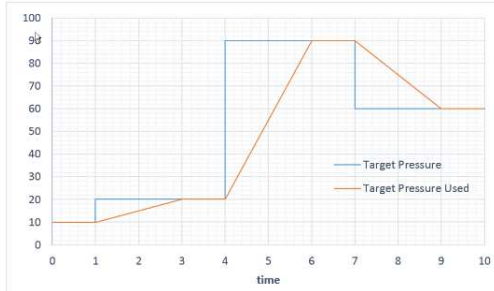


Slope

Unit: Pressure / seconds


Slope is constant, time varies

Example: 10mTorr/second

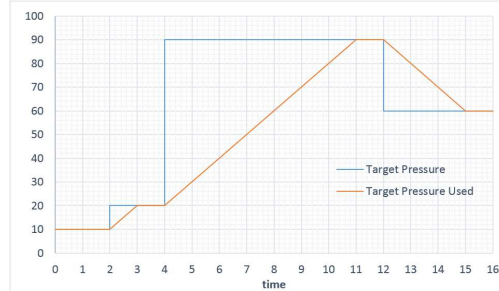


5.3.5.3 Type


Linear

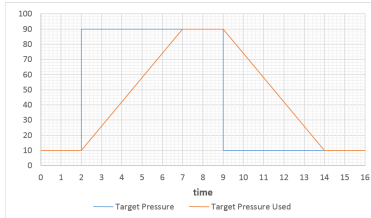

Logarithmic

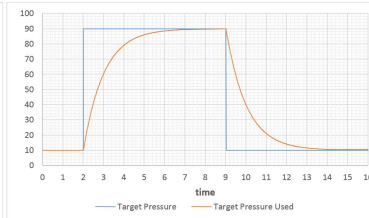


Exponential

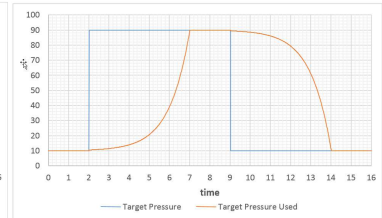

5.3.5.4 Applications Examples


Soft pump

Ramp Mode = Time
 Ramp Time = 100 sec
 Ramp Type = Linear
 Target Pressure = 0

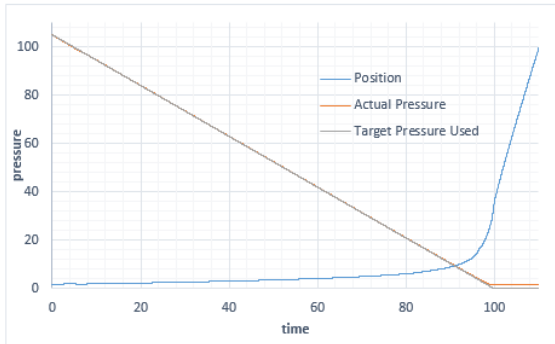


Minimize pressure over- or undershoots

New Target Pressure without pressure ramp

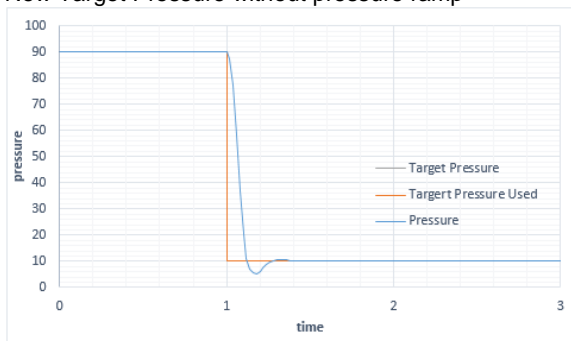


New Target Pressure with pressure ramp

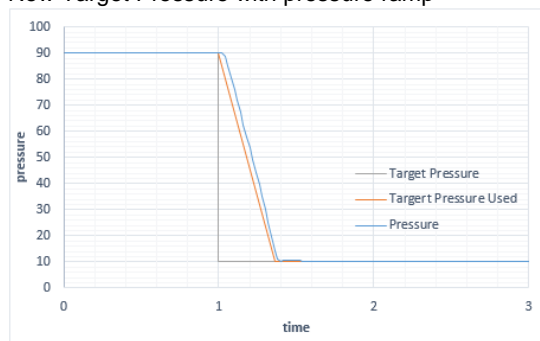

Smoothing a staircase

Pressure ramp with new target pressure to the valve every second is smoothed by a 1 sec internal ramp
 Ramp Time = 1sec

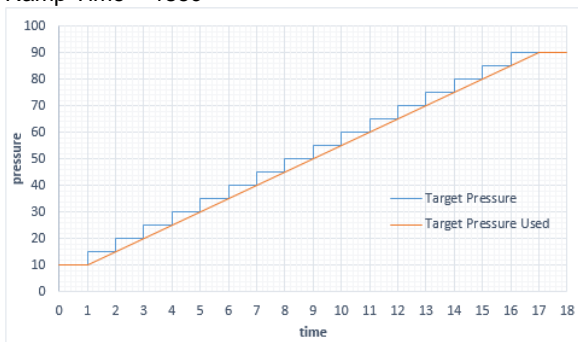

5.3.6 Profile Ramp


Profile Ramp is a **Target Pressure** ramp that depends on pressure ranges (segments). It is mainly used to create soft pumping or soft venting profiles.

To design a profile, the segments (pressure ranges) must be defined. A segment is defined by the pressure **Threshold** and the **Slope**. It is possible to define up to 10 segments.

Example: Ramp Profile with 3 segments

Segment Nr	Threshold mBar*	Resulting Segment mBar*	Slope mBar*/sec
1	1000	500 to 1000	50
2	500	200 to 500	100
3	200	0 to 200	200

Result is a Target Pressure Ramp (**Target Pressure Used**) with different slopes depending on pressure ranges:

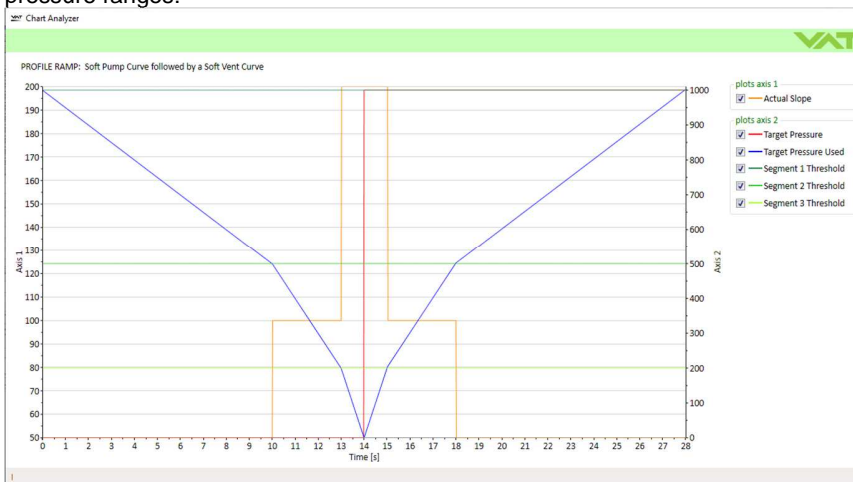


Parameters:

Location: CPA/Navigation/Parameters: Pressure Control.General Settings.Profile Ramp

Parameter	Description
Enable	Switches on/off the function
Threshold Mode	Defines which pressure the threshold refers to


Actual Pressure

Change happens if **Actual Pressure** reaches the **Threshold**

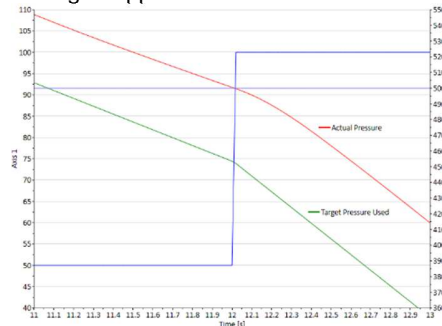

Target Pressure Used


Change happens if **Target Pressure Used** reaches the **Threshold**

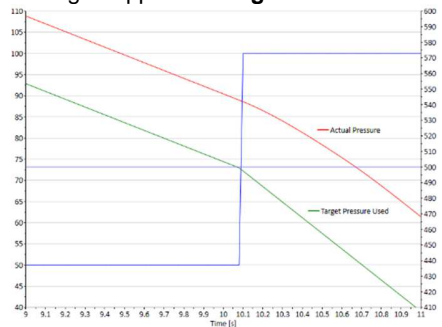

Ramp Type	Defines the shape of the ramp Linear Logarithmic Exponential
------------------	--


Actual Slope	Show the actual use slope during pressure control in mBar*/sec.
---------------------	---

Controller Selector Bitmap	Determines which Controller uses the profile ramp. When a Controller is selected, the ramp is no longer used in the controller itself. Therefore the ramp is greyed out in the CPA.
-----------------------------------	--

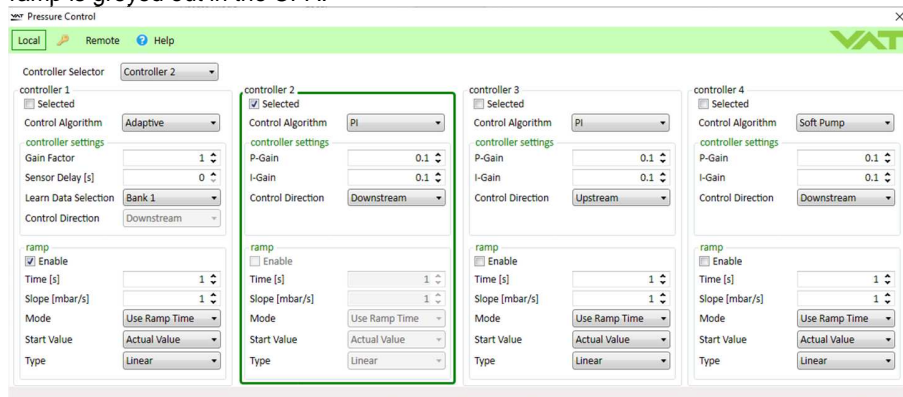

Segment Selector Bitmap	Defines which segments is used for the Profile Ramp.
--------------------------------	--

Segment x Threshold This is the upper limit of the segment. The lower limit is defined by the next lower **Threshold**, or the lower limit is 0 if there is no lower **Threshold**.
 If the value exceeds the top threshold, the slope value of the top segment is used (Segment 1 in below example)

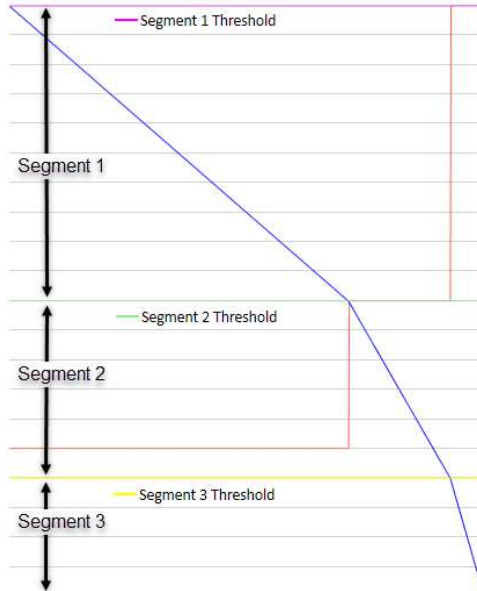

Segment x Slope Defines the slope (mBar*/sec) in the segment

* Unit adjustable



5.3.7 Automated Controller Selector

With the 4 Controllers it is possible to define different pressure control settings. The Automated Controller Selector can select one of the 4 Controllers depending on Target Pressure (**Mode: *Threshold***) or Up-Down Control (**Mode: *Pressure Direction***)

Mode: *Threshold*

Threshold Condition: *Lower or Equal*

Controller Selector changes when the Target Pressure exceeds or falls below a *Threshold* value



Mode: Threshold

Controller Selector Bitmap: 15

Bit 0: Controller 1
 Bit 1: Controller 2
 Bit 2: Controller 3
 Bit 3: Controller 4

Threshold Condition: Lower or Equal

Controller 1 Threshold: [mbar] 100


Controller 2 Threshold: [mbar] 200

Controller 3 Threshold: [mbar] 400

Controller 4 Threshold: [mbar] 1000

Threshold Condition: *Equal*

Controller Selector changes only when the Target Pressure is equal to a *Threshold* value

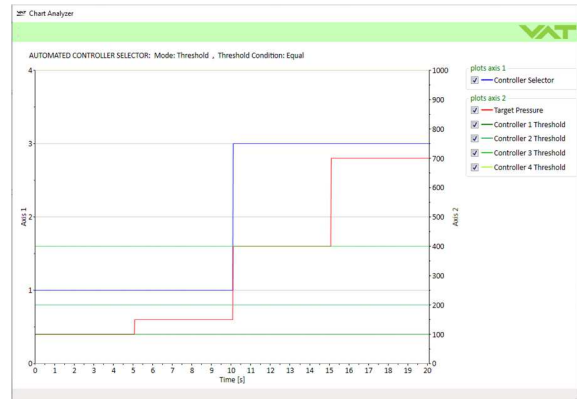

Mode: Threshold

Controller Selector Bitmap: 15

Bit 0: Controller 1
 Bit 1: Controller 2
 Bit 2: Controller 3
 Bit 3: Controller 4

Threshold Condition: Equal

Controller 1 Threshold: [mbar] 100

Controller 2 Threshold: [mbar] 200

Controller 3 Threshold: [mbar] 400


Controller 4 Threshold: [mbar] 1000

Mode: *Pressure Direction*

Controller Pressure Rising: *Controller 1*

Controller Pressure Falling: *Controller 2*

Controller Selector changes depending on whether Target Pressure is rising or falling

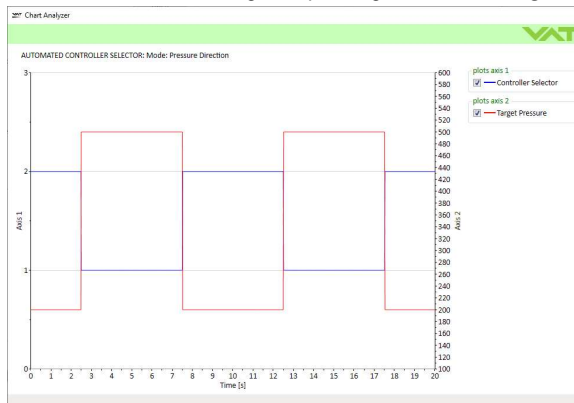

Mode: Pressure Direction

Controller Pressure Rising: Controller 1

Controller Pressure Falling: Controller 2

Parameter:

Location: CPA/Navigation/Parameters: Pressure Control.General Settings.Automated Controller Selector

Parameter	Description
Enable	Switches on/off the function
Mode	Threshold Pressure Direction
Controller Selector Bitmap	Used if Mode = Threshold Defines which controllers are automatically selected
Threshold Condition	Used if Mode = Threshold Lower or Equal Equal The Thresholds are related to Target Pressure
Controller 1 Threshold	Used if Mode = Threshold
Controller 2 Threshold	The Thresholds are related to Target Pressure
Controller 3 Threshold	
Controller 4 Threshold	
Controller Pressure Rising	Used if Mode = Pressure Direction
Controller Pressure Falling	Select one Controller for up control and one for down control Controller 1 Controller 2 Controller 3 Controller 4

5.3.8 Control Position Restriction

Location: CPA/Navigation/Parameters: Pressure Control.General Settings.Control Position Restriction

Parameter	Description
Enable	False True
Minimum Control Position	Defines the lowest position during pressure control
Maximum Control Position	Defines the highest position during pressure control
Restriction Active	False True

5.3.9 Store Control Parameter Volatile

Used when the control parameters are changed frequently during the process and it is not useful to store the value in the non-volatile memory each time (the lifetime of the non-volatile value is 1 million memory cycles).

Only effective on the interface, the settings via CPA are always stored in non-volatile memory

Location: CPA/Navigation/Parameters: Pressure Control.General Settings

Parameter	Description
Store Control Parameter Volatile	False True

5.4 Position Control

5.4.1 Parameter

Location: CPA/Navigation/Parameters: Position Control

Parameter	Description
Actual Position	Position of the valve plate Range depends on Position Scaling setting (on Interface and CPA)
Target Position	Desired position of the valve plate Range depends on Position Scaling setting (on Interface and CPA)
Position Control Speed	Speed of the valve in Control Mode Position 0.001 .. 1.0 (Full speed)
Ramp	See below

5.4.2 Position Ramp



5.4.2.1 Configuration

Location: CPA/Navigation/Parameters: Position Control.Ramp

Parameter	Description
Enable	Activate / Deactivate position ramp
Mode	0:Use Ramp Time 1:Use Ramp Slope See description below
Time	Target reach time in seconds (Used if Mode = 0)
Slope	Limit the rate of position change per second (Used if Mode = 1)
Type	0:Linear 1:Logarithmic 2:Exponential


5.4.2.2 Mode

Time

Unit: seconds

Time is constant, slope varies

Example: 2 sec

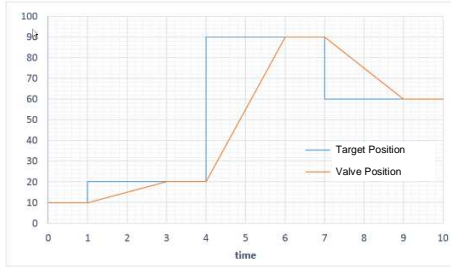


Slope

Unit: %* / seconds

Slope is constant, time varies


Example: 10% / sec

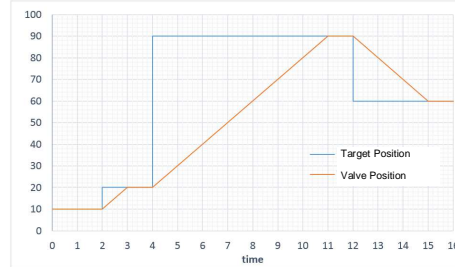


* Unit adjustable

5.4.2.3 Type


Linear

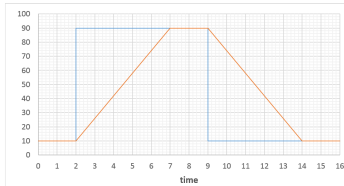

Logarithmic

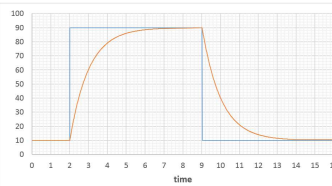

Exponential

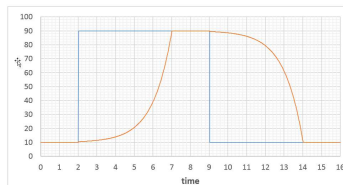

5.5 Operation under increased temperature

⚠ CAUTION	
	<p>Hot valve</p> <p>Heated valve may result in minor or moderate injury.</p> <p>Do not touch valve and heating device during operation. Once heating is switched off (valve and system) await until the valve is cooled down complete before doing any work.</p>



This valve may be operated in the temperature range mentioned product data sheet.

⚠ WARNING	
	<p>O-ring sticking</p> <p>Due to the sticking properties of elastomer O-rings being cooled down from high temperatures, operator/ integrator must ensure that the vacuum product has a similar temperature during opening of the valve as it had been for the previous closing. Otherwise, there is a high risk of damaging the O-ring.</p>

6 Trouble shooting

6.1 Warnings




A warning does not lead to an interruption of valve operation.

Location: CPA/Parameters: System.Services

Parameter	Description		
Warning Bitmap	Bit	Hex	Description
	0	1	No learn data available for adaptive control
	1	2	Position indicator signal of the external isolation valve incorrect.
	2	4	No Sensor Active
	3	8	PFO Not Ready
	4	16	Cluster Slave Offline
	6	40	Fieldbus Data Not Valid
	8	256	Compressed Air Not Falling when valve close
	9	512	Compressed Air Too Low
	10	1024	Compressed Air Too High
	12	4096	Fan stall alarm

Failure	Check	Action
Display does not light up	- 24 V power supply	- Connect valve to power supply according to 'Power, ground and sensor connection' and make sure that power supply is working.
Remote operation does not work	- Local operation via service port active	- Switch to remote or locked operation Refer to 'Remote and local operation'
	- Safety mode active Check for S on display	- Check 'Drive Power Enable Switch' Refer to 'Power, ground and sensor connection'
	- Interlock mode active Check for I on display	- Check Digital Input Refer to 'Power connector IO' → 'Digital Input'
POSITION CONTROL does not work	- Safety mode active Check for S on display	- Check 'Drive Power Enable Switch' Refer to 'Power, ground and sensor connection'
	- Interlock mode active Check for I on display	- Check Digital Input Refer to 'Power connector IO' → 'Digital Input'
	- POSITION CONTROL selected, check for A on display?	- Select POSITION CONTROL mode. Refer to 'Control Mode' in 'EtherCAT' interface
Pressure reading is wrong	- Sensor connection	- Refer to 'Power, ground and sensor connection'
Pressure reading is negative	- ZERO done?	- Perform ZERO when base pressure is reached. Refer to 'Pressure Sensor' → 'Zero Adjust'
	- Does sensor power supply provide enough power for sensor(s)?	- Verify sensor supply voltage.
ZERO does not work	- ZERO disabled?	- Enable ZERO. Refer to 'Pressure Sensor' → 'Zero Adjust'
	- Sensor voltage shifting?	- Wait until sensor does not shift any more before Performing ZERO.
Pressure is not '0' after ZERO	- System pumped to base pressure?	- OPEN VALVE and bring chamber to base pressure before performing ZERO.
	- Sensor offset voltage exceeds ±1.4V	- Adjust the offset direct at the sensor - Check function of the sensor.
PRESSURE CONTROL does not work	- PRESSURE CONTROL selected, check for P on display?	- Select PRESSURE CONTROL mode. Refer to 'Control Mode' in 'EtherCAT' interface
	- LEARN done?	- Perform LEARN. Refer to 'Pressure control' → 'Adaptive algorithm' → 'Learn'
	- Sensor signal ok?	- Refer to 'Pressure Sensor'
	- Pressure control setup done	- Refer to 'Pressure control'
PRESSURE CONTROL not optimal	- LEARN successfully done?	- Perform LEARN. Check 'Status' and 'Warning Info' in 'Pressure control' → 'Adaptive algorithm' → 'Learn'
	- ZERO performed before LEARN?	- Perform ZERO then repeat LEARN. Refer to 'Pressure Sensor' → 'Zero Adjust'
	- Was gas flow stable during LEARN?	- Repeat LEARN with stable gas flow. Refer to 'Pressure control' → 'Adaptive algorithm' → 'Learn'
	- Tuning done?	- Tune valve for application. Refer to the tuning sections in 'Pressure Control'
	- Is sensor range suited for application?	- Use a sensor with suitable range (controlled pressure should be >3% and < 98% of sensor full scale).
	- Noise on sensor signal?	- Make sure a shielded sensor cable is used.


6.2 Errors

 If valve is in Control Mode Error, movement is no longer possible.

The following parameters provide information about the cause of the error:

Location: CPA/Parameters: System.Services

Parameter	Description
Error Bitmap	Information about the types of errors. Details below.
Error Number	Information about the error component. Details below. Also shown on the controller display when active.
Error Code	Information about the different error states. Details below. Also shown on the controller display when active.

 If you need any further information, please contact one of our service centers. You will find the addresses on our website: www.vatvalve.com

The following information is required for VAT to analyze the error case:

- Diagnostic File: CPA → Tools → Diagnostic File
- Load Error Data: CPA → Tools → Trace Log → Mode Load Error Data → Start

6.2.1 Error Recovery

To leave the error state, the **Error Recovery** or **Restart Controller** can be used:

Location: CPA/Parameters: System.Services

Parameter	Description
Restart Controller	Emulates a power cycle of the valve
Error Recovery	Attempts to reset the Control Mode Error without restarting the valves

 Create a diagnostic file before recovery or restart if the error is to be analyzed by VAT

6.2.2 Error Bitmap

Parameter	Description		
Error Bitmap	Bit	Hex	Description
	0	1	Homing Position Error
	1	2	Homing Not Running
	2	4	Homing Error State
	3	8	Operation Position Error
	4	10	Operation Not Running
	5	20	Operation Error State
	12	1000	Other Component
	30	40000000	General
	31	80000000	Internal

6.2.3 Error Number



Error numbers are three-digit decimal numbers (**xyz**) whereas:

x = component	y = mode	z = error type
1 = All Motor Units 2 = Motor Unit 1 3 = Motor Unit 2 4 = Motor Unit 3 8 = Other	0 = Homing 2 = Operation Mode 8 = Other	0 = Position Error ¹⁾ 1 = Not running: No communication with component x 2 = Error State: component x is running but in Status Error 8 = Other

6.2.4 Error Code

¹⁾ Mechanical movement problem:

- Check for differential pressure
- Remove foreign object in movement area
- Eliminate tight movement
- Repair mechanical failure

Code	Description	Solution
1	No valve connected	Connect valve controller to the valve
2	Nonvolatile memory failure	Replace valve controller
3	Analog digital converter of sensor input failure	Replace valve controller
4	Initialization of motion controller failed	Wrong motion controller firmware version → Update motion controller firmware
5	Encoder index pulse not found	<ul style="list-style-type: none"> • ¹⁾ • Encoder failure • O-Ring sticking
6	Initialization of interface module failed	<ul style="list-style-type: none"> • Fieldbus: Valve firmware does not support interface type → Update valve firmware • Wrong interface firmware version → Update interface firmware
7	Initialization of external drive EEPROM failed	Check cables
10	Closing position can't be reached	¹⁾
11	Homing position can't be reached	<ul style="list-style-type: none"> • ¹⁾ • Plate not mounted
12	Motion controller: Internal voltage error	Check power supply
13	Motion controller: Internal error temperature	Check for a heat accumulation
14	Motion controller: Unexpected behavior	Contact vat support <ul style="list-style-type: none"> • Axis inverted • Encoder not connected • Break not released
15	Motion controller: Target position can't be reached	<ul style="list-style-type: none"> • ¹⁾ • Current Settings
16	Motion controller: Position minimal conductance cannot be reached	<ul style="list-style-type: none"> • ¹⁾ • Check Plate and Seal ring • Check Parameter "Isolation Position Enter [r]"
17	Motion controller: Position to push back the Differential Plate cannot be reached	<ul style="list-style-type: none"> • ¹⁾ • Check Different Plate • Check Parameter "Differential Plate Push Back Position [r]"
18	Motion controller: Minimal isolation position cannot be reached	<ul style="list-style-type: none"> • ¹⁾ • Check Plate and Seal ring • Check Parameter "Isolation Position [r]"
20	Break slippery detected	Replace actuator

Code	Description	Solution
30	SFV: Motion controller failure in master-slave communication	Contact vat support
40	Compressed air error	Check compressed air
42	Power supply, low voltage detected	Check if power supply is ok and is able to deliver needed power
96	SFV: Position deviation axis1 to axis2 at homing procedure	<ul style="list-style-type: none"> • ¹⁾ • O-Ring sticking
97	SFV: Position deviation axis1 to axis2 at operating	¹⁾
98	Position error during closing procedure	¹⁾
99	Position error at operating	¹⁾
200	Valve configuration error, not possible to operate the valve with these configuration	Contact VAT support
701	Wrong ident code axis 1	Check wiring
702	Wrong ident code axis 2	
703	Wrong ident code axis 2 AND axis 1	
704	Wrong ident code axis 3	
705	Wrong ident code axis 3 AND axis 1	
706	Wrong ident code axis 3 AND axis 2	
707	Wrong ident code axis 3 AND axis 2 AND axis 1	
707	Do not operating mode active	

6.3 Troubleshooting List

Failure	Check	Action
Display does not light up	- 24 V power supply	- Connect valve to power supply according to 'Power, ground and sensor connection' and make sure that power supply is working.
Remote operation does not work	- Local operation via service port active	- Switch to remote or locked operation Refer to 'Remote and local operation'
	- Safety mode active Check for S on display	- Check 'Drive Power Enable Switch' Refer to 'Power, ground and sensor connection'
POSITION CONTROL does not work	- Interlock mode active Check for I on display	- Check Digital Input Refer to 'Power connector IO' → 'Digital Input'
	- Safety mode active Check for S on display	- Check 'Drive Power Enable Switch' Refer to 'Power, ground and sensor connection'
	- Interlock mode active Check for I on display	- Check Digital Input Refer to 'Power connector IO' → 'Digital Input'
Pressure reading is wrong Pressure reading is negative	- Safety mode active check for A on display?	- Select POSITION CONTROL mode. Refer to 'Control Mode' in 'EtherCAT' interface
	- Sensor connection	- Refer to 'Power, ground and sensor connection'
ZERO does not work	- ZERO done?	- Perform ZERO when base pressure is reached. Refer to 'Pressure Sensor' → 'Zero Adjust'
	- Does sensor power supply provide enough power for sensor(s)?	- Verify sensor supply voltage.
ZERO does not work	- ZERO disabled?	- Enable ZERO. Refer to 'Pressure Sensor' → 'Zero Adjust'
	- Sensor voltage shifting?	- Wait until sensor does not shift any more before Performing ZERO.
Pressure is not '0' after ZERO	- System pumped to base pressure?	- OPEN VALVE and bring chamber to base pressure before performing ZERO.
	- Sensor offset voltage exceeds ±1.4V	- Adjust the offset direct at the sensor - Check function of the sensor.
PRESSURE CONTROL does not work	- PRESSURE CONTROL selected, check for P on display?	- Select PRESSURE CONTROL mode. Refer to 'Control Mode' in 'EtherCAT' interface
	- LEARN done?	- Perform LEARN. Refer to 'Pressure control' → 'Adaptive algorithm' → 'Learn'
	- Sensor signal ok?	- Refer to 'Pressure Sensor'
	- Pressure control setup done	- Refer to 'Pressure control'
PRESSURE CONTROL not optimal	- LEARN successfully done?	- Perform LEARN. Check 'Status' and 'Warning Info' in 'Pressure control' → 'Adaptive algorithm' → 'Learn'
	- ZERO performed before LEARN?	- Perform ZERO then repeat LEARN. Refer to 'Pressure Sensor' → 'Zero Adjust'
	- Was gas flow stable during LEARN?	- Repeat LEARN with stable gas flow. Refer to 'Pressure control' → 'Adaptive algorithm' → 'Learn'
	- Tuning done?	- Tune valve for application. Refer to the tuning sections in 'Pressure Control'
	- Is sensor range suited for application?	- Use a sensor with suitable range (controlled pressure should be >3% and < 98% of sensor full scale).
	- Noise on sensor signal?	- Make sure a shielded sensor cable is used.

7 Maintenance

	<p style="text-align: center;">WARNING</p> <p>Unqualified personnel Inappropriate handling may cause serious injury or property damage. Only qualified personnel are allowed to carry out the described work.</p>
	<p style="text-align: center;">WARNING</p> <p>Valve opening Risk of serious injury. Human body parts must be kept out of the valve opening and away from moving parts. Disconnect power on controller before doing any work.</p>
	<p style="text-align: center;">CAUTION</p> <p>Hot valve Heated valve may result in minor or moderate injury. Do not touch valve and heating device during operation. Once heating is switched off (valve and system) await until the valve is cooled down complete before doing any work.</p>
	<p style="text-align: center;">NOTICE</p> <p>Contamination Gate and other parts of the valve must be protected from contamination. Always wear clean room gloves when handling the valve.</p>

7.1 Maintenance intervals

Under clean operating conditions, the valve does not require any maintenance during the specified cycle life. Contamination from the process may influence the function and requires more frequent maintenance.

Before carrying out any maintenance, please contact VAT. It has to be individually decided whether the maintenance can be performed by the customer or has to be carried out by VAT. Please write down the fabrication number of the valve before contact VAT. Refer to chapter «Identification of product» for fabrication number.

7.2 Maintenance procedures

Two maintenance procedures are defined for this valve. This are:

- Replacement of shaft feedthrough seals and valve cleaning. Refer to chapter: «Replacement of rotary feedthrough».
- Replacement of Option board. Refer to chapter: «Replacement of Option board»



Required frequency of cleaning and replacement of seals is depending on process conditions.

VAT can give the following recommendations for preventive maintenance:

Replacement of	unheated ¹⁾	heated ≤ 80 °C ¹⁾	heated > 80 °C ¹⁾
Rotary feedthrough seals	2'000'000 cycles	6 months but max. 2'000'000 cycles	3 months but max. 2'000'000 cycles



¹⁾ Those figures are reference values for clean conditions under various temperatures. These values do not include any impact of the process. Therefore preventive maintenance schedule has finally to be checked for the actual process conditions.



Below pictures are sample pictures. Although there may be different variants of the valve, the assembly procedure stays the same.



ISO-KF with heating


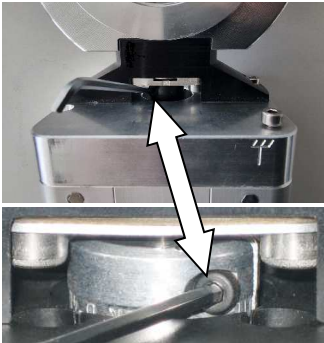








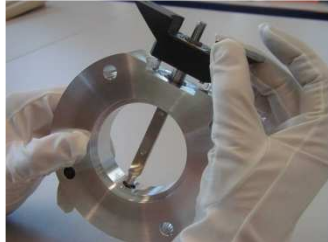



ISO-F


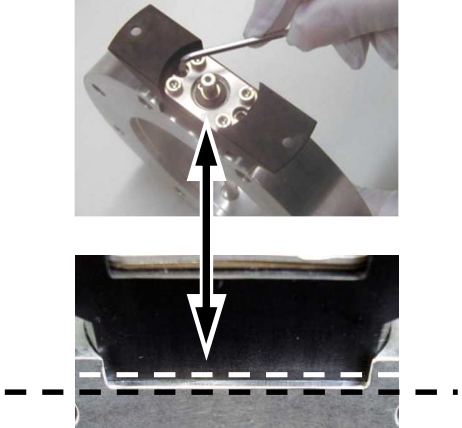
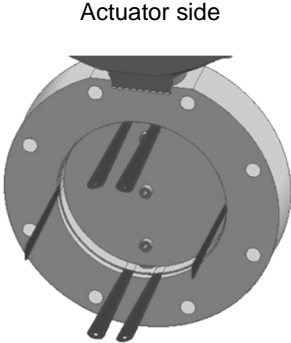


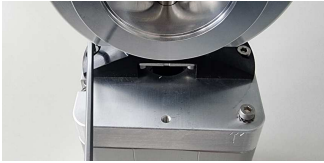7.2.1 Replacement of shaft feedthrough seals and valve cleaning

7.2.1.1 Required tools


- Allen Wrench 2 mm / 2.5mm
- Clean room wipes, isopropyl alcohol
- Allen Wrench 3 mm
- Vacuum grease
- Feeler gauge


Description	Required tool	
<ol style="list-style-type: none"> 1. Vent vacuum system on both sides of the valve. 2. Make sure the valve is in closed position 3. Disconnect electrical POWER connector at valve and remove valve from vacuum system. <p> Take care not to damage sealing surface! Do not move the plate by hands when control and actuating unit is installed.</p>		
<ol style="list-style-type: none"> 4. Unfasten clamp coupling 		Allen Wrench: steel coupling 2.5 mm
<ol style="list-style-type: none"> 5. Unfasten the 2 (DN-25-50) or 4 (DN 63-320) connection bolts and separate both parts. <p> Valve size DN 160 (6") and bigger require a shortened wrench. For ordering number refer to «Spare parts and accessories».</p> <p>12 mm </p>		Allen Wrench 3 mm
<ol style="list-style-type: none"> 6. Unfasten screws and remove plate from shaft. 		Allen Wrench 3 mm

Description		Required tool
<p>7. Unfasten alternately the 2 mounting screws little by little.</p> <p> If only one screw is fasten / unfasten, the mechanical unit will be damaged. Max. difference should be less than 1 turn or 0.5 turn of the screws.</p>		Allen Wrench 3 mm
<p>8. Remove mechanical unit and clean shaft.</p>		
<p>9. Remove o-rings. 10. Clean shaft feedthrough and valve body.</p>		Clean room wipes a little soaked with isopropyl alcohol
<p>11. Lubricate seal contact surface of valve body with a slight film of vacuum grease (0.025 ml). 12. Lubricate each o-ring with a slight film of vacuum grease (0.0125 ml).</p>		
<p>13. Lubricate seal contact surface of shaft with a slight film of vacuum grease (0.0125 ml). 14. Slide both o-rings onto shaft till the end. 15. Deposit 0.0375 ml vacuum grease between the o-rings 16. Clean shaft from vacuum grease.</p>		Vacuum grease Clean room wipes

Description		Required tool
17. Assemble mechanical unit in reverse order as disassembled (steps 6 to 5). 18. Align pedestal parallel to valve body and tighten the 2 mounting screws with 2.5 Nm  Make sure the pedestal is aligned to be parallel with the valve body		Allen Wrench 3mm 
19. Center plate.		Allen Wrench 3 mm Adequate feeler gauge
Size	Feeler gauge mm Unheated AL/ steel body Heated-AL body	
25	0.04 0.06	
40	0.04 0.06	
50	0.04 0.06	
63	0.04 0.06	
80	0.06 0.08	
100	0.06 0.08	
160	0.08 0.10	
200	0.08 0.10	
250	0.10 0.12	
320	0.12 0.14	
20. Tighten plate screws with		
Size	Nm	
25	1.1	
40	2.5	
>=50	2.5	
21. Assemble control and actuating unit to valve unit. Tighten mounting screws adequately.		Allen Wrench 3mm 
22. Tighten clamp coupling: <ul style="list-style-type: none"> with steel coupling 2.2 Nm 		Allen Wrench: steel coupling 2.5 mm 
23. Reinstall valve into vacuum system according to chapter «Installation».		

7.2.2 Replacement of Option board

	NOTICE
	<p>Electrostatic discharge</p> <p>Electronic components could be damaged.</p> <p>All work on the control and actuating unit has to be done under ESD protected environment to prevent electronic components from damage.</p>

	NOTICE
	<p>Burned connector pins (spark)</p> <p>Connector pins or electronic parts could be damaged, if plugged and unplugged under power.</p> <p>Do not plug or unplug connectors under power.</p>

The option board may or may not be equipped in your valve depending on the order. Refer to page 1 of this manual to check valve version. This board includes the optional modules for the valve which are:

- ± 15 VDC sensor power supply (SPS)
- Power failure option (PFO)

It is available in 3 versions. These are:

- SPS module only
- PFO module only
- SPS and PFO module


The modules may be retrofitted or replaced easily. The battery lifetime of the PFO module depends on the ambient temperature (see below). To assure PFO function the option board must be replaced after battery life has expired. For ordering number of the modules refer to chapter «Spare parts».

7.2.2.1 Durability of power fail battery

The curves in the graph show the estimated life of Ultra Cap PFO in the worst condition (max. sensor load = 1 A, valve heating temperature = 150 °C).

If the SPS is not fully loaded (< 1 A) or heating temperature of valve body is lower than 150 °C, the corresponding life time curve will be somewhere in between the upper and the lower curve.


Therefore please determine the equivalent maintenance period for replacing the Ultra Cap battery (Option board).

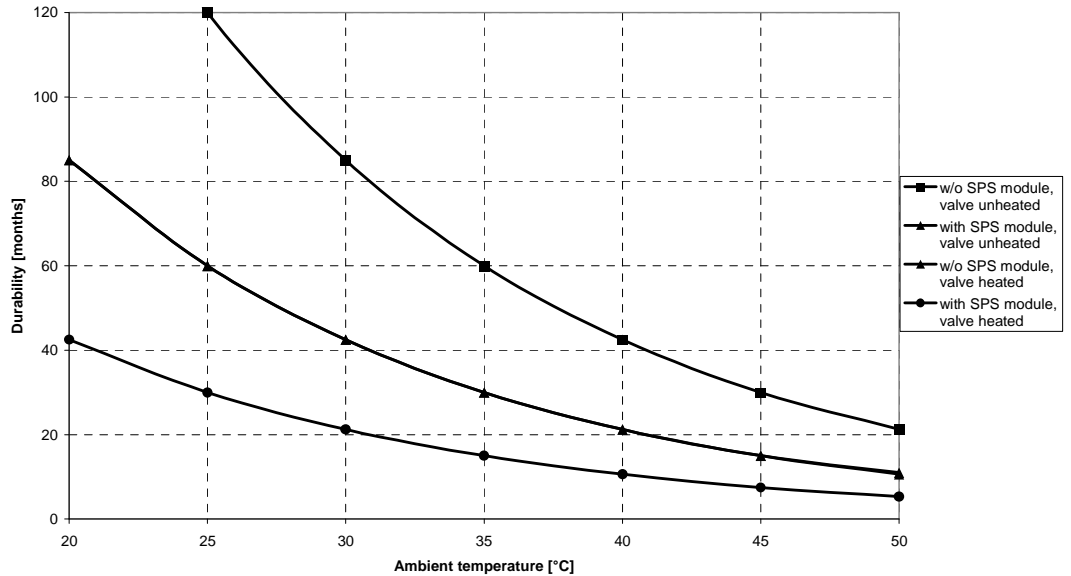

This graph shows estimated life of Ultra Cap PFO for reference and not as guaranteed value.

7.2.2.2 Retrofit / replacement procedure

View on control and actuating unit:

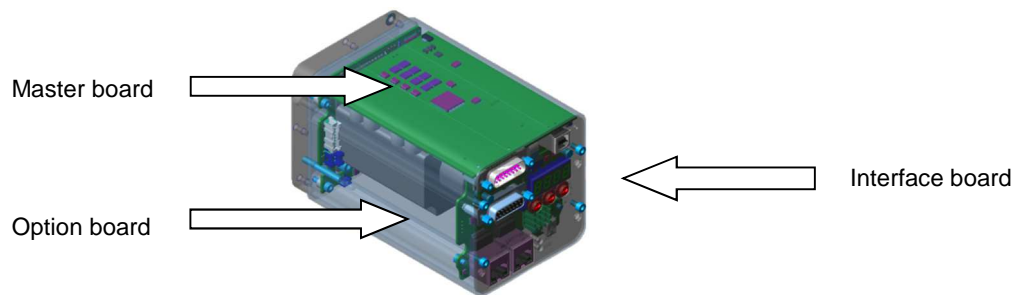

All boards have a fixed position into control and actuating unit. It is not possible to fit a board in other position as shown in picture above! Do not try out other positions, which may destroy the socket of boards!





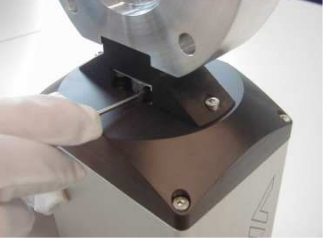
7.2.2.3 Required tools

- Allen Wrench 2 mm / 2.5mm
- Allen Wrench 3 mm



If you need any further information, please contact one of our service centers. You can find the addresses on our website: www.vatvalve.com.

Description		Required tool
Make sure that the valve is in closed position 1. Vent vacuum system, disconnect electrical connections and remove valve from vacuum system. If you only replace control and actuating unit, the valve can remain in the system. Take care not to damage sealing surface! Attention! Do not move the plate by hands when control an actuating unit is installed.		Depending on flange screws
2. Unfasten clamp coupling		Allen Wrench: steel coupling 2.5 mm
3. Unfasten the 4 connection bolts and separate both parts. Valve size DN 160 (6") and bigger require a shortened wrench. For ordering number refer to «Spare parts and accessories». 12 mm		Allen Wrench 3 mm

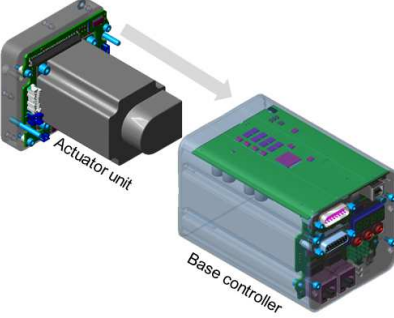Description		Required tool
<p>4. Replacement of the option board / whole controller</p> <p>Unfasten the two bolts from bottom side and and dismount the controller from the actuator unit.</p> <p>The SPS/PFO option board has to be mounted/ dismounted from bottom side of the controller.</p> <p>The Controller and Interface board are fix connected and shall not be dismantled.</p> <p> you have to work on an ESD-protected working space</p> <p> If you need any further information, please contact one of our service centers. You can find the addresses on our website: www.vatvalve.com</p>		
<p>5. Assemble control and actuating unit to valve unit. Tighten mounting screws adequately.</p>		<p>Allen Wrench: 3mm</p>
<p>6. Tighten clamp coupling:</p> <ul style="list-style-type: none"> • with elastic coupling 1.1 Nm • with steel coupling 2.2 Nm 		<p>Allen Wrench: steel coupling 2.5 mm</p>
<p>7. Reinstall valve into vacuum system according to chapter «Installation».</p>		

8 Repairs

Repairs may only be carried out by the VAT service staff. In exceptional cases, the customer is allowed to carry out the repairs, but only with the prior consent of VAT.


Please contact one of our service centers. You will find the addresses on our website www.vatvalve.com.

8.1 FPR Service


The VAT customer service can refurbish the product or individual components for you. Wear-sensitive parts are replaced, and the guarantee on the replaced parts is extended.

- a) Select the desired Fixed Price Refurbishment service from our comprehensive service program for the refurbishment.
- b) Contact your assigned sales person or the nearest VAT service center to learn about the options for the product in question. www.vatvalve.com.

9 Dismounting and Storage

	⚠ WARNING
	<p>Unqualified personnel Inappropriate handling may cause serious injury or property damage. Only qualified personnel are allowed to carry out the described work.</p>


9.1 Dismounting


	NOTICE
	<p>Contamination Gate and other parts of the valve must be protected from contamination. Always wear clean room gloves when handling the valve.</p>

	NOTICE
	<p>Valve in open position Valve body may become damaged if valve gate is in open position. Move valve gate to the closed position before dismounting the valve.</p>

4. Close the valve
5. For dismounting the valve please follow the instructions of chapter: «Installation», however in reverse order.

9.2 Storage

NOTICE	
	<p>Wrong storage</p> <p>Inappropriate temperatures and humidity may cause damage to the product.</p> <p>Valve must be stored at:</p> <ul style="list-style-type: none">– relative humidity between 10% and 70%– temperature between +10 °C and +50 °C– non-condensing environment

NOTICE	
	<p>Inappropriate packaging</p> <p>Product may get damaged if inappropriate packaging material is used.</p> <p>Always use the original packaging material and handle product with care.</p>

1. Clean / decontaminate valve.
2. Cover all valve openings with a protective foil.
3. Pack valve appropriately, by using the original packaging material.

10 Packaging and Transport

	⚠ WARNING
	<p>Unqualified personnel</p> <p>Inappropriate handling may cause serious injury or property damage. Only qualified personnel are allowed to carry out the described work.</p>


	⚠ WARNING
	<p>Harmful substances</p> <p>Risk of injury in case of contact with harmful substances. Remove harmful substances (e. g. toxic, caustic or microbiological ones) from valve before you return the valve to VAT.</p>

	NOTICE
	<p>Inappropriate packaging</p> <p>Product may get damaged if inappropriate packaging material is used. Always use the original packaging material and handle product with care.</p>



- When returning products to VAT, please fill out the VAT form «Declaration of Chemical Contamination of Vacuum Valves and Components» and send it to VAT in advance. The form can be downloaded from our website www.vatvalve.com (Section: Services – Aftersales).
- If products are radioactively contaminated, the VAT form «Contamination and Radiation Report» must be filled out. Please contact VAT in advance.
- If products are sent to VAT in contaminated condition, VAT will carry out the decontaminating procedure at the customer's expense.

10.1 Packaging


NOTICE	
	Valve in open position Valve mechanism may get damaged if valve is in open position. Make sure that the valve is closed.

1. Cover all valve openings with a protective foil.
2. Pack valve appropriately, by using the original packaging material.



VAT disclaims any liability for damages resulting from inappropriate packaging.

10.2 Transport

NOTICE	
	Inappropriate packaging Product may get damaged if inappropriate packaging material is used. Always use the original packaging material and handle product with care.



VAT disclaims any liability for damages resulting from inappropriate packaging.

11 Disposal

Observe the local regulations for disposal

	WARNING
	<p>Harmful substances Environmental pollution. Discard products and parts according to the local regulations.</p>

	WARNING
	<p>Unqualified personnel Inappropriate handling may cause serious injury or property damage. Only qualified personnel are allowed to carry out the disposal.</p>

	CAUTION
	<p>Risk of damage Indicates a hazardous situation which, if not avoided, may result in minor or moderate injury. A large number of diverse materials are used in the product. Some of them could cause human and machine damage in the case of improper handling.</p> <ul style="list-style-type: none"> • Observe local regulations in regard to waste disposal without fail. • Commission an authorized waste disposal company for the professional disposal of your waste.

	NOTICE
	<p>Improper disposal Some built-in materials can cause damage, if improperly handled. - When disposing, take into account all the different materials used</p>



- Hire an authorised waste disposal company to dispose of the waste in a professional manner.

The following list should help you to dismantle your product without making serious errors and to properly separate out the product scrap.

Material groups	Hazard level
non-ferrous metals	high
stainless steel	low
aluminum	low
plastics	medium
lubricants	high
electronic scrap	high
batteries	very high
cables and wires	medium
motors	medium
seals and rubber parts	high

12 Spare parts



NOTICE

Non-original spare parts

Non-original spare parts may cause damage to the product.
Use original spare parts from VAT only.



- Please specify the fabrication number of the product when you place an order for spare parts; see chapter: «Identification of product». This is to ensure that the appropriate spare parts are supplied.
- VAT makes a difference between spare parts that may be replaced by the customer and those that need to be replaced by the VAT service staff.
- The following table(s) contain spare parts that may be replaced by the customer. If you need any other spare parts, please contact one of our service centers. You will find the addresses on our website www.vatvalve.com.




For versions such as:

- other valve sizes
- heated valves
- valves made of hard anodized aluminum
- valves made of nickel coated aluminum
- valves made of stainless steel
- valves with JIS, ASA or CF-F flanges

spare parts ordering numbers are available on request.

12.1 ISO-KF for DN 25 – 50 mm

12.1.1 Drawing ISO-KF

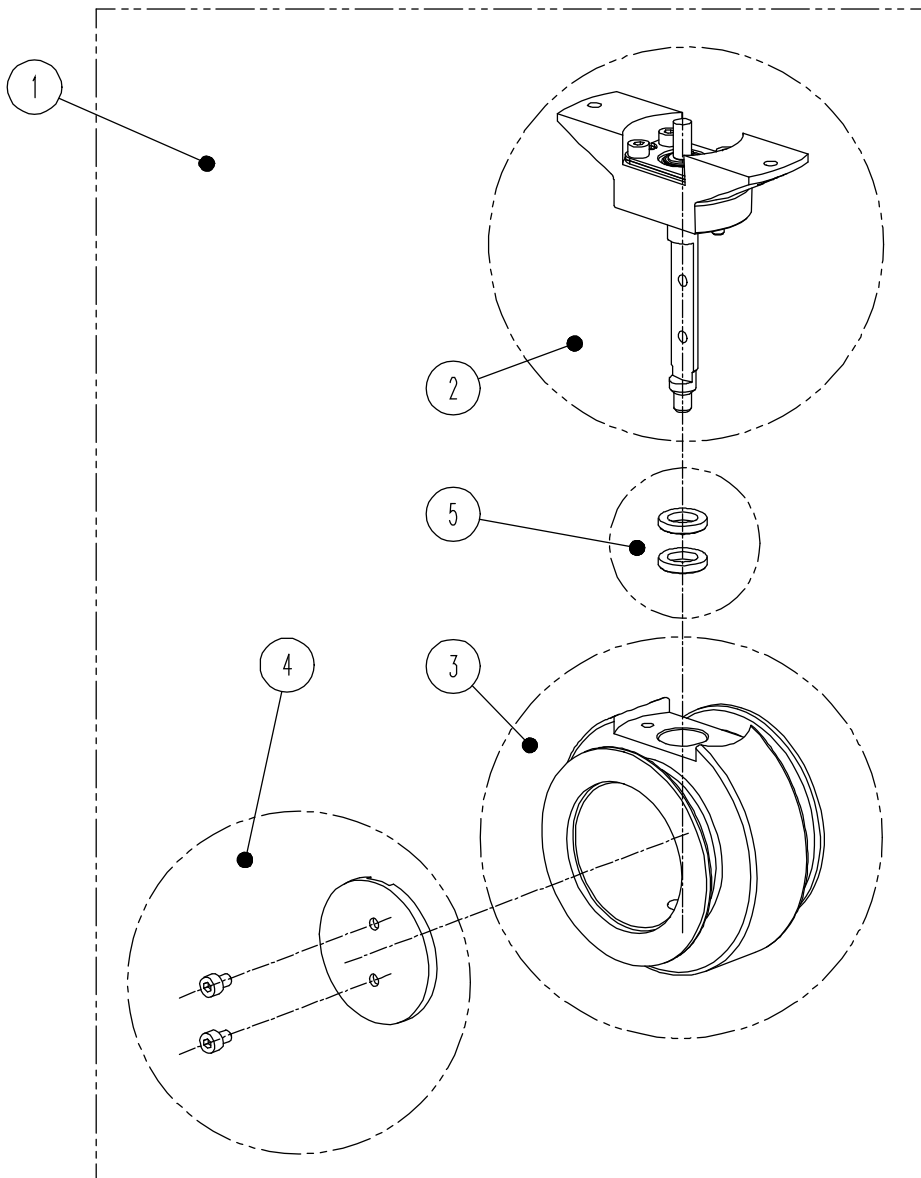

- 1 Body with mechanism
- 2 Shaft kit
- 3 Valve body
- 4 Plate kit
- 5 Shaft feedthrough seals



All "Items in below table" refer to this chapter «Drawing ISO-KF»

12.1.2 ISO-KF valve unit - aluminum blank, without heating

Item	Description			
	Valve size Product ordering number	DN 25 / 1" 61328 - KA .. ISO-KF	DN 40 / 1½" 61332 - KA .. ISO-KF	DN 50 / 2" 61334 - KA .. ISO-KF
1	Spare parts kit valve unit	488956	485726	486738
2	Spare parts kit mechanical unit	488946	471287	471292
3	Spare parts kit valve body	240574	232271	232272
4	Spare parts kit plate	253255	232276	232277
	Plate screws	361960 (2 pcs required)	353386 (2 pcs required)	353386 (2 pcs required)

12.1.3 ISO-KF valve unit – stainless steel, without heating


Item	Description			
	Valve size Product ordering number	DN 25 / 1" 61328 - KE .. ISO-KF	DN 40 / 1½" 61332 - KE .. ISO-KF	DN 50 / 2" 61334 - KE .. ISO-KF
1	Spare parts kit valve unit	489057	486772	485723
2	Spare parts kit mechanical unit	488946	471287	471292
3	Spare parts kit valve body	342558	243089	237850
4	Spare parts kit plate	342563	243090	239549
	Plate screws	361960 (2 pcs required)	353386 (2 pcs required)	353386 (2 pcs required)

12.1.4 Seals and grease

Item	Description		
	Valve size Product ordering number	All sizes 613	
5	Vacuum seal kit	VITON®	237235 (2x N-5100-204)
		Others	on request
	Vacuum grease syringe		206792 (2ml), 206793 (5ml)

12.2 ISO-F for DN 63 – 320 mm

12.2.1 Drawing ISO-F

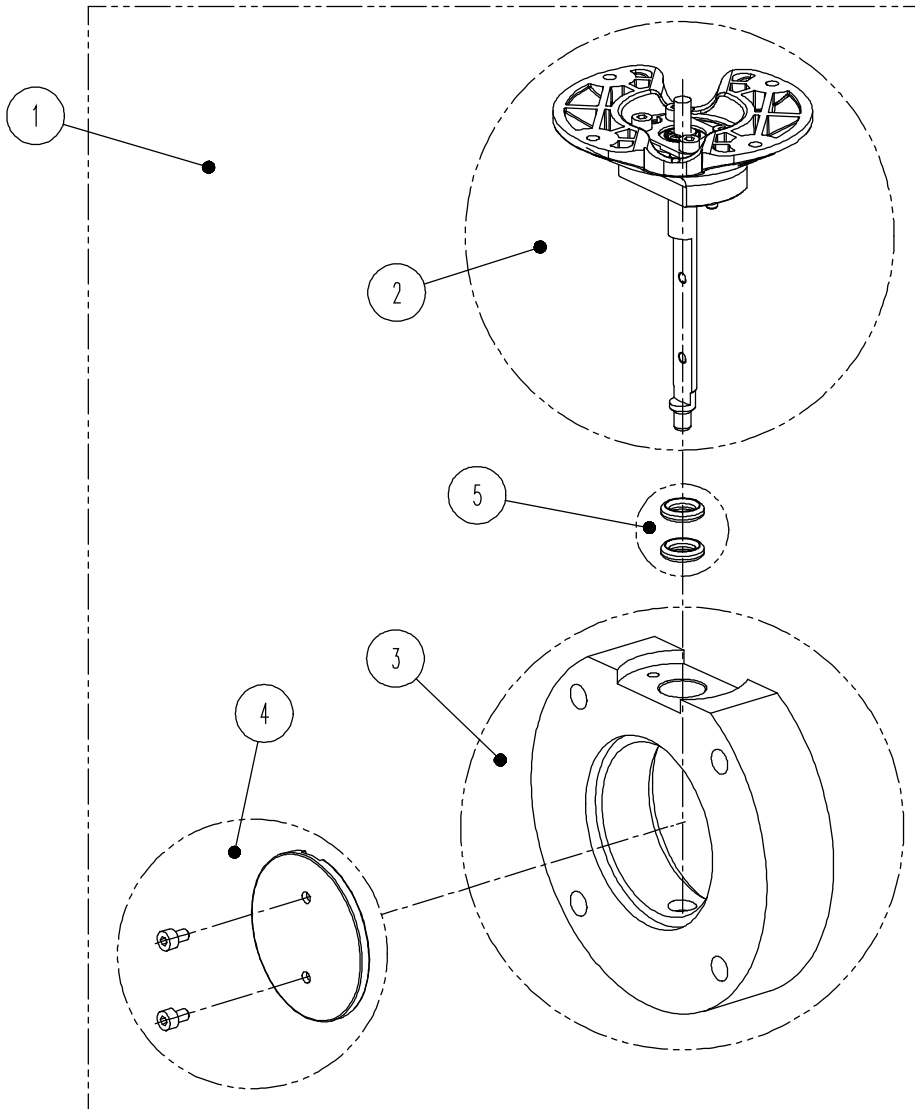

- 1 Body with mechanism
- 2 Shaft kit
- 3 Valve body
- 4 Plate kit
- 5 Shaft feedthrough seals



All "Items in below table" refer to this chapter «Drawing ISO-F»

12.2.2 ISO-F valve unit - aluminum blank, without heating

Item	Description							
	Valve size Product ordering number	DN 63 / 2½"	DN 80 / 3"	DN 100 / 4"	DN 160 / 6"	DN 200 / 8"	DN 250 / 10"	DN 320 / 12"
		61336-PA ..	61338-PA ..	61340-PA ..	61344-PA ..	61346-PA ..	61348-PA ..	61350-PA ..
1	Spare parts kit valve unit	490143	489471	490093	489026	491729	489827	249284
2	Spare parts kit mechanical unit	490144	489464	490094	489022	491728	489910	807298
3	Spare parts kit valve body	232273	232274	232275	243026	237716	241204	327111
4	Spare parts kit plate	232278	232279	232280	243028	237725	252046	327109
	Plate screws	353386 (2 pcs required)	353386 (3 pcs required)	353386 (3 pcs required)	353386 (3 pcs required)	353386 (3 pcs required)	353386 (3 pcs required)	353386 (3 pcs required)

12.2.3 ISO-F valve unit – stainless steel, without heating

Item	Description							
	Valve size Product ordering number	DN 63 / 2½"	DN 80 / 3"	DN 100 / 4"	DN 160 / 6"	DN 200 / 8"	DN 250 / 10"	DN 320 / 12"
		61336-PA ..	61338-PA ..	61340-PA ..	61344-PA ..	61346-PA ..	61348-PA ..	61350-PA ..
1	Spare parts kit valve unit	491837	491711	491749	491978	497131	502651	-
2	Spare parts kit mechanical unit	490144	489464	490094	489022	491728	489910	-
3	Spare parts kit valve body	252748	248433	252764	243026	252778	393073	-
4	Spare parts kit plate	252738	248463	252763	243028	244362	414211	-
	Plate screws	353386 (2 pcs required)	353386 (3 pcs required)	353386 (3 pcs required)	353386 (3 pcs required)	353386 (3 pcs required)	353386 (3 pcs required)	353386 (3 pcs required)

12.2.4 Seals and grease

Item	Description		
	Valve size		All sizes
	Product ordering number		613 .. -
5	Vacuum seal kit	VITON®	237235 (2x N-5100-204)
		Others	on request
	Vacuum grease syringe		206792 (2ml), 206793 (5ml)

12.3 Control unit and Accessories
12.3.1 Control and actuating unit

Description	Part number
Control and actuating unit	Too many to list. Please contact VAT.
Option board with SPS module (±15 VDC Sensor Power Supply)	858530
Option board with PFO module (Power Failure Option)	858529
Option board with SPS and PFO module	840512

12.3.2 Accessories

Description	Part number
24 VDC power supply unit (input: 100 – 240 VAC)	891528 (D-Sub15 connector)
Adapter cable for power supply with D-Sub9 connector	(735567) (D-Sub15 to D-Sub9)
Service cable (PC to valve Service connector)	809474 (USB A–B male-male)
Special Allen wrench (SW3) for disassembly and assembly	244873
O-ring removal tool	234859

12.3.3 Centering ring with VITON ® o-ring

Description				
Valve size		DN 25 / 1	DN 40 / 1½"	DN 50 / 2"
Product ordering number		61328 -	61332 -	61334 -
Centering ring with VITON ® o-ring (for ISO-KF and ISO- F installation only)	Aluminum	31028-KAZV-0001	31032-KAZV--0001	32034-KAZV-0001
	Stainless steel	31028-KEZV-0001	31032-KEZV-0001	32034-KEZV-0001

This page left blank intentionally.